



USER GUIDE

**cnVision
HUB FLEXr, HUB 360r, CLIENT
MAXr, CLIENT MINI, CLIENT
MICRO**

System Release 4.5.x



Accuracy

While reasonable efforts have been made to assure the accuracy of this document, Cambium Networks assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. Cambium reserves the right to make changes to any products described herein to improve reliability, function, or design, and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Cambium does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others. It is possible that this publication may contain references to, or information about Cambium products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Cambium intends to announce such Cambium products, programming, or services in your country.

Copyrights

This document, Cambium products, and 3rd Party software products described in this document may include or describe copyrighted Cambium and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Cambium, its licensors, and other 3rd Party supplied software certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Cambium, its licensors, or the 3rd Party software supplied material contained in the Cambium products described in this document may not be copied, reproduced, reverse engineered, distributed, merged or modified in any manner without the express written permission of Cambium. Furthermore, the purchase of Cambium products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Cambium or other 3rd Party supplied software, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.

Restrictions

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Cambium.

License Agreements

The software described in this document is the property of Cambium and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

High Risk Materials

Cambium and its supplier(s) specifically disclaim any express or implied warranty of fitness for any high risk activities or uses of its products including, but not limited to, the operation of nuclear facilities, aircraft navigation or aircraft communication systems, air traffic control, life support, or weapons systems ("High Risk Use"). Any High Risk Use is unauthorized, is made at your own risk and you shall be responsible for any and all losses, damage or claims arising out of any High Risk Use.

© 2020 Cambium Networks Limited. All Rights Reserved.

Contents

Safety and regulatory information.....	6
Important safety information	6
Important Regulatory Information	7
About This User Guide	9
General information.....	10
Contacting Cambium Networks	10
Purpose.....	10
Cross-references	10
Problems and warranty	11
Reporting problems.....	11
Security advice	12
Precautionary statements	13
Warning	13
Attention	13
Note	13
Caring for the environment	14
In EU countries.....	14
In non-EU countries	14
Chapter 1: Product description	15
Overview.....	16
cnVision Hardware Highlights.....	16
Typical Uses	18
Configuration Options	19
Point-to-Point.....	19
Point-to-Multipoint	19
Wireless operation	20
Radar avoidance.....	20
Encryption	20
Country codes.....	20
System management	22
Management agent	22

Web server	22
SNMP	22
Network Time Protocol (NTP)	23
Account Management	23
Camera Management	23
Software upgrade	23
System Hardware	25
cnVision Hubs and Clients	25
Distance Coverage	28
cnVision Hubs and Clients Portfolio	29
cnVision Device Part Numbers	30
cnVision Package Contents	31
Chapter 3: System planning	39
Line of Sight (LOS), Near Line of Sight (nLOS), No Line of Sight (NLOS)	41
Bandwidth Consideration	43
Radio spectrum planning	45
Regulatory compliance	45
Regulatory limits	45
Conforming to the limits	45
Available spectrum	46
Channel bandwidth	46
Chapter 4: System Installation	47
Safety	48
Safety precautions	48
RF exposure near the antenna	48
Minimum separation distances	48
Power lines	48
Working at heights	48
PSU	49
Powering down before servicing	49
Primary disconnect device	49
External cables	49
Pre-Installation Preparation	50
Configuring the Hub - Quick Start	54
Configuring the Client - Quick Start	58

Configuring ONVIF Settings on Cameras.....	62
Site installation	64
Mounting Instructions	65
Pole or Tower Mount Guidelines.....	65
Wall or Roof Mount Guidelines.....	69
Establishing Links	73
Chapter 5: Using the Web User Interface	75
Toolbar Menu.....	76
Using the Navigation Menu Options	77
Status page	78
Quick Start.....	78
Configuration menu	79
Monitor menu	94
Tools menu.....	108
VMS Integration.....	118
Chapter 6: Configuring VMS Integration.....	120
Events and Alarms	123
Configuring Hubs and Clients for VMS Integration	124
Configuring cnVision Devices in Genetec VMS.....	126
Configuring Event Messages	131
Configuring Alarms	133
Linking Event Messages to Alarms	137
Configuring Device Statistics Tiles in Config Tool	141
Configuring Device Statistics Tile in Security Desk	145
Configuring Device Statistics Tile in Wisenet Wave VMS.....	147
Configuring cnVision Device in Milestone XProtect VMS	151
Configuring Event Messages in Milestone XProtect VMS.....	156
Configuring Event Messages	156
Linking Event Messages to Alarms	157
Configuring Device Statistics Tile in Milestone XProtect VMS	162
Configuring Device Statistics Tile in NX Witness VMS	164
Chapter 7: General Maintenance and Troubleshooting.....	167
General Planning for Troubleshooting	168
Upgrading the Hub/Client software.....	169
Video Issues.....	170

Camera feed is missing in the VMS	170
Link quality has degraded	173
Video is pixelated or skipping frames in VMS.....	175
Camera is connected but not detected in cnVision	176
Camera is detected in cnVision but can't open a video stream	177
Testing hardware.....	178
Device has stopped transmitting or receiving.....	178
Checking the power supply LED.....	178
Power LED is off.....	178
Ethernet LED is off	178
Test Ethernet packet errors reported by the device	179
Test Ethernet packet errors reported by managed switch or router	179
The device has lost or does not establish radio connectivity.....	179
Using Ping and Traceroute Utilities	181
Test ping for packet loss.....	181
Using Traceroute Utility	182
Resetting cnVision Devices to factory defaults.....	184
Chapter 8: Legal and reference information	186
Cambium Networks end user license agreement	187
Acceptance of this agreement	187
Definitions	187
Grant of license.....	187
Conditions of use	187
Title and restrictions.....	188
Confidentiality	188
Right to use Cambium's name	189
Transfer.....	189
Updates	189
Maintenance.....	189
Disclaimer	190
Limitation of liability	190
U.S. government.....	190
Term of license.....	191
Governing law	191
Assignment	191
Survival of provisions	191

Entire agreement	191
Third party software	191
Source Code Requests.....	191
Hardware warranty	268
Limit of liability	269
System threshold, output power and link loss	270
Compliance with safety standards.....	271
Electrical safety compliance	271
Electromagnetic compatibility (EMC) compliance	271
Human exposure to radio frequency energy	272
Compliance with radio regulations.....	279
Type approvals	279
FCC and ETSI compliance testing	279
Notifications	281
5.1 GHz regulatory compliance	281
5.8 GHz regulatory compliance	284
Product Specifications	286
Product Specifications	286
Glossary.....	287

Safety and regulatory information

This section describes important safety and regulatory guidelines that must be observed by personnel installing or operating cnVision equipment.

Important safety information



Warning To prevent loss of life or physical injury, observe the safety guidelines in this section.

Power lines

Exercise extreme care when working near power lines.

Working at heights

Exercise extreme care when working at heights.

Grounding and protective earth

cnVision devices and mounting structures must be properly grounded to protect against lightning. It is the user's responsibility to install the equipment in accordance with national regulations. In the USA, follow Section 810 of the *National Electric Code, ANSI/NFPA No.70-1984* (USA). In Canada, follow Section 54 of the *Canadian Electrical Code*. These codes describe correct installation procedures for grounding the outdoor unit, mast, lead-in wire and discharge unit, size of grounding conductors and connection requirements for grounding electrodes. Other regulations may apply in different countries and therefore it is recommended that installation be contracted to a professional installer.

Powering down before servicing

Always power down and unplug the equipment before servicing.

Primary disconnect device

The cnVision devices' power supply is the primary disconnect device.

External cables

Safety may be compromised if outdoor rated cables are not used for connections that will be exposed to the outdoor environment.

RF exposure near the antenna

Strong radio frequency (RF) fields will be present close to the antenna when the transmitter is on. Always turn off the power to the cnVision devices before undertaking maintenance activities in front of the antenna.

Minimum separation distances

Install the cnVision devices so as to provide and maintain the minimum separation distances from all persons.

The minimum separation distances for each frequency variant are specified in [Calculated distances and power compliance margins](#).

Important Regulatory Information

The cnVision product is certified as an unlicensed device in frequency bands where it is not allowed to cause interference to licensed services (called primary users of the bands).

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radar avoidance

In countries where radar systems are the primary band users, the regulators have mandated special requirements to protect these systems from interference caused by unlicensed devices. Unlicensed devices must detect and avoid co-channel operation with radar systems.

The cnVision devices provide detect and avoid functionality for countries and frequency bands requiring protection for radar systems.

Installers and users must meet all local regulatory requirements for radar detection. To meet these requirements, users must set the correct country code during the commissioning of the cnVision equipment. If this is not done, installers and users may be liable to civil and criminal penalties.

Contact the Cambium helpdesk if more guidance is required.

Specific expertise and training required for professional installers

To ensure that the cnVision devices are installed and configured in compliance with the requirements of Industry Canada and the FCC, installers must have the radio engineering skills and training described in this section. This is particularly important when installing and configuring cnVision system for operation in the 5 GHz band (5150 – 5250 MHz – FCC only, 5250 – 5350 MHz, 5470 – 5725 MHz and 5725 – 5850 MHz).

Ethernet networking skills

The installer must have the ability to configure IP addressing on a PC and to set up and control products using a web browser interface.

Lightning protection

To protect outdoor radio installations from the impact of lightning strikes, the installer must be familiar with the normal procedures for site selection, bonding, and grounding. Installation guidelines for the cnVision can be found in section [Site planning](#).

Training

The installer needs to have basic competence in radio and IP network installation. The specific requirements applicable to the cnVision must be gained by reading this user guide and by performing sample setups at a base workshop before live installations.

About This User Guide

This guide describes the planning, installation, configuration and operation of the Cambium cnVision Series of point-to-multipoint and point-to-point wireless-based Video Surveillance systems. It is intended for use by the system designer, system installer and system administrator.

For radio network design, see:

- [Product description](#)
- [System hardware](#)
- [Site planning](#)
- [Site Installation](#)
- [Using the Web User Interface](#)
- [Configuring VMS Integration](#)
- [General maintenance and troubleshooting](#)
- [Legal and reference information](#)

General information

Contacting Cambium Networks

Support website:	http://www.cambiumnetworks.com/support
Main website:	http://www.cambiumnetworks.com
Sales enquiries:	solutions@cambiumnetworks.com
Address:	Cambium Networks Limited Unit B2, Linhay Business Park, Eastern Road Ashburton, United Kingdom, TQ13 7UP

Purpose

Cambium Networks cnVision documents are intended to instruct and assist personnel in the operation, installation, and maintenance of the Cambium cnVision equipment and ancillary devices. It is recommended that all personnel engaged in such activities be properly trained.

Cambium disclaims all liability whatsoever, implied or expressed, for any risk of damage, loss or reduction in system performance arising directly or indirectly out of the failure of the customer, or anyone acting on the customer's behalf, to abide by the instructions, system parameters, or recommendations made in this document.

Cross-references

References to external publications are shown in *italics*. Other cross-references, emphasized in [blue text](#) in electronic versions, are active links to the references.

This document is divided into numbered chapters that are divided into sections. Sections are not numbered but are individually named at the top of each page, and are listed in the table of contents.

Feedback

We appreciate feedback from the users of our documents. This includes feedback on the structure, content, accuracy, or completeness of our documents. Send feedback to <https://support@cambiumnetworks.com>.

Problems and warranty

Reporting problems

At Cambium Networks, we know what it takes to keep a growing network running optimally. We provide multiple layers of support including training, online documentation, technical support, information-sharing with an experienced community of users, software downloads, warranty services, and repair.

Through the Cambium Support Center portal at <https://support.cambiumnetworks.com/> you can:

- Submit support requests
- Submit RMA request
- View support global contact numbers

Additional information including field service bulletins, license key information, warranty details, security advisories, Cambium Care program descriptions, regional codes for PTP solutions, and compliance requirements can be viewed at <https://www.cambiumnetworks.com/support/>.

Repair and service

If unit failure is suspected, obtain details of the Return Material Authorization (RMA) process from the support website.

Warranty

For products shipped after October 1st, 2018 Cambium's standard hardware warranty is for three (3) years from date of shipment from Cambium or a Cambium distributor. Cambium warrants that hardware will conform to the relevant published specifications and will be free from material defects in material and workmanship under normal use and service. Cambium shall within this time, at its own option, either repair or replace the defective product within thirty (30) days of receipt of the defective product. Repaired or replaced product will be subject to the original warranty period but not less than thirty (30) days.

To register cnVision products or activate warranties, visit the support website.

For warranty assistance, contact the reseller or distributor.



Attention Do not open the radio housing for repair or diagnostics; there are no serviceable parts within the housing.

Portions of Cambium equipment may be damaged from exposure to electrostatic discharge. Use precautions to prevent damage.

Security advice

Cambium Networks systems and equipment provide security parameters that can be configured by the operator based on their particular operating environment. Cambium recommends setting and using these parameters following industry-recognized security practices. Security aspects to be considered are protecting the confidentiality, integrity, and availability of information and assets. Assets include the ability to communicate, information about the nature of the communications, and information about the parties involved.

In certain instances Cambium makes specific recommendations regarding security practices, however, the implementation of these recommendations and final responsibility for the security of the system lies with the operator of the system.

Cambium Networks cnVision equipment is shipped with default web management interface login credentials. It is highly recommended that these usernames and passwords are modified prior to system installation.

Precautionary statements

The following describes how precautionary statements are used in this document.

Warning

Precautionary statements with the Warning tag precede instructions that contain potentially hazardous situations. Warnings are used to alert the reader to possible hazards that could cause loss of life or physical injury. A warning has the following format:



Warning text and consequence for not following the instructions in the warning.

Attention

Precautionary statements with the Attention tag precede instructions that are used when there is a possibility of damage to systems, software, or individual items of equipment within a system. However, this damage presents no danger to personnel. An attention statement has the following format:



Attention text and consequence for not following the instructions.

Note

Precautionary statements with the Note tag indicate the possibility of an undesirable situation or provide additional information to help the reader understand a topic or concept. A note has the following format:



Note text.

Caring for the environment

The following information describes national or regional requirements for the disposal of Cambium Networks supplied equipment and for the approved disposal of surplus packaging.

In EU countries



The following information is provided to enable regulatory compliance with the European Union (EU) directives identified and any amendments made to these directives when using Cambium equipment in EU countries.

Disposal of Cambium equipment

European Union (EU) Directive 2002/96/EC Waste Electrical and Electronic Equipment (WEEE)

Do not dispose of Cambium equipment in landfill sites. For disposal instructions, see <https://support.cambiumnetworks.com>

Disposal of surplus packaging

Do not dispose of surplus packaging in landfill sites. In the EU, it is the individual recipient's responsibility to ensure that packaging materials are collected and recycled according to the requirements of EU environmental law.

In non-EU countries

In non-EU countries, dispose of Cambium equipment and all surplus packaging in accordance with national and regional regulations.

Chapter 1: Product description

This chapter provides a high-level description of the cnVision products. It describes the function of the product, the main product variants, and the typical installation. It also describes the main hardware components.

The following topics are described in this chapter:

- The key features, typical uses, product variants and components of the cnVision are explained in the [Overview](#) section.
- How the cnVision wireless link is operated, including modulation modes, power control, and security is described under [Wireless operation](#).
- The cnVision management system, including the web interface, installation, configuration, alerts, and upgrades is described in [System management](#).

Overview

Wireless based solutions can be the best and the most cost-effective options for video-based surveillance installations in situations where wired-based solutions can damage properties or be cost-prohibitive. Wireless solutions can also provide the flexibility to add cameras in difficult locations and to scale the system without quickly. Cambium Networks series of cnVision products are purpose-built video surveillance backhaul solutions designed to provide connectivity for mission-critical video transport.

cnVision Hardware Highlights

General

Easy to install and configure, leverages proprietary protocols, provides integration with Video Management Systems and camera detection via ONVIF. The cnVision solution is an ideal platform to use for connectivity needs in the video surveillance space using simple point-to-point or point-to-multipoint topology that can scale as multiple cameras are added.

Frequency Range (Country specific)	Wide Band operation 4910 -5970 MHz
Channel Width	5/10 (MAXr) 20/40/80
Ethernet Interface	10/100/1000 BaseT
Power Consumption	13.0 Watts Max
Channel Spacing	Configurable in 5 MHz increments.
Environmental	Supports IP 55 and IP67, temperature range from -30°C to +60°C.

CCTV Performance

Losing a critical frame in your video transmission is unacceptable. With a deterministic protocol, high resiliency to interference and a built-in packet retransmission mechanism, cnVision ensures that those critical video frames arrive when they need to. Adapting to changing environments, cnVision can shift gears just like the transmission in a car to ensure the reliable delivery of critical video.

Adaptive Modulation	Adapt link quality based on dynamic conditions.
Automatic Packet Retry	Lost frames due to interference are retransmitted to minimize frame loss

Consistent and Low Latency	5 -7ms roundtrip latency and consistency resulting in less jitter.
Typical Configuration	Speeds of 600Mbps can support upwards of 40 4K cameras in point to point or hub and spoke configuration.

Camera Management (ONVIF and Stream Detection Support)

With a built-in ONVIF client, cnVision products can detect and display camera hardware models and system information from ONVIF Conformant cameras. ONVIF provides customers the flexibility to select and use products and software from different vendors without being locked into a specific brand.

ONVIF	Camera detection via ONVIF discovery
Stream Display	Camera feed display in Hub/Client UI

Ease of Planning, Discovery, and Managing (Coming Soon)

With a comprehensive set of features under the cnVision Companion Tool App, you can confidently plan your camera deployment and know exactly which cnVision products to choose and what capacity to anticipate. The Discovery component allows you to pre-stage the equipment and perform system maintenance and software upgrades.

Video Management System Integration

cnVision Hub and Clients can be integrated into major VMS platforms. Key parameters related to the device links and major events can trigger and display information from the VMS platform managing the cameras.


Security

cnVision solutions incorporate the latest encryption technologies and security practices. After all, you simply cannot compromise security when it comes to backhauling mission-critical video.

Encryption	128bit AES, 256bit AES (Optional)
Authentication	Radius, WPA2
Access	HTTPS, SSH
L2/L3	Firewall L2/L3 firewall rules to further control traffic flow.
Wireless MAC Filtering	Ability to filter by MAC address of wireless interfaces.
User Security	Different login privileges.

Typical Uses

Some common examples of the cnVision solution's flexibility and configuration options are ideal for wireless video-based surveillance implementations in environments such as parking lots, shopping centers, factories, farms and homes where a wired solution is not a viable option.

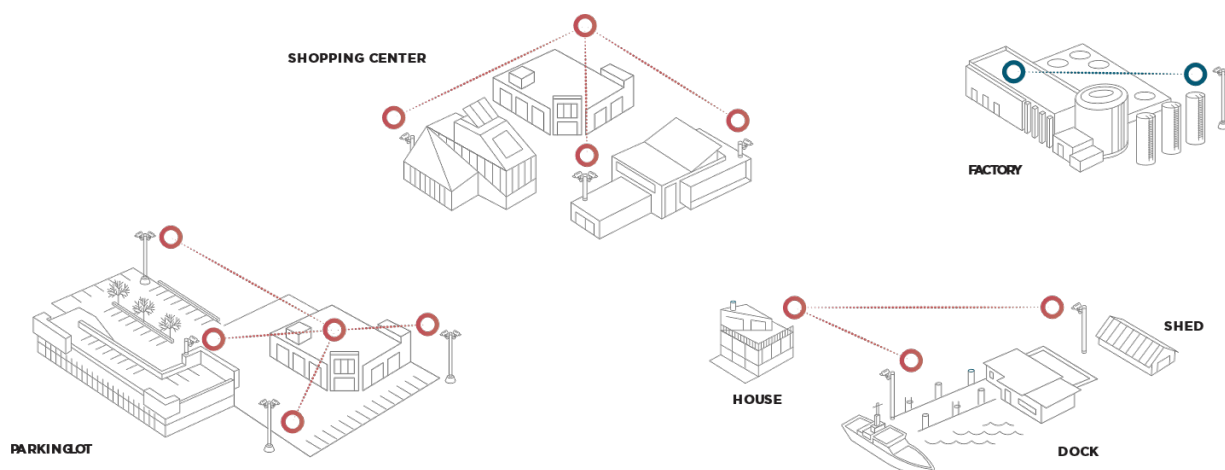


For more information about these components, including interfaces, specifications, and Cambium part numbers, see [System hardware](#).

Configuration Options


Point-to-Point

In point-to-point configuration, a single client radio is connected to a hub connected to the surveillance network. A typical use for this configuration is ideal for situations where you need to monitor a specific area such as a barn on a farm using a single camera.

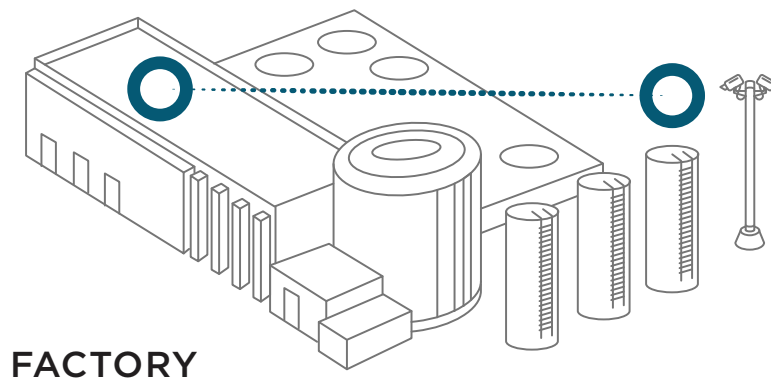

Point-to-Multipoint

The point-to-multipoint configuration is where multiple cameras and clients must be installed around the area with each camera sending video data to the main hub. An Omnidirectional hub such as the HUB 360r, or the HUB FLEXr with wide-angle directional antennas (such as sectors) is ideal for this type of configuration depending on camera locations.

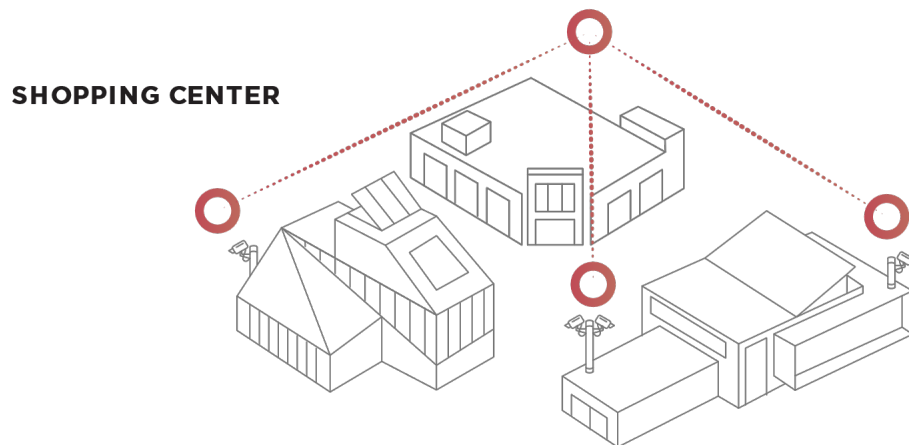

Wireless operation

Wireless networks allow users to connect to local area networks through wireless connections that transmit data using high-frequency radio waves.

Radar avoidance

In regions where protection of radars is part of the local regulations, cnVision must detect interference from radar-like systems and avoid co-channel operation with these systems.

To meet this requirement, cnVision implements the following features:

- The equipment can only transmit on available channels, of which there are none at initial power-up. The radar detection algorithm will always scan a usable channel for 60 seconds for radar interference before making the channel an available channel.
- This compulsory channel scan will mean that there is at least 60 seconds service outage every time radar is detected, and that the installation time is extended by at least 60 seconds even if there is found to be no radar on the channel

There is a secondary requirement for bands requiring radar avoidance. Regulators have mandated that products provide a uniform loading of the spectrum across all devices. In general, this prevents operation with fixed frequency allocations. However:

- ETSI regulations do allow frequency planning of networks (as that has the same effect of spreading the load across the spectrum).
- The FCC does allow channels to be avoided if there is actually interference on them.



Note When operating in a region that requires DFS, ensure that the AP is configured with alternate frequencies and that the SM is configured to scan for these frequencies to avoid long outages.

Encryption

cnVision supports optional encryption for data transmitted over the wireless link. The encryption algorithm used is the Advanced Encryption Standard (AES) with a 128-bit key size. AES is a symmetric encryption algorithm approved by U.S. Government organizations (and others) to protect sensitive information.

Country codes

Some aspects of the wireless operation are controlled, enforced or restricted according to a country code. cnVision country codes represent individual countries (for example Denmark) or regulatory regions (for example FCC or ETSI).

Country codes affect the following aspects of wireless operation:

- Maximum transmit power
- Radar avoidance (future release)
- Frequency range



Attention To avoid possible enforcement action by the country regulator, always operate links in accordance with local regulations

System management

This section introduces the cnVision management system, including the web interface, installation, alerts, and upgrades, configuration, and management software.

Management agent

cnVision devices are managed through an embedded Web User Interface (Web UI). Management workstations, network management systems or PCs can be connected to this agent using the module's Ethernet port, over the air (Clients connection via Hub) or by using the device WiFi management interface.

The management agent supports the following interfaces:

- Hypertext Transfer Protocol (HTTP)
- Hypertext Transfer Protocol Secure (HTTPS)
- Simple Network Management Protocol (SNMP)
- Network Time Protocol (NTP)
- System logging (Syslog)
- Dynamic Host Configuration Protocol (DHCP)
- Secure Socket Shell (SSL)

Web server

The cnVision management agent contains a web server. The web server supports access via the HTTP and HTTPS interfaces.

Web-based management offers a convenient way to manage the cnVision equipment from a locally connected computer or from a network management workstation connected through a management network, without requiring any special management software. The web-based interfaces are the only interfaces supported for installation of cnVision, and for the majority of cnVision configuration management tasks.

SNMP

The management agent supports fault and performance management by means of an SNMP interface. The management agent is compatible with SNMP v2c using one Management Information Base (MIB) file which is available for download from the Cambium Networks Support website (https://support.cambiumnetworks.com/files/cnVision_cnVision).

Network Time Protocol (NTP)

The clock supplies accurate date and time information to the system. It can be set to run with or without a connection to a network time server (NTP). It can be configured to display local time by setting the time zone and daylight saving in the Time web page.

If an NTP server connection is available, the clock can be set to synchronize with the server time at regular intervals.

cnVision devices may receive NTP data from a CMM module or an NTP server configured in the system's management network.

The Time Zone option is configurable on the **Configure > System** page and may be used to offset the received NTP time to match the operator's local time zone.

Account Management

When identity-based user accounts are configured, a security officer can define from one to four user accounts, each of which may have one of the four possible roles:

- ADMINISTRATOR (default username/password "admin"), who has full read and write permission.
- INSTALLER (default username/password "installer"), who has permission to read and write parameters applicable to unit installation and monitoring.
- HOME (default username/password "home"), who has permission only to access pertinent information for support purposes
- READ-ONLY (default username/password "readonly"), who has permission to only view the Monitor page.

Camera Management

cnVision hubs and clients are conformant with ONVIF, which allows interoperability between network products and ONVIF compliant camera devices regardless of the manufacturer. ONVIF compliant cameras can be managed via the web interface (**Status > cnVision Detected Cameras**).

Software upgrade

Software upgrades may be issued via the radio web interface (**Tools > Software Upgrade**). For software upgrades, see https://support.cambiumnetworks.com/files/cnVision_cnVision.

Chapter 2: System Hardware

This chapter describes cnVision hardware and supporting components.

- This section provides details about the cnVision Hubs and Clients including descriptions, specifications, part numbers, and package contents.
- The power supply section provides details about the power supplies included with the devices and installation precautions.
- This section provides details about Ethernet Cabling and the importance of selecting and using the correct types for installations.
- This section provides details about the Surge Suppression Units and the importance of protecting the equipment.

System Hardware

cnVision Hubs and Clients

HUB-FLEXr

The HUB FLEXr is a flexible and ruggedized device ideal for long-range requirements. It can be attached to various antenna types such as a Cambium Networks Omnidirectional for 360 degrees, 90/120-degree sector, or third part horn antennas from companies such as RF-Elements for 45-60-degree coverage.

This device is compatible with all clients and boasts GPS synchronization capabilities that allow for frequency re-use in congested radio frequency environments. In most cases, the HUB FLEXr should be used with narrow degree antennas to mitigate interference.



Hub-FLEXr with Twistport adapter and 60 degree horn antenna

Figure 2-1 HUB FLEXr configuration options

HUB 360r

The HUB 360r is an innovative Hub solution with an integrated ruggedized housing and a 9dBi Omni antenna. The Omni configuration of this unit takes the guesswork out of aligning the Hub as you can connect clients in a 360-degree direction.



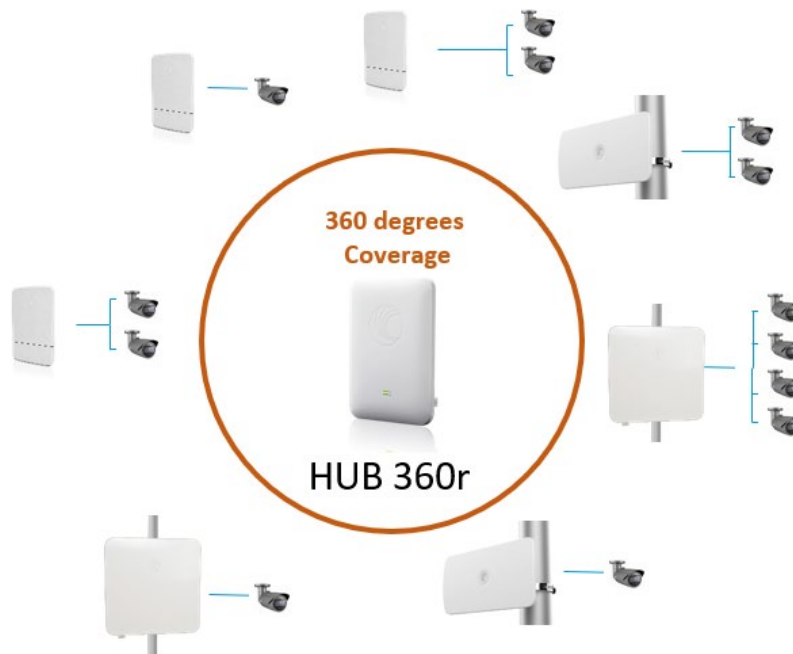


Figure 2-2 HUB 360r configuration options

CLIENT MAXr

The CLIENT MAXr is a ruggedized client providing support for long-distance deployments (up to 8 miles). With a 19dBi antenna, an IP67 ingress protection rating, and 4.9 GHz support, this is the ideal client unit for mission-critical deployments in the public safety arena.



CLIENT MINI

The CLIENT MINI is an ideal solution for mid-range requirements (up to 4 miles). The CLIENT MINI can also be configured as a hub. With horizontal orientation and a small form factor, this unit is resilient to interference and offers a compelling value proposition.



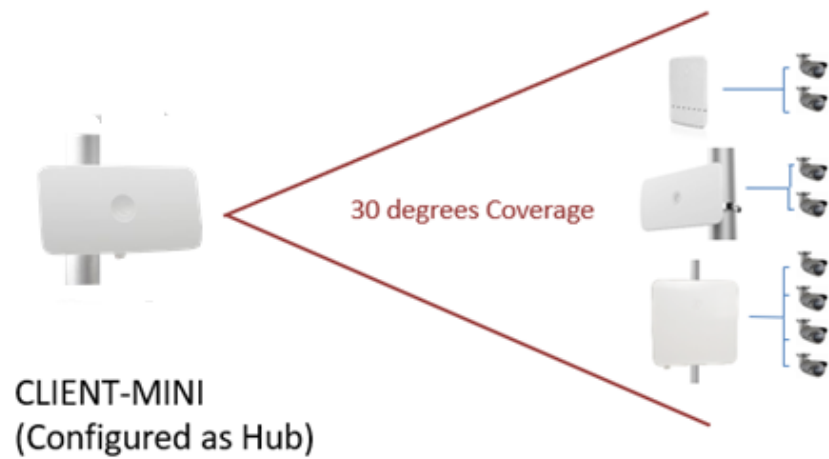


Figure 2-3 CLIENT MINI configuration options

CLIENT MICRO

The CLIENT MICRO is a small form-factor device ideal for short-range based requirements (up to 1 mile). Similar to the CLIENT MINI, it can also be configured as a hub.

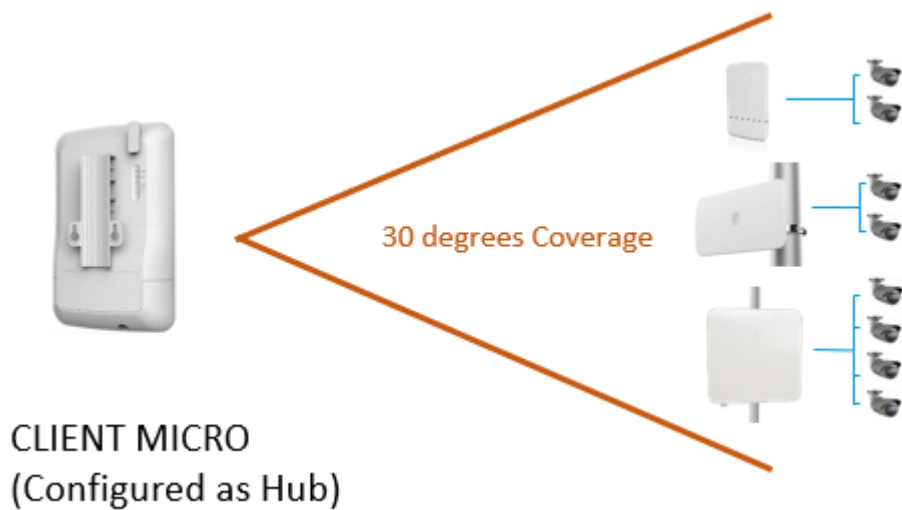


Figure 2-4 CLIENT MICRO configuration options

Distance Coverage

The HUB 360r provides up to 1-mile 360-degree coverage. The HUB FLEXr provides up to a 5-mile range depending on the antenna being used.

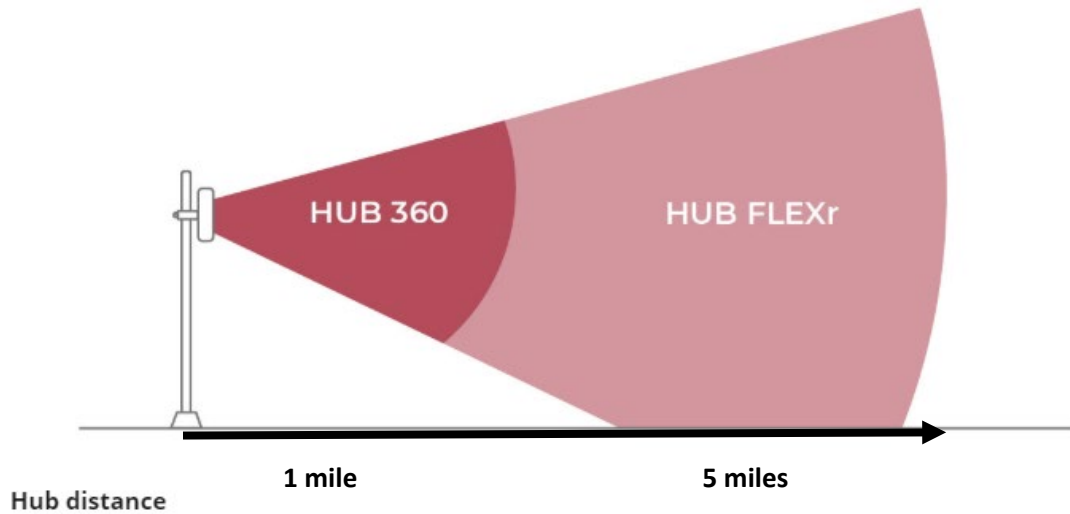


Figure 2-5 CLIENT MICRO configuration options

The CLIENT MICRO provides up to 1-mile coverage and can act as a Hub. The CLIENT MINI extends the distance up to 4-miles and can also act as a hub. The cLIENT MAXr extends the range up to 5 miles.

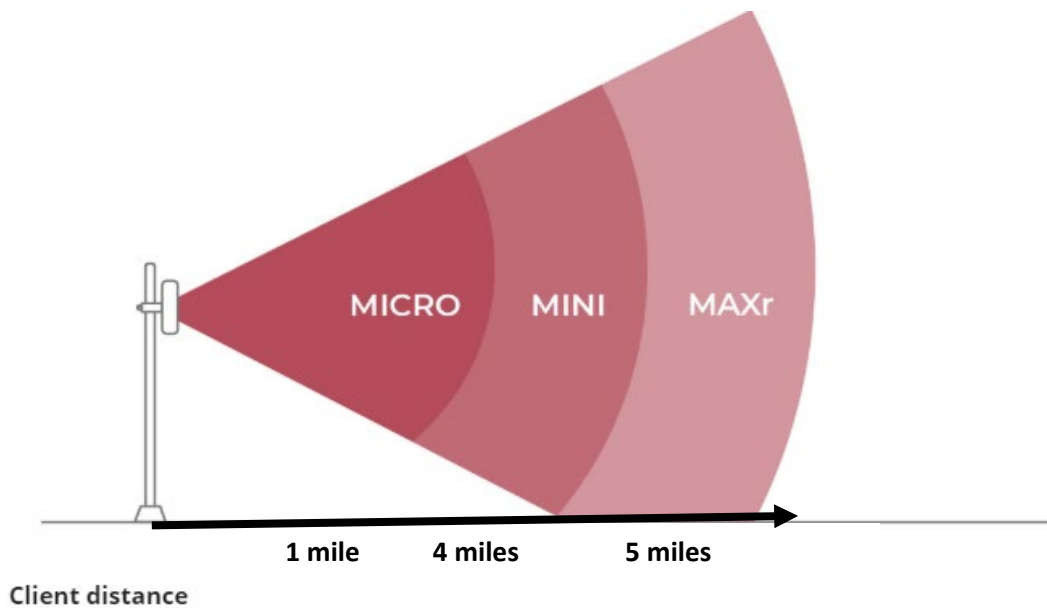







Figure 2-6 CLIENT MICRO configuration options

cnVision Hubs and Clients Portfolio




Table 2- 1 cnVision Hubs and Clients portfolio

					
	Dedicated Hubs		Long Range Client	Dual Purpose Hardware - Hub or Medium-Range Client	
	HUB 360r	HUB FLEXR	CLIENT MAXr	CLIENT MINI	CLIENT MICRO
Primary	An omnidirectional Hub to connect many cameras in any direction	A hub that is compatible with many different kinds of antennas	High gain client useful for tough climates, longer distances, or Industrial sites	Standard client, suitable for most conditions	Small form factor client for shorter distances
Alternate Use	None	None	None	Hub for connection to clients that are within a 15-degree Azimuth arc	Hub for connection to clients that are within a 30-degree Azimuth arc
Antennal Type	Omnidirectional	Connectorized	Flat Panel	Flat Panel	Flat Panel
Antennal Gain	9 dBi	NA	19 dBi	16 dBi	13 dBi
Antenna Beamwidth					
Azimuth	360 degrees	NA	3 dB - 14.5 degrees	3dB - 15 degrees	3dB - 30 degrees
Elevation	10 degrees	NA	3 dB - 12.5 degrees	3dB - 30 degrees	3dB - 28 degrees
Power Consumption	13 Watts	12 Watts	12 Watts	12 Watts	12 Watts
Input Voltage	56V Passive POE (37-56V) 4,5 +; 7,8 - or 4,5 -; 7,8 + 7W typical, 12W max or 802.3af	30V Passive POE (14-30V) 4,5 +; 7,8 - or 4,5 -; 7,8 + 7W typical, 12W max	30V Passive POE (14-30V) 4,5 +; 7,8 - or 4,5 -; 7,8 + 7W typical, 12W max	30V Passive POE (14-30V) 4,5 +; 7,8 - or 4,5 -; 7,8 + 7W typical, 12W max	30V Passive POE (14-30V) 4,5 +; 7,8 - or 4,5 -; 7,8 + 7W typical, 12W max
Frequency Band(s)	4.910 GHz to 5.970 GHz	4.910 GHz to 5.970 GHz	4.910 GHz to 5.970 GHz	4.910 GHz to 5.970 GHz	4.910 GHz to 5.970 GHz
Channel Size	20 40 80 Mhz	20 40 80 Mhz	20 40 80 Mhz	20 40 80 Mhz	20 40 80 Mhz
Max Tx Power	+29 dBm	+29 dBm	+29 dBm	+29 dBm	+28 dBm
Max Throughput	600 Mbps	600 Mbps	600 Mbps	600 Mbps	600 Mbps
Interface	Gigabit Ethernet, 100/1000BaseT				
Monitoring	VMS, ONVIF supported				
Configuration	Web GUI	Web GUI	Web GUI	Web GUI	Web GUI
Dimensions	30 x 20.4 x 6.5 cm (11.8 x 8 x 2.55 in)	22.2 x 12.4 x 4.5 cm (8.75 x 4.9 x 1.75 in) without brackets	27.8 x 27.8 x 4.5 cm (10.9 x 10.9 x 1.8 in) without mounting bracket	12.4 x 25.1 x 11.9 cm (4.9 x 9.9 x 4.7 in)	13.0 x 20.3 x 5.40 cm (5.1 x 8.0 x 2.1 inches)
Weight	0.9kg (2.0 lbs) without brackets	0.7 kg (1.5 lbs) without brackets	1.45 kg (3.2 lbs.)	0.50 kg (1.1 lb)	0.48 kg (1.05 lbs.)
Environmental	IP67	IP67	IP67	IP55	IP55

Temperature	-30°C to +60°C (-22°F to +140°F)	-30°C to +60°C (-22°F to +140°F)	-30°C to +60°C (-22°F to +140°F)	-30°C to +60°C (-22°F to +140°F)	-30°C to +60°C (-22°F to +140°F)
Mounting	1-2" Pole Mount included - Wall Mount optional				
Wind Survival	224 kmph (139 Kmph)	NA	180 kmph (112 mph)	180 kmph (112 mph)	180 kmph (112 mph)
Certifications	FCCID - Z8H89FT0051, IC - 109W-005 CE - EN 301 893 V2.1.1 (5.4 GHz), EN 302 502 V2.1.1 (5.8 GHz)	FCCID - Z8H-89FT0047, IC - 109W-0047, CE - EN 301 893 V2.1.1 (5.4 GHz), EN 302 502 V2.1.1 (5.8 GHz)	FCCID - Z8H89FT0048; IC - 109W-0048; CE - EN 301 893 V2.1.1 (5.4 GHz), EN 302 502 V2.1.1 (5.8 GHz)	FCCID - Z8H-89FT0016, IC- 109W-0016, CE - EN 301 893 V2.1.1 (5.4 GHz), EN 302 502 V2.1.1 (5.8 GHz)	FCCID - Z8H89FT0048, IC - 109W-0048, CE - EN 301 893 V2.1.1 (5.4 GHz), EN 302 502 V2.1.1 (5.8 GHz)

cnVision Device Part Numbers

Table 2- 2 cnVision Hubs and Clients part numbers

Part Number By Country					
	HUB 360r	HUB FLEXr	CLIENT MAXr	CLIENT MINI	CLIENT MICRO
FCC US cord	CV-H00RPUSA-US	CV-HC2RPUSA-US	CV-C19RPUSA-US	CV-D16SPUSA-US	CV-D13SPUSA-US
IC Canada/US cord	CV-H00RPUSA-IC	CV-HC2RPUSA-IC	CV-C19RPUSA-IC	CV-D16SPUSA-IC	CV-D13SPUSA-IC
EU EU cord	CV-H00RPEUA-EU	CV-HC2RPEUA-EU	CV-C19RPEUA-EU	CV-D16SPEUA-EU	CV-D13SPEUA-EU
EU UK cord	CV-H00RPUKA-EU	CV-HC2RPUKA-EU	CV-C19RPUKA-EU	CV-D16SPUKA-EU	CV-D13SPUKA-EU
ROW no cord	CV-H00RPXXA-RW	CV-HC2RPXXA-RW	CV-C19RPXXA- RW	CV-D16SPXXA-RW	CV-D13SPXXA-RW
ROW US cord	CV-H00RPUSA-RW	CV-HC2RPUSA-RW	CV-C19RPUSA-RW	CV-D16SPUSA-RW	CV-D13SPUSA-RW
ROW EU cord	CV-H00RPEUA-RW	CV-HC2RPEUA-RW	CV-C19RPEUA-RW	CV-D16SPEUA-RW	CV-D13SPEUA-RW
ROW UK cord	CV-H00RPUKA-RW	CV-HC2RPUKA-RW	CV-C19RPUKA-RW	CV-D16SPUKA-RW	CV-D13SPUKA-RW
ROW India cord	CV-H00RPINA-RW	CV-HC2RPINA-RW	CV-C19RPINA-RW	CV-D16SPINA-RW	CV-D13SPINA-RW
India India cord	CV-H00RPINA-IN	CV-HC2RPINA-IN	CV-C19RPINA-IN	CV-D16SPINA-IN	CV-D13SPINA-IN
ROW China cord	CV-H00RPCNA-RW	CV-HC2RPCNA-RW	CV-C19RPCNA-RW	CV-D16SPCNA-RW	CV-D13SPCNA-RW
ROW Brazil cord	CV-H00RPBRA-RW	CV-HC2RPBRA-RW	CV-C19RPBRA-RW	CV-D16SPBRA-RW	CV-D13SPBRA-RW
ROW Argentina cord	CV-H00RPARA-RW	CV-HC2RPARA-RW	CV-C19RPARA-RW	CV-D16SPARA-RW	CV-D13SPARA-RW
ROW ANZ cord	CV-H00RPANA-RW	CV-HC2RPANA-RW	CV-C19RPANA-RW	CV-D16SPANARW	CV-D13SPANARW

ROW South Africa cord	CV-H00RPSAA-RW	CV-HC2RPSAA-RW	CV-C19RPSAA-RW	CV-D16SPSAA-RW	CV-D13SPSAA-RW
ROW No PSU	CV-H00RX00A-RW	CV-HC2RX00A-RW	CV-C19RX00A-RW	CV-D16SX00A-RW	CV-D13SX00A-RW

ROW = Rest of World (multiple country options available in the software)

EU = European Union, for countries that fall under EU regulations

cnVision Package Contents

The cnVision products package contains the following items in the box.

- 1 x Radio
- 1 x Pole mount bracket
- 1 x Quick start guide
- 1 x POE power supply (unless P/N shows “No PSU”)
- 1 x Power Cord (See P/N for type)

cnVision Hub and Client software packages

cnVision devices may be upgraded by downloading new software packages from the Cambium Networks website. The software packages applicable to cnVision integrated radios are named:

cnVision 4.5.3. image (or higher version number)

Power Supply

Power supply description

The supplied power supplies are indoor rated units that are connected to the cnVision modules and network terminating equipment using Cat5e cable with RJ45 connectors. They are also plugged into an AC or DC power supply so that it can inject Power over Ethernet (PoE) into the module.



Attention The cnVision modules require 30V and 56V power input. They should not be connected directly into PoE switches as that may cause permanent damage to the devices.

Power supply interfaces

The power supply interfaces are illustrated in [Table 2-3](#) and described in [Table 2-4](#) and [Table 2-5](#).

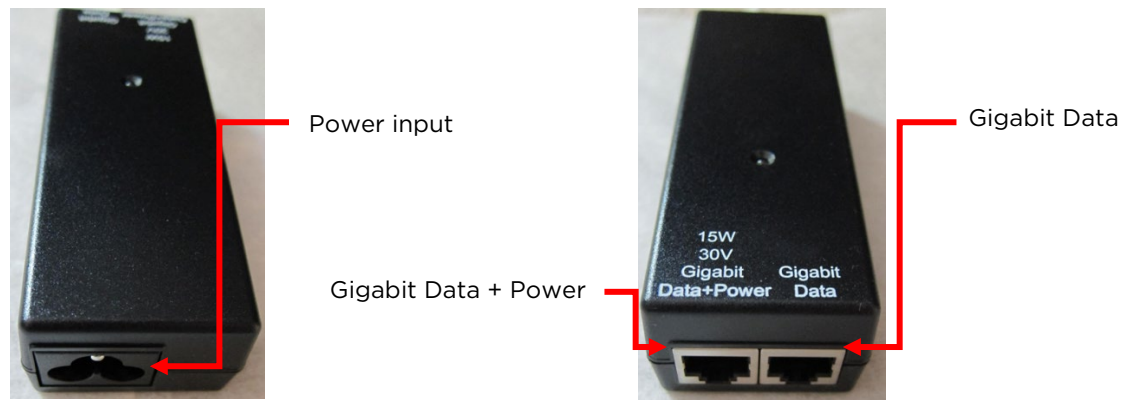


Figure 2-7 Power supply interfaces

Table 2- 3 Power supply interface functions - N000900L001

Interface	Function
Power input	Mains power input.
Power output	30V
Gigabit Data + Power	RJ45 socket for connecting Cat5e cable to the radio
Gigabit Data	RJ45 socket for connecting Cat5e cable to the network

Table 2- 4 Power supply interface functions - N000900L017A

Interface	Function
Power input	Mains power input.
Power output	56V
Gigabit Data + Power	RJ45 socket for connecting Cat5e cable to the radio
Gigabit Data	RJ45 socket for connecting Cat5e cable to the network

Table 2- 5 Power Supply LED functions

LED	Function
Power (green)	Power supply detection

Power supply Installation

In an indoor location, the power supply can be mounted on a wall or other flat surface. It must be kept dry from moisture, condensation, or flooding and accessible to view status indicators.

The power supply can be connected to the cnVision device drop cable and network terminating equipment. The power supply can be connected to a mains or DC power supply that meets the requirements defined in [Table 2-7](#).

For outdoor installations, the power supplies must be housed in ruggedized weatherproof enclosures.



Figure 2-8 Outdoor Power Supply installation

Power supply part numbers

Each module requires one power supply and one power supply line cord (line cord included with radio device, see [Table 2-6](#)).

Table 2- 6 Power supply component part numbers

Cambium description	Cambium part number	Device Compatibility
cnVision Pwr Supply for GPS Radio - no cord (spare)	N000900L001	cnVision CLIENT MICRO
		cnVision CLIENT MINI
		cnVision CLIENT MAXr
		cnVision HUB FlexR
POWER SUPPLY, 15W, 56V – Gbps support	N000900L017A	cnVision HUB 360r



Attention Each cnVision device must be powered by the corresponding power supply.

Power supply specifications

The cnVision power supplies conform to the specifications listed in [Table 2-7](#), [Table 2-8](#), and [Table 2-9](#).

Table 2- 7 Power supply physical specifications

Category	Specification
Dimensions (H x W x D)	14 x 6.5 x 3.6 cm (5.5 x 2.55 x 1.42 in)
Weight	0.26 lbs

Table 2- 8 Power supply environmental specifications

Category	Specification
Ambient Operating Temperature	0° C to +40° C
Humidity	20% - 90%

Table 2- 9 Power supply electrical specifications

Category	Specification
AC Input	100 to 240 VAC
Efficiency	Meets Energy Level 6
Over Current Protection	Short circuit, with auto-recovery
Hold uptime	10 ms minimum at maximum load, 120 VAC

Ethernet cabling

For details of the Ethernet cabling components of a cnVision installation, see:

[Ethernet standards and cable lengths](#)

[Outdoor Cat5e cable](#)

Ethernet standards and cable lengths

All configurations require a copper Ethernet connection from the power supply port to the power supply and network terminating equipment.

For each power supply, the maximum permitted drop cable length is specified in [Table 2-9](#).

Table 2- 10 Power supply drop cable length restrictions

Part number	Description	Maximum cable length (*1)
N000900L001	Power Supply for Radio with	330 feet (100m)
N000900L017A	Gigabit Ethernet (no cord)	

(*1) The maximum length of Ethernet cable from the device to the network device needs to follow 802.3 standards. If the power supply is not the network device the cable from the power supply to the network device must be included in the total maximum cable length.

Outdoor Cat5e cable

Cambium Industrial Cable

Cambium Industrial Cable uses 24-gauge solid bare copper conductors, covered by bonded-pair polymer insulation. The conductors are protected by double-layer shielding consisting of a solid foil layer under the braided tinned copper mesh, providing excellent shielding while maximizing flexibility. And, the cable is jacketed by industrial-grade UV-resistant, abrasion-resistant, and oil-resistant PVC.

Cambium's Industrial RJ45 connectors are specifically designed to work optimally with Cambium Industrial Cable.

The connectors are fully shielded with integrated strain relief for greater pull strength, utilize a staggered contact design that minimizes crosstalk and maximizes electrical performance, and the contacts are plated with 50 micro-inch thick 24-carat gold, exceeding TIA-1096 specifications and ensuring the best possible connection and oxidation resistance.

Cambium Networks' industrial-grade cable is well suited for high-quality durable installations of Hubs and Clients.

Table 2- 11 Cambium Industrial Cable component part numbers

Cambium description	Cambium part number
Industrial Grade CAT 5 Cable 50 meter unterminated	N000000L106A
Industrial Grade CAT 5 Cable 100 meter unterminated	N000000L106A
Industrial Grade CAT 5 Cable 300 meter unterminated	N000000L108A
Industrial Grade RJ45 Connector 100 Pack	C000000L109A
Termination Tool for C000000L109A RJ45 connectors	C000000L110A

Surge suppression unit

Structures, equipment, and people must be protected against power surges (typically caused by lightning) by conducting the surge current to ground via a separate preferential solid path.

The actual degree of protection required depends on local conditions and applicable local regulations. To adequately protect a cnVision installation, both ground bonding and transient voltage surge suppression are required.

Network operators should always follow best practices for grounding and lightning protection. Doing so will minimize network outages and reduce the associated costs of tower climbs and equipment repair/replacement.



Note Lightning-prone installations can be improved by:

- Installing a surge suppressor near the device (transient surge suppression)
- Grounding the device to the pole (ground bonding)
- Lowering the device/dish such that it is not the highest metallic object on the pole.

Gigabit Ethernet Surge Suppressor

The Gigabit Ethernet Surge Suppressor is critical for lightning protection to minimize the potential for damage.

Table 2- 12 Surge suppressor component part numbers



Cambium description	Cambium part number	Device Compatibility
Gigabit Surge Suppressor (30V)	C000000L065A	cnVision CLIENT MAXr
		cnVision CLIENT MINI
		cnVision CLIENT MICRO
		cnVision HUB FLEXr
Gigabit Surge Suppressor (56V)	C000000L033A	cnVision HUB 360r



Attention Choose the 30V or 56V surge suppressor option based on your installed device power rating. Installing a 30V surge suppressor for a 56V device or a 56V surge suppressor for a 30V device may result in inadequate surge protection.

Chapter 3: System planning

This chapter provides information to help the user to plan a cnVision installation.

The following topics are described in this chapter:

- Factors to consider when planning links such as range, line of sight, bandwidth considerations and grounding and lighting protection.
- Factors to consider for radar spectrum planning.

Site planning

Before you can determine which wireless devices will work for a particular installation, you should conduct a site survey. Site planning is crucial for a successful wireless-based solution. Conducting a site survey ensures that the proposed sites meet the requirements for a video surveillance system.

Site planning includes understanding and documenting the customer's requirements, evaluating the site conditions where the cameras are to be installed and taking inventory of any equipment already installed or will be reused. Use tools such as Google Maps™ and the Cambium Networks' Companion tool to help layout the plan and to document potential issues.

Key factors to consider for wireless video surveillance installations:



Figure 3-1: Pole Mount Installation



Area coverage

Determine the coverage area and the distances between camera locations and the central network. Scene activity in a high traffic area such as a parking lot with a constant car and people movement requires higher bandwidth.



Obstacles

Note if there are there any objects such as buildings, trees, masts, power lines, or other obstacles that may cause a line of sight issues or interference. Plan for any potential obstructions such as trees or vegetation that may grow over time.



Cameras

The number and types of cameras used can greatly affect the bandwidth requirements. Features such as high resolution, night vision, motion, and sound detection, etc. should be considered when planning for bandwidth capacity.



Power requirements

Determine where power will be needed and provided at the installation locations. Most IP cameras use Power over Ethernet (PoE), however, switches, wireless radios, and other devices require their own power source.



Network Infrastructure

Determine if the wireless system will connect to a new or an existing video surveillance system. Understanding and documenting pre-existing networks will help you to plan and configure the wireless system.


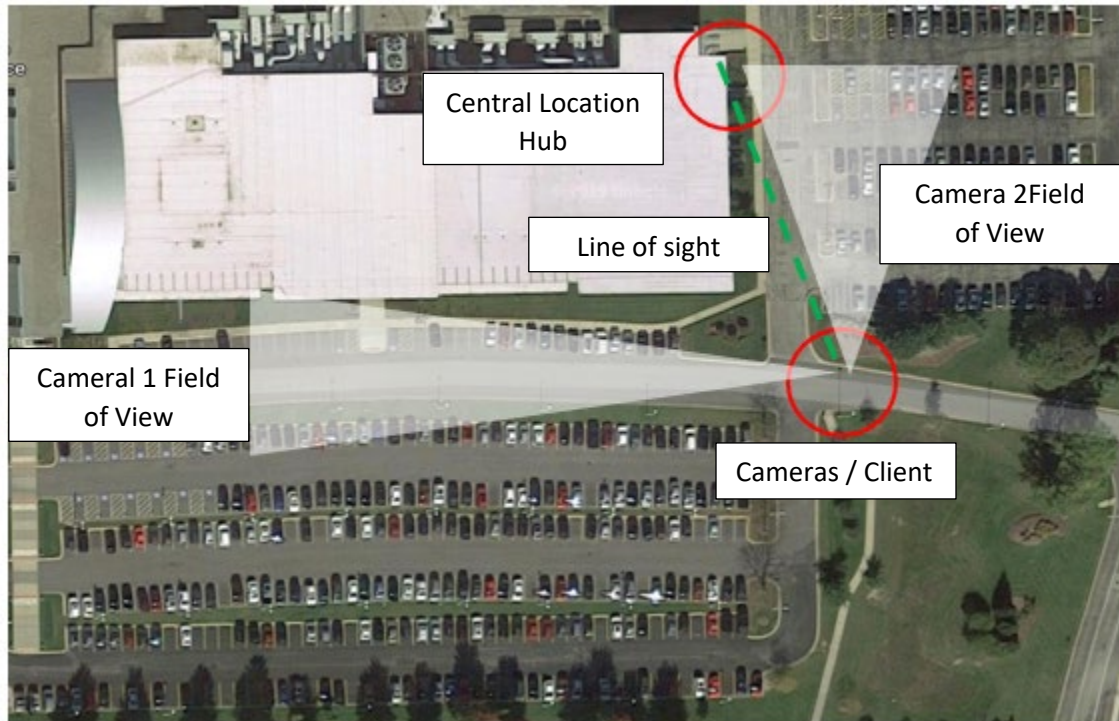



Figure 3-2: cnVision Installation Layout example

Line of Sight (LOS), Near Line of Sight (nLOS), No Line of Sight (NLOS)


In wireless networking, it is crucial that there is a clear line of sight between the hubs and the clients. However, Line of sight (LoS) doesn't refer to a straight line between the two devices. There is what is known as the Fresnel Zone, in which the transmitting and receiving devices can effectively communicate within this region.

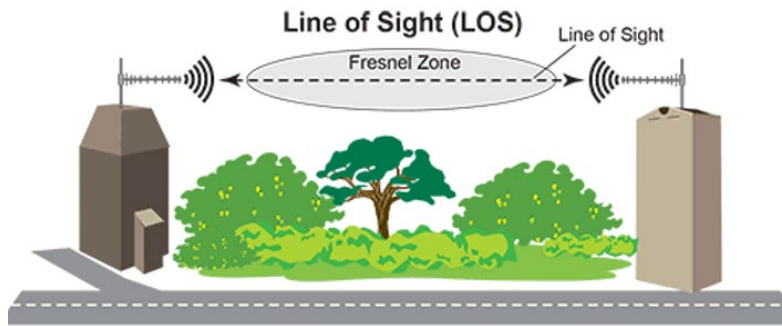

If there are trees or other obstacles blocking part of the Fresnel zone, the signals may be degraded affecting performance. This is known as Near Line of Sight (nLOS).

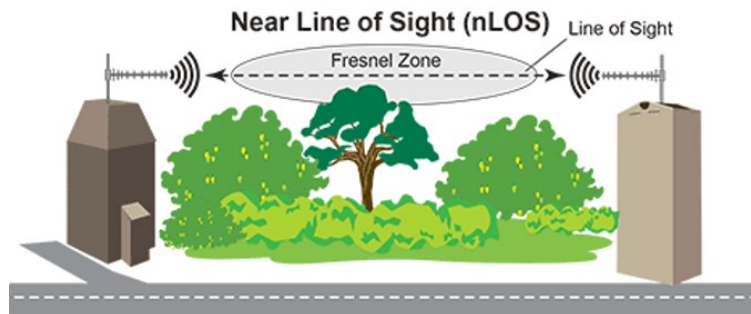

The Non-Line of Sight (NLOS) condition refers to a situation where the signals are completely blocked between the communicating devices. This can result in complete video data loss. In this case, the transmit and receive antennas may need to be mounted on higher poles to get above the trees or any other potential obstruction.

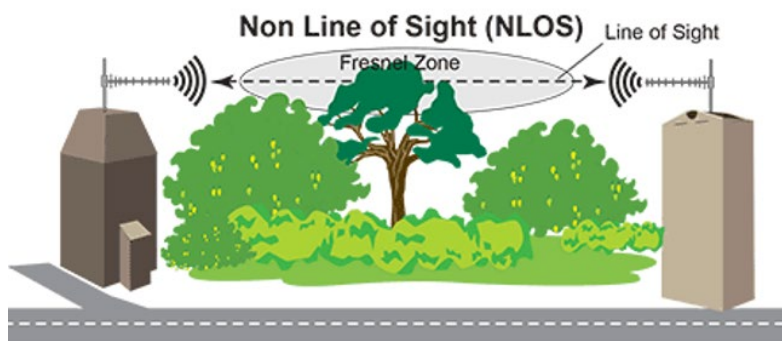

Bandwidth Consideration

Determining network and Wireless bandwidth requirements are important considerations for video surveillance systems. Understanding the bandwidth requirements will help in selecting the right cnVision devices for successful implementations.

key factors that can affect bandwidth requirements are:

- Coverage area and distances.
- The number of cameras in use.
- Camera types and supported features – cameras that are configured to record high quality images at high frame rates can consume anywhere from 3 to 4 Mbps of the bandwidth.
 - Image Resolution: 720P, 1080P, 4K, etc.
 - Video Compression: H.264, MPEG-4, MPEG-2, etc.
 - Frame Rates: 15, 20, 30fps.
 - Point/Zoom, Night Vision, Sound Detection, etc.
- Scene activity: constant traffic and motion, lighting conditions, etc.
- Motion-based or continuous recording.

Companion Tool

Use the Companion Tool to help you plan, set up, and manage your camera network. The tool can be downloaded from the Cambium Networks support site.

https://support.cambiumnetworks.com/files/cnvision_cnvision/



Note Please visit [Cambium Learning](#) for training on using the Companion Tool.

Grounding and lightning protection

Structures, equipment, and people must be protected against power surges (typically caused by lightning) by conducting the surge current to ground via a separate preferential solid path. The actual degree of protection required depends on local conditions and applicable local regulations. To adequately protect a cnVision installation, both ground bonding and transient voltage surge suppression are required.



Warning Electro-magnetic discharge (lightning) damage is not covered under warranty. The recommendations in this guide, when followed correctly, give the user the best protection from the harmful effects of EMD. However, 100% protection is neither implied nor possible.

Details of lightning protection methods and requirements can be found in the international standards IEC 61024-1 and IEC 61312-1, the U.S. National Electric Code ANSI/NFPA No. 70-1984 or section 54 of the Canadian Electric Code.



Note International and national standards take precedence over the requirements in this guide.

Radio spectrum planning

This section describes how to plan cnVision links to conform to the regulatory restrictions that apply in the country of operation.



Attention The user must ensure cnVision product operates in accordance with local regulatory limits.



Note Contact the applicable radio regulator to check if the registration of the cnVision link is required.

Regulatory compliance

All applicable radio regulations must be followed while configuring the units and aligning the antennas. For more information, see [Compliance with safety standards](#).

Regulatory limits

The local regulator may restrict frequency usage and channel width and may limit the amount of conducted or radiated transmitter power.

Many countries impose EIRP limits (Allowed EIRP) on products operating in the bands used by the cnVision Series. For example, in the 5 GHz band, these limits are calculated as follows:

- In the 5.8 GHz band (5725 MHz to 5875 MHz), the EIRP must not exceed the lesser of 36 dBm or $(23 + 10 \times \text{Log Channel width in MHz})$ dBm.

Some countries (for example the USA) impose conducted power limits on products operating in the 5 GHz band.

Conforming to the limits

Ensure the link is configured to conform to local regulatory requirements by configuring the correct country code (located in the web management interface, under **Configure > Radio**). In the following situations, the country code does not automatically prevent operation outside the regulations:

- When operating in ETSI regions, it is required to enter a license key in the cnVision web management interface to unlock valid country-specific frequencies. This key may be obtained from <https://support.cambiumnetworks.com/licensekeys/cnVision>.

Available spectrum

The available spectrum for the operation depends on the region. When configured with the appropriate country code, the unit will only allow operation on those channels which are permitted by the regulations.

Certain regulations have allocated certain channels as unavailable for use:

- Some European countries have allocated part of the 5.8 GHz band to Road Transport and Traffic Telematics (RTTT) systems.

Where regulatory restrictions apply to certain channels, these channels are barred automatically by the use of the correct country code. For example, at 5.8 GHz in some European countries, the RTTT band 5795 MHz to 5815 MHz is barred. With the appropriate country code configured for this region, the cnVision will not operate on channels within this band.

The number and identity of channels barred by the license key and country code is dependent on the channel bandwidth.

Channel bandwidth

Select the required channel bandwidth for the link. The selection depends upon the cnVision frequency variant and country code.

The wider a channel bandwidth the greater is its capacity. As narrower channel bandwidths take up less spectrum, selecting a narrow channel bandwidth may be a better choice when operating in locations where the spectrum is very busy.

Both ends of the link must be configured to operate on the same channel bandwidth.

Chapter 4: System Installation

This chapter provides information to help the user to plan a cnVision installation.

The following topics are described in this chapter:

- Understanding and observing the safety requirements for installing cnVision devices.
- Preparing the equipment prior to site installation.
- The grounding and lightning protection requirements of a cnVision installation are described under [Grounding and lightning protection](#).

Safety



Warning

To prevent loss of life or physical injury, observe the following safety guidelines. In no event shall Cambium Networks be liable for any injury or damage caused during the installation of the cnVision devices.

Safety precautions

All national and local safety standards must be followed while configuring the units.

RF exposure near the antenna

Strong radio frequency (RF) fields will be present close to the antenna when the transmitter is on. Always turn off the power to the radio before undertaking maintenance activities in front of the antenna.

Minimum separation distances

Ensure that personnel is not exposed to unsafe levels of RF energy. The units start to radiate RF energy as soon as they are powered up. Never work in front of the antenna when the radio is powered. Install the radios so as to provide and maintain the minimum separation distances from all persons.



Warning Ensure that personnel is not exposed to unsafe levels of RF energy. The units start to radiate as soon as they are powered up. Respect the safety standards defined in [Compliance with safety standards](#), in particular, the minimum separation distances.

Observe the following guidelines:

- Never work in front of the antenna when the device is powered.

Power lines

Exercise extreme care when working near power lines.

Working at heights

Exercise extreme care when working at heights.

PSU

Always use one of the Cambium supplied power supply units (PSU) to power the cnVision devices. Failure to use a Cambium supplied PSU could result in equipment damage and will invalidate the safety certification and may cause a safety hazard.



Warning The supplied indoor-rated power supply must be installed in a weatherproof NEMA enclosure to protect it from the elements.

Powering down before servicing

Before servicing cnVision equipment, always switch off the power supply and unplug it from the PSU. Always remove the AC or DC input power from the PSU.

Primary disconnect device

The main power supply is the primary disconnect device.

External cables

Safety may be compromised if outdoor rated cables are not used for connections that will be exposed to the outdoor environment. For outdoor copper Cat5e Ethernet interfaces, always use Cat5e cable that is gel-filled and shielded with copper-plated steel. Alternative types of drop cable are not supported by Cambium Networks.

Pre-Installation Preparation

We recommend completing the following tasks before the site installation.

- Create an inventory of all the necessary equipment and components required for the installation.
- Power up and test all the devices and the supporting components (cameras, switches, power supplies, etc.).
- Update the camera devices to the latest firmware.
- Configure the cameras, hubs and clients prior to site installation.
- Ensure all the necessary documentation is available for the project (user guides, installation layout, network configuration, etc.).

Configuring Key Settings on Hubs and Clients




Note Minimum supported browser version – Chrome v29, Firefox v24, Internet Explorer 11, Safari v5.

Connecting the Hub/Client to the PC and powering up

Use this procedure to connect a management PC directly to the cnVision for configuration and alignment purposes and to power up the cnVision device.

Procedure:

- 1 Connect the Gigabit Data + Power port to the Ethernet port on the cnVision device.
- 2 Connect the PC Ethernet port to the LAN (“Gigabit Data”) port of the power supply using a standard (not crossed) Cat5e Ethernet cable.
- 3 Apply mains or battery power to the power supply. The green Power LED on the power supply must illuminate continuously.

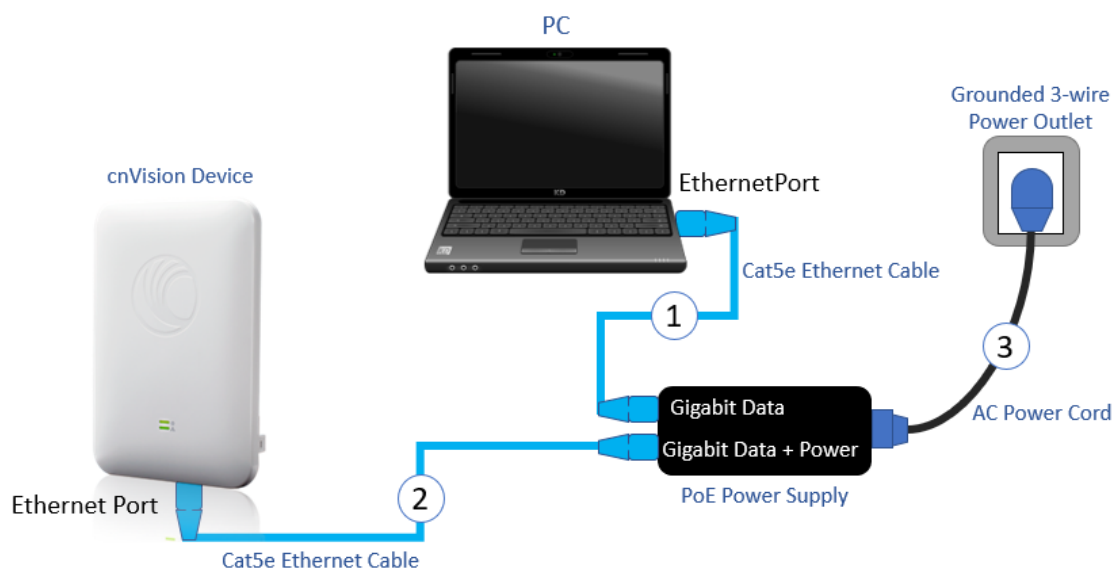

Configuring the management PC

Configure the management PC settings to communicate with the cnVision device.


Procedure:

- 1 Select **Properties** for the Ethernet port.

In Windows 7 and above, this is found in **Control Panel > Network and Internet > Network and Sharing > Change Adapter Settings > Ethernet > Properties**.

- 2 Select the **Internet Protocol Version 4 (TCP/IP IPv4)** item.

- 3 Click **Properties**.

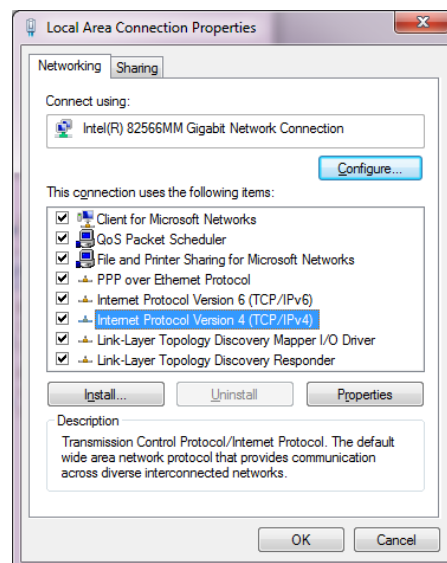


- 4 Enter an IP address that is valid for the 169.254.1.x network, avoiding 169.254.1.1. A good example is 169.254.1.100:

- 5 Enter a subnet mask of 255.255.255.0.

Leave the default gateway blank.


- 6 Click **OK**, then click **Close**.

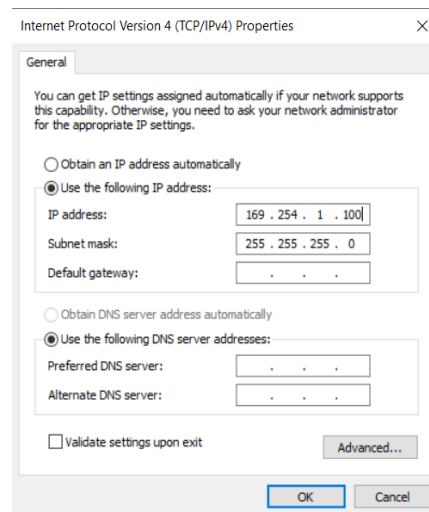

Logging into the Web User Interface


Procedure:

- 1 Open a web browser and enter the device's default IP address (for. ex 169.254.1.1.)



Note If **Device IP address Mode** is set to **DHCP** and the device is unable to retrieve IP address information via DHCP, the device management IP is set to 192.168.0.1 (Hub Mode), 192.168.0.2 (Client mode) or the previously configured static Device IP Address. Units may always be accessed via the Ethernet port at 169.254.1.1.

- 2 Log in to the Web User Interface using the default user name **admin** and password **admin**.

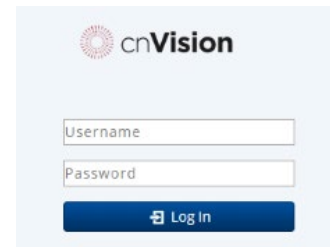

Note New cnVision devices contain default username and password configurations. It is recommended to change these password configurations immediately. These passwords may be configured in the management GUI in section **Configuration > System > Account Management**.

Configuring the Hub - Quick Start

The cnVision devices feature a Quick Setup wizard to configure the key parameters for wireless operations.

1. The wizard setup is accessed from the **Quick Start** menu by clicking the **Start Setup** button.

The screenshot shows the cnVision web interface. On the left is a sidebar with a 'Quick Start' button. The main area has a top bar with 'Hub_360_c84439' and 'Hub'. A 'Start Setup' button is in the top right. Below it are three configuration sections: 'Main' (Radio Mode: Hub, SSID: e510-Hub2, Device Name: Hub_360_c84439, Wireless Security: WPA2, Country: Other), 'Radio' (Operating Frequency: 5240 MHz, Operating Channel Bandwidth: 20 MHz), and 'Network' (IP Assignment: Static, IP Address: 10.120.223.31, Subnet Mask: 255.255.255.0).

2. Click the **Main** tab. In the Main section, configure the following parameters.

The screenshot shows the cnVision web interface with the 'Main' tab selected. The top bar now includes 'Cancel Setup' and 'Finish Setup' buttons. Below the tabs are two input fields: 'Device Name' with the value 'Hub_360_c84439' and 'SSID' with the value 'e510-Hub2'.

Attribute	Meaning
Main	
Device Name	The configured identifier used in Network Management Systems.

Attribute	Meaning
Radio Mode	Hub: Set device as a Hub. Client: Set the device as a Client. (Not available on Hub 360r).
SSID	SSID is a unique identifier for a wireless LAN which is specified in the Hub's beacon. (Hub Mode). SSID must be the same at both ends and different to the site name.

- Click the **Radio** tab to configure the following parameters.

The screenshot shows the cnVision web interface for configuring a Hub. The top navigation bar includes the cnVision logo, the device identifier 'Hub_360_c84439', the role 'Hub', and various system icons. A sidebar on the left lists navigation options: Status, Quick Start, Configuration (selected), Monitor, Tools, and VMS integration. The main configuration area has tabs for Main, Radio (selected), Network, and Security. The Radio tab contains several settings: Country (set to 'Other'), Downlink/Uplink Ratio (radio buttons for 75/25, 50/50, and 30/70, with 30/70 selected), Max Range (set to 3 Miles), Channel Bandwidth (radio buttons for 20 MHz, 40 MHz, and 80 MHz, with 20 MHz selected), and Frequency Carrier (set to 5240 MHz). 'Cancel Setup' and 'Finish Setup' buttons are located at the top right of the configuration area.

Attribute	Meaning
Radio	
Country	Defines the country code being used by the device. The country code of the Hubs and Clients follows the country code of the associated Hub unless it is an FCC SKU in which case the country code is the United States or Canada. Country code defines the regulatory rules in use for the device.
Downlink/Uplink Ratio	The schedule of downlink traffic to uplink traffic on the radio link. The three options, 75/25 , 50/50 and 30/70 , allow the radio to operate in a fixed ratio on every frame. In other words, this ratio represents the amount of the total radio link's aggregate throughput that will be used for downlink resources, and the amount of the total radio link's aggregate throughput that will be used for uplink resources.
Max Range	This parameter represents a cell coverage radius. Hubs and Clients outside the configured radius will not be able to connect. It is recommended to configure Max Range to match the actual physical distance of the farthest client.
Channel Bandwidth	Configure the channel size used by the radio for RF transmission.


Attribute	Meaning
Frequency Carrier	Configure the frequency carrier for RF transmission. This list is dynamically adjusted to the regional restrictions based on the setting of the Country parameter. Ensure that a thorough spectrum analysis has been completed prior to configuring this parameter.

- Click the **Network** tab. Configure the following parameters.

Attribute	Meaning
Network	
IP Assignment	<p>Static: Device management IP addressing is configured manually in fields IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server.</p> <p>DHCP: Device management IP addressing (IP address, Subnet Mask, Gateway, and DNS Server) is assigned via a network DHCP server, and parameters IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server are not configurable.</p>
IP Address	<p>Internet protocol (IP) address. This address is used by the family of Internet protocols to uniquely identify this unit on a network.</p> <p>If the IP Address Assignment is set to DHCP and the device is unable to retrieve IP address information via DHCP, the device management IP is set to fallback IP 192.168.0.1 (Hub) or 192.168.0.2 (Client).</p>
Subnet Mask	<p>Defines the address range of the connected IP network. For example, if the IP Address is configured to 192.168.2.1 and Subnet Mask is configured to 255.255.255.0, the device will belong to subnet 192.168.2.X.</p>

Attribute	Meaning
Gateway	Configure the IP address of the device on the current network that acts as a gateway. A gateway acts as an entrance and exit to packets from and to other networks.
Preferred DNS Server	Configure the primary IP address of the server used for DNS resolution.
Alternate DNS Server	Configure the secondary IP address of the server used for DNS resolution.

- Click the **Security** tab to configure the following parameters.

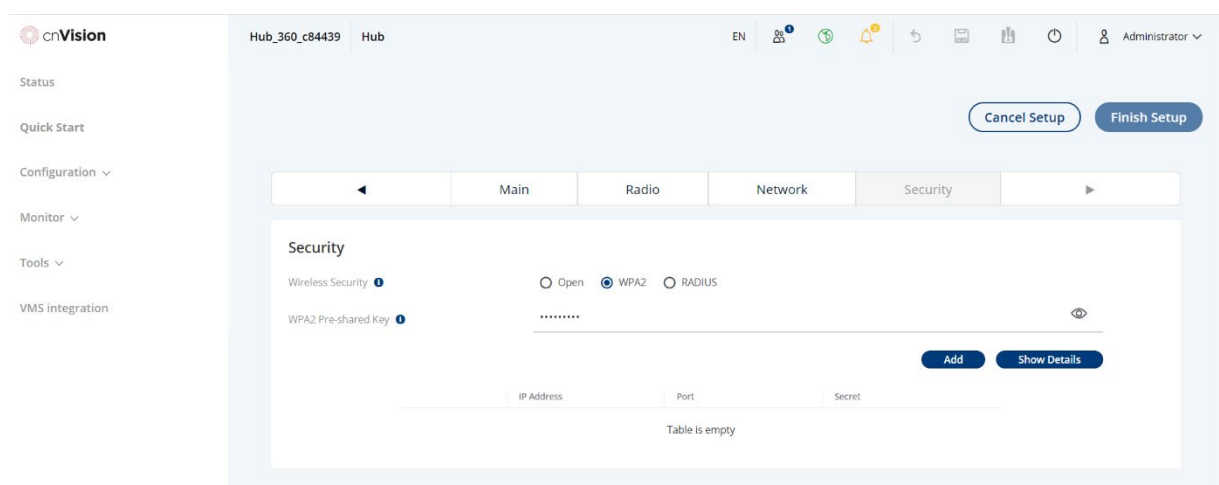

Attribute	Meaning
Security	
Wireless Security	<p>Open: All Hubs and Client devices requesting network entry are allowed registration.</p> <p>WPA2: The WPA2 mechanism provides AES radio link encryption and Client network entry authentication. When enabled, the Client must register using the Authentication Pre-shared Key configured on the Hub and Client.</p>
WPA2 Pre-shared Key	Configure this key on the Hub, then configure the Client with this key to complete the authentication configuration. This key must be between 8 to 128 symbols.

- Click the **Save** button to save the changes.






Configuring the Client – Quick Start

1. The setup is accessed from the **Quick Start** menu by clicking the **Start Setup** button.
2. Click the **Main** tab. Configure the following parameters.

Attribute	Meaning
Main	
Device Name	The configured identifier used in an NMS.
Radio Mode	This parameter controls the function of the device – All cnVision devices may be configured to operate as a Hub or a Client . (Not available on Hub 360r)
SSID	Unique identifier for the Wireless LAN.

- Click the **Radio** tab. Configure the following parameters.

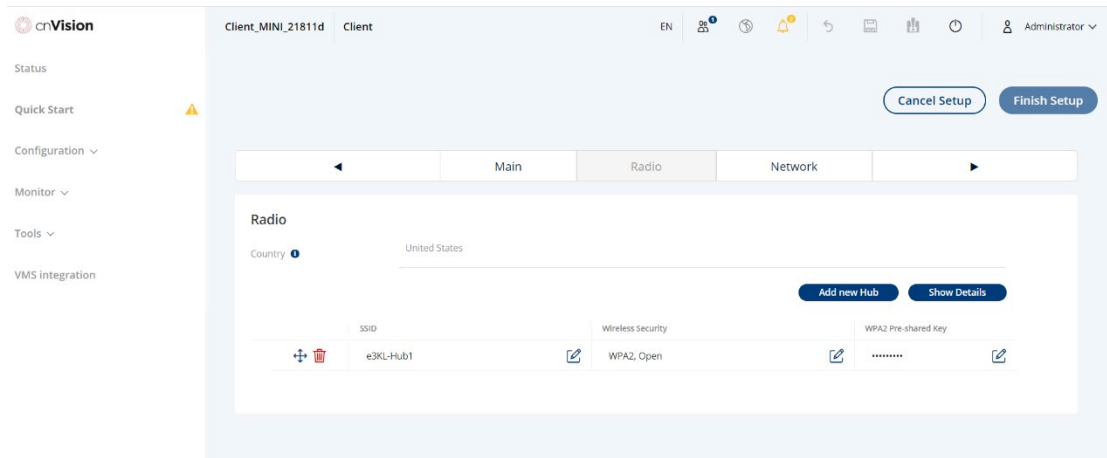

Attribute	Meaning
Radio	
Preferred Hubs	<p>Add new Hub: Click the Add new Hub  button to add a new preferred hub.</p> <p>Show Details: The Show Details  button displays the hub details.</p>
Wireless Security	<p>EAP-TTLS: Configure the EAP-TTLS Username to match the credentials on the RADIUS server being used for the network.</p> <p>WPA2: The WPA2 mechanism provides AES radio link encryption and Client network entry authentication. When enabled, the Client must register using the Authentication Pre-shared Key configured on the Hub and Client.</p> <p>Open: All Client devices requesting network entry are allowed registration.</p>
WPA2 Pre-shared Key	The Preferred Hub's WPA2 Pre-shared Key must be configured on the Client device to match the pre-shared key configured on the Hub for registration with WPA2 security.

4. Click the **Network** tab. Configure the following parameters.

The screenshot shows the cnVision web interface for a client named 'Client_MINI_21811d'. The left sidebar contains navigation links: Status, Quick Start, Configuration (expanded), Monitor, Tools, and VMS Integration. The main area has tabs for Main, Radio, and Network. The Network tab is active, displaying configuration options for Network Mode (NAT or Bridge), IP Assignment (Static or DHCP), and fields for IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server. The current settings are: Network Mode: Bridge, IP Assignment: Static, IP Address: 10.120.223.22, Subnet Mask: 255.255.255.0, Gateway: 10.120.223.254, Preferred DNS Server: 10.120.223.169, and Alternate DNS Server: Alternate DNS Server. Buttons for 'Cancel Setup' and 'Finish Setup' are at the top right.

Attribute	Meaning
Network	
Network Mode	NAT: Translates the IP addresses of computers in a local network to a single IP address. The Client acts as a router, and packets are forwarded or filtered based on their IP header (source or destination) which can be grouped into subnets for finer granularity. Bridge: The Client acts as a switch, and packets are forwarded or filtered based on their MAC destination address.
IP Assignment	Static: Device management IP addressing is configured manually in fields IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server . DHCP: Device management IP addressing (IP address, Subnet Mask, Gateway, and DNS Server) is assigned via a network DHCP server, and parameters IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server are not configurable.
IP Address	Internet protocol (IP) address. This address is used by the family of Internet protocols to uniquely identify this unit on a network.

Attribute	Meaning
	If IP Address Assignment is set to DHCP and the device is unable to retrieve IP address information via DHCP, the device management IP is set to fallback IP 192.168.0.1 (Hub) or 192.168.0.2 (Client).
Subnet Mask	Defines the address range of the connected IP network. For example, if the IP Address is configured to 192.168.2.1 and Subnet Mask is configured to 255.255.255.0 , the device will belong to subnet 192.168.2.X .
Gateway	Configure the IP address of the device on the current network that acts as a gateway. A gateway acts as an entrance and exit to packets from and to other networks.
Preferred DNS Server	Configure the primary IP address of the server used for DNS resolution.
Alternate DNS Server	Configure the secondary IP address of the server used for DNS resolution.

- Click the **Save** button to save the changes.







Configuring ONVIF Settings on Cameras

cnVision supports ONVIF compliant cameras by default. However, some camera manufacturers disable the “ONVIF” settings by default. Navigate to the camera’s configuration page and enable the “ONVIF” settings. Refer to the camera’s user guide for details or visit their support site for assistance.

Make sure the camera is ONVIF compliant. A list of ONVIF compliant devices can be found here.

<https://www.onvif.org/conformant-products/>

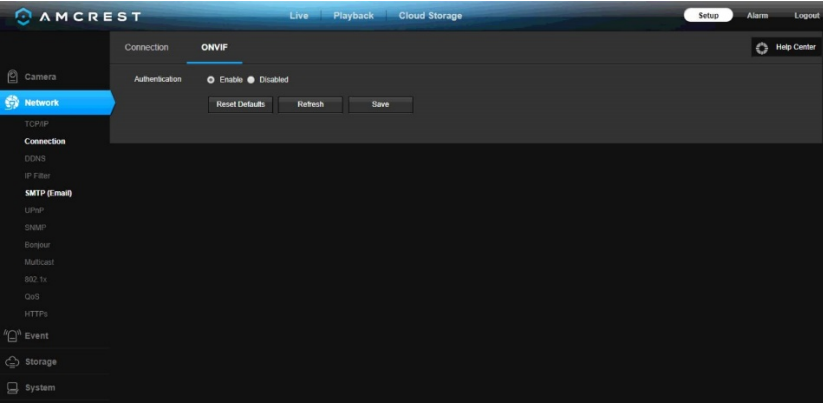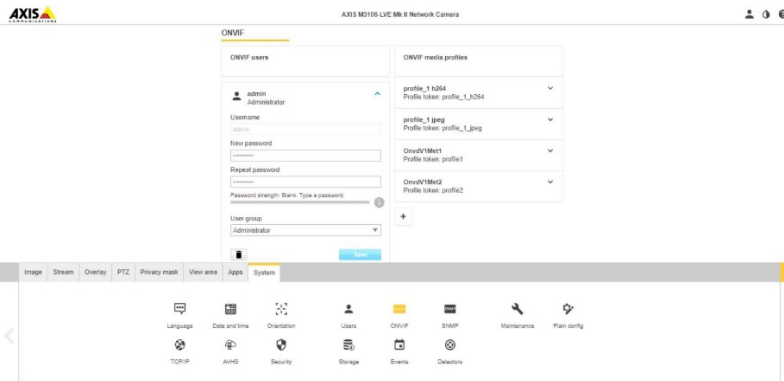Camera Manufacturer	Configuration Screen	
Amcrest	Network > Connection > ONVIF	
Axis	System tab > ONVIF	
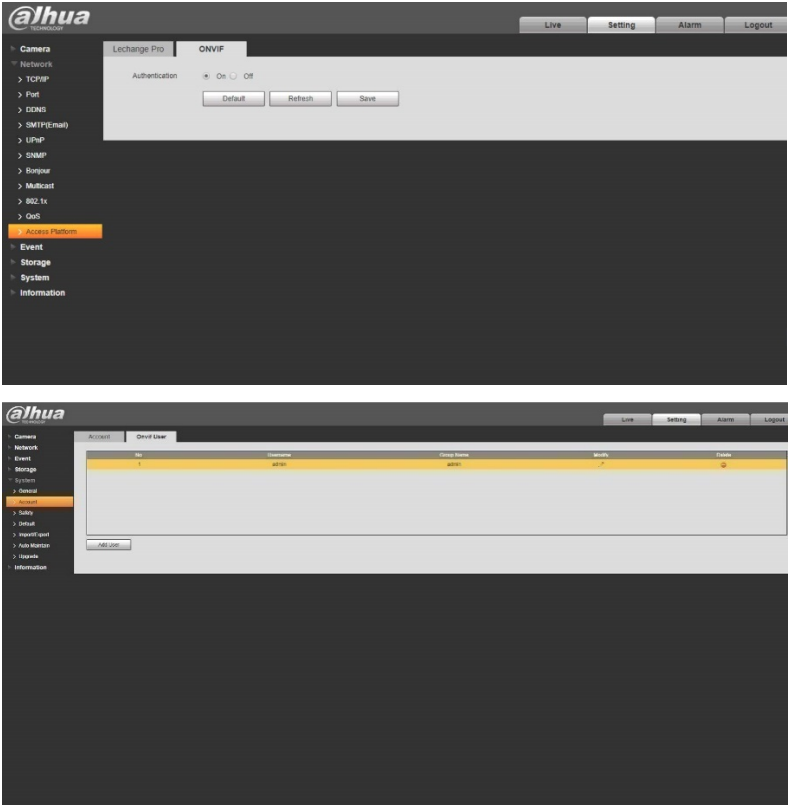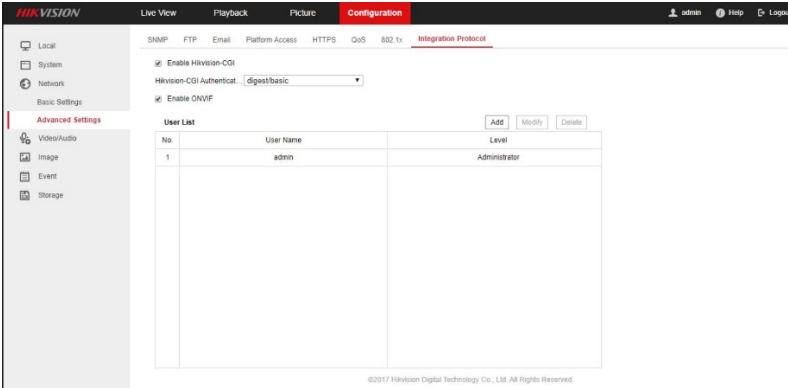
<p>Dahua</p>	<p>1. Setting tab > ONVIF tab to enable ONVIF</p> <p>2. Setting tab > Account > ONVIF User > Add ONVIF user</p>	
<p>HKVision</p>	<p>Advanced Settings > Configuration</p>	

Site installation

A cnVision site installation may consist of a high supporting structure such as a mast, tower or building for the devices.

Find a location for the device that meets the following requirements:

- The equipment is high enough to achieve a clear line of sight between the hubs and clients.
- People can be kept a safe distance away from the equipment when it is radiating.
- The equipment is lower than the top of the supporting structure (tower, mast or building) or its lightning air terminal.
- There is one Ethernet interface, a copper Cat5e connection from the device to the power supply and network terminating equipment.
- Grounding locations on masts, poles, buildings, or towers to ground the cnVision devices.


Mounting Instructions

Pole or Tower Mount Guidelines

If you need to install the device to a metal tower or pole, then in addition to the general protection requirements, follow the below requirements:


- Ensure that the position of the equipment is lower than the top of the tower or its lightning air terminal.
- Ensure that the metal tower or pole is correctly grounded.
- Install a NEMA enclosure to house sensitive components.
- Ground all devices and enclosures to the pole or structure.

HUB FLEXr Pole Mount

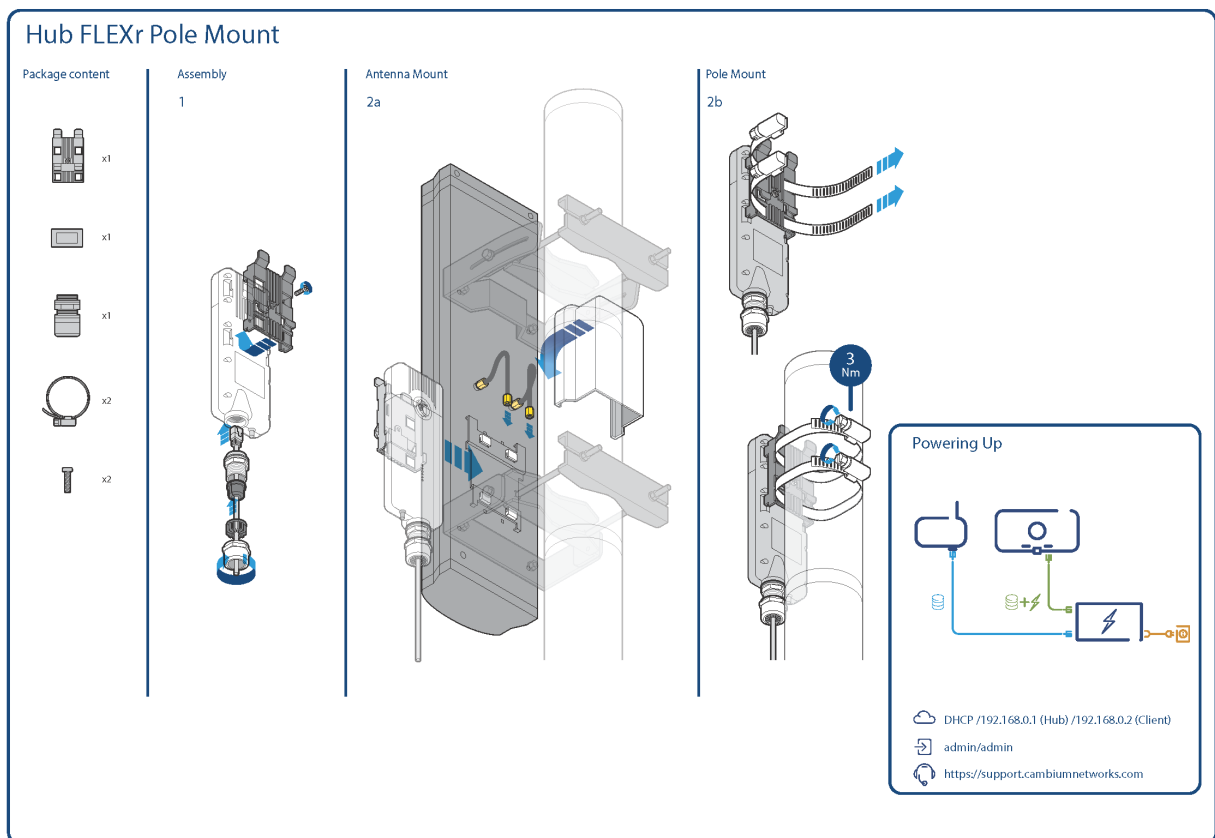


HUB 360r Pole Mount


Package Content




x1



x2




x1




x4

Hub 360R Pole Mount

1

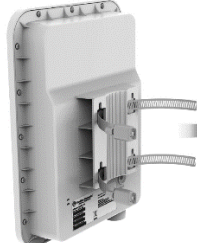


1a

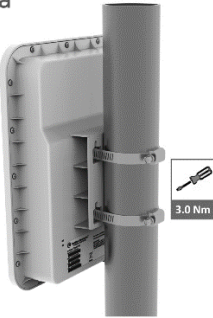

3.0 Nm


Wall Mount

2

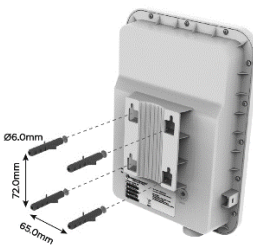


66.0mm
 72.0mm
 65.0mm

2a

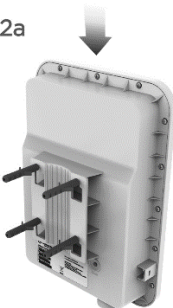


Cable Assembly


3a




3b



3c




3d




Cable Mount

4




4a




2.0 Nm

Powering up




DHCP/192.168.0.1
 admin/admin
<http://support.cambiumnetworks.com>

CLIENT MAXr Pole Mount

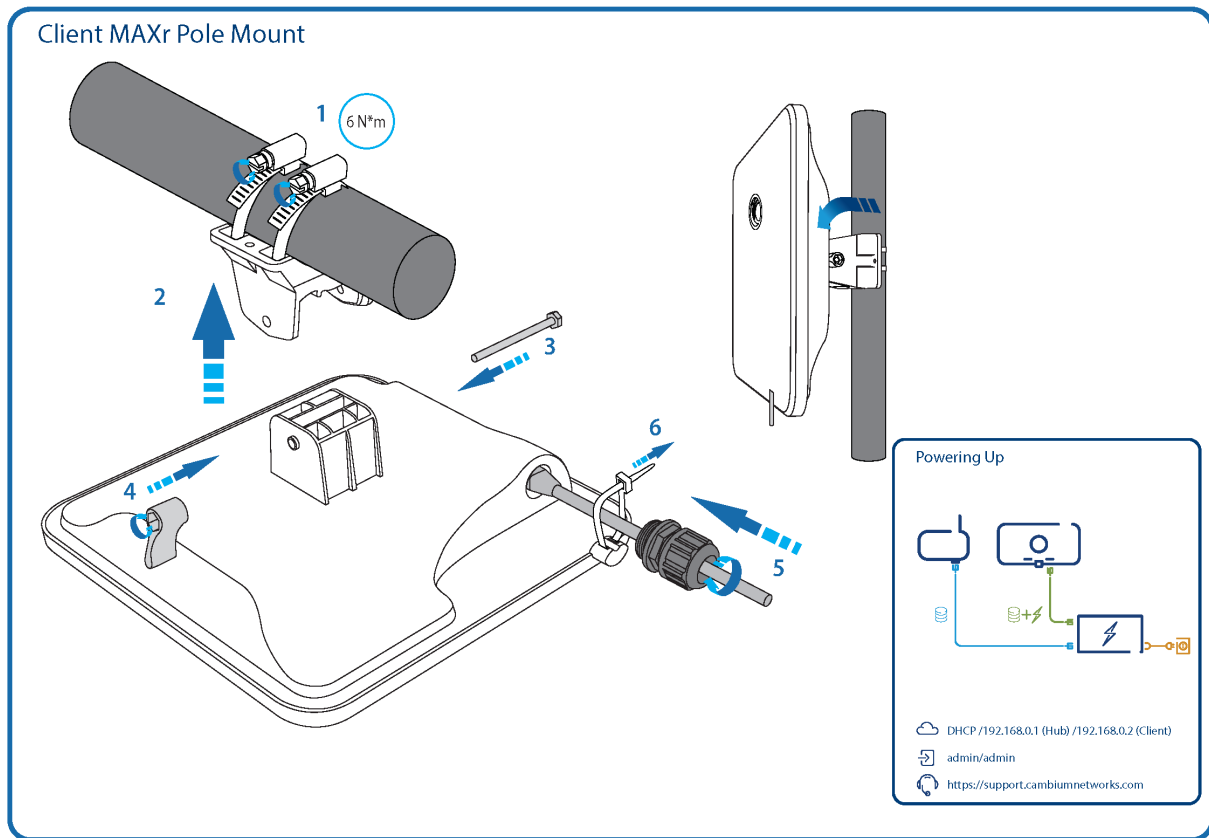


CLIENT MINI

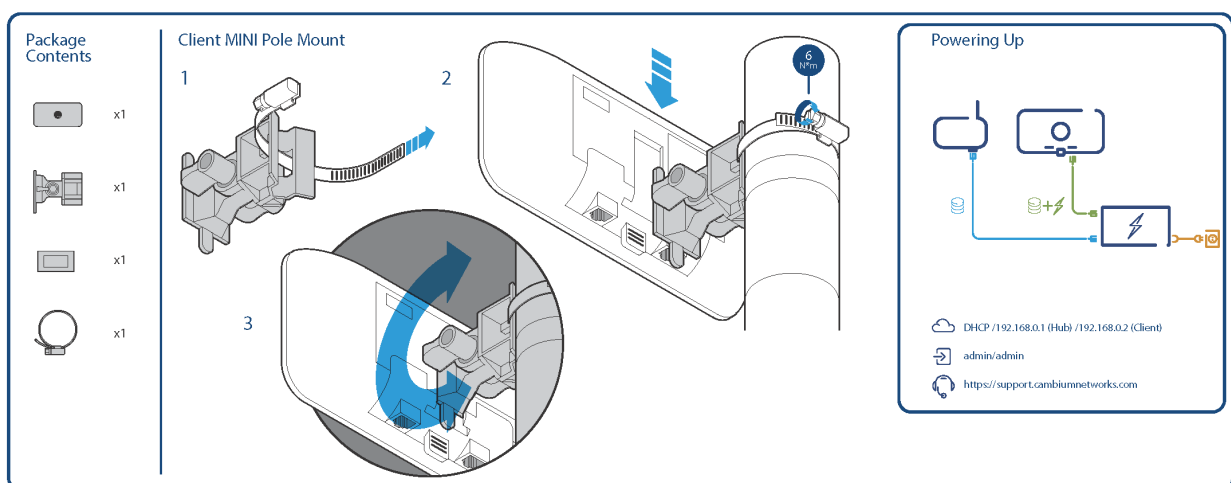


CLIENT MICRO

Client MICRO Pole Mount


1

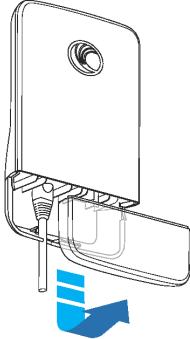


2

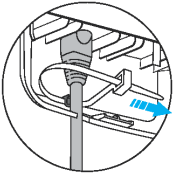


3

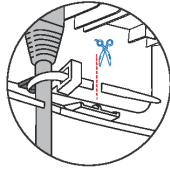


4

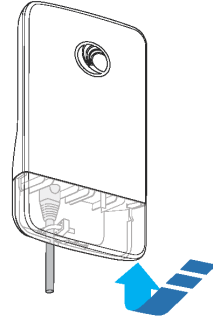

5

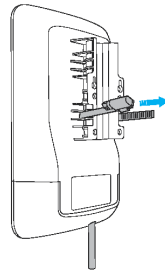

6

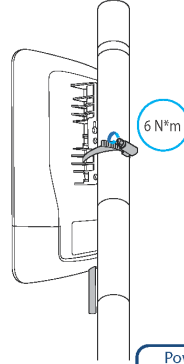

Package Content




x1



x1

Powering Up

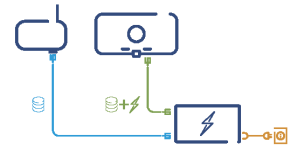

☁ DHCP /192.168.0.1 (Hub) /192.168.0.2 (Client)


🔑 admin/admin

🗣 <https://support.cambiumnetworks.com>

Wall or Roof Mount Guidelines

If you need to install the device on the wall or on the roof of a building, then in addition to the general protection requirements, follow the below requirements:

- Ensure that the position of the equipment is lower than the top of the building or its lightning air terminal.
- Ensure that the building/mounting location is properly grounded.
- Ground all devices and enclosures to the structure.

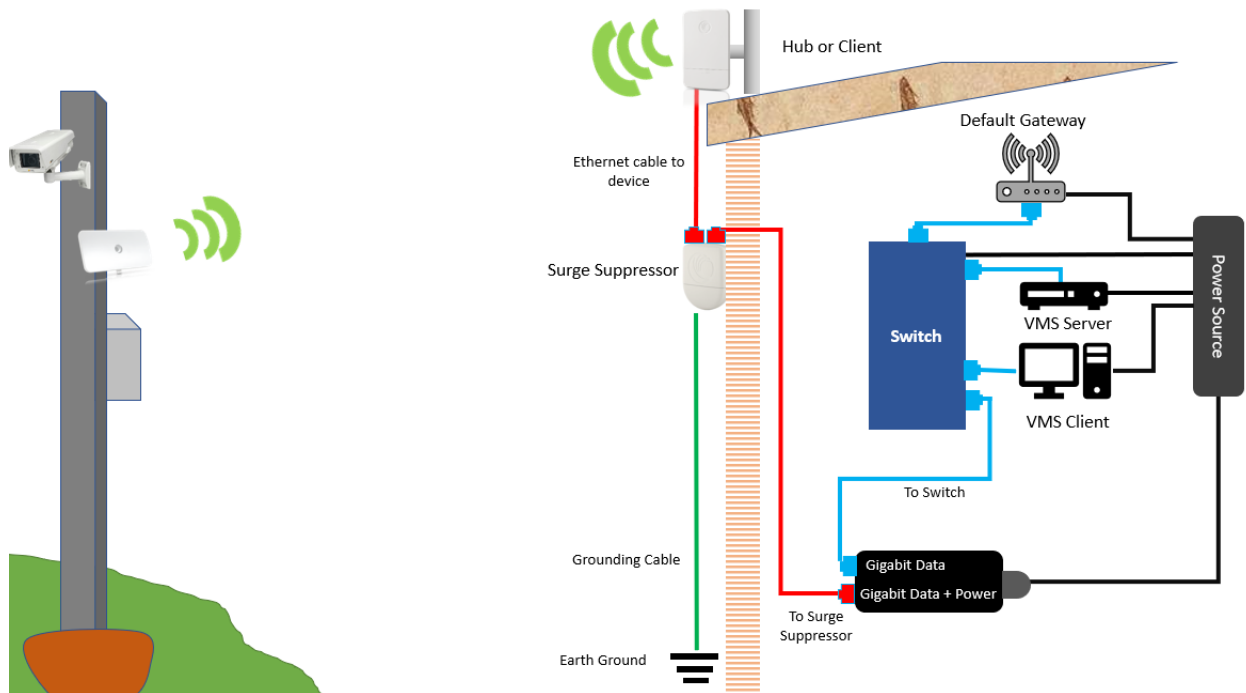

Connecting Devices


Connecting a single camera to a Client

Note:

- Use Outdoor rated Cat5e RJ45 cables if exposed to the elements.
- cnVision devices cannot provide enough power directly to the cameras. Use an external power supply provided by the camera manufacturer.
- Use a NEMA enclosure to house all devices and components that are not rated for outdoor use.

Procedure:

1. Connect a Cat5e Ethernet cable to the Gigabit Data port on the cnVision device power supply to the camera's LAN port.
2. Connect a Cat5e Ethernet cable to the Gigabit Data + Power port on the power supply to the surge suppressor
3. Connect a Cat5e Ethernet cable from the surge suppressor second LAN port to the client's LAN port.
4. Connect an external power supply to the camera's power input.
5. Connect the ground cable from the surge suppressor to the mounting structure.
6. Connect the ground cable from the NEMA enclosure to the mounting structure.
7. Connect the AC cords to the power supplies and the mains.

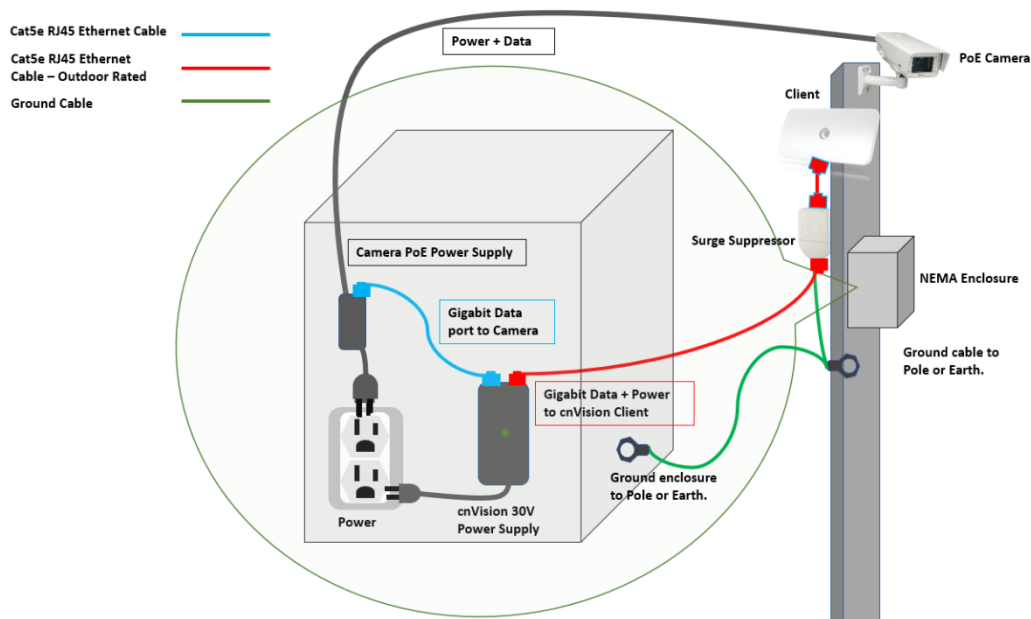


Connecting multiple cameras to a Client

Note:

- Use Outdoor rated Cat5e RJ45 cables if exposed to the elements.
- Use a NEMA enclosure to house all devices and components that are not rated for outdoor use.

Procedure:

1. Connect a Cat5e Ethernet cable to the Gigabit Data port on the cnVision device power supply to the PoE switch.
2. Connect a Cat5e Ethernet cable to the Gigabit Data + Power port on the power supply to the surge suppressor.
3. Connect a Cat5e Ethernet cable from the surge suppressor second LAN port to the client's LAN port.
4. Connect Cat5e cables from the PoE switch ports to each camera's LAN port.
5. Connect the ground cable from the surge suppressor to the grounding point on the mounting structure.
6. Connect the ground cable from the NEMA enclosure to the grounding point on the mounting structure.
7. Connect the AC cords to the power supplies and the mains.

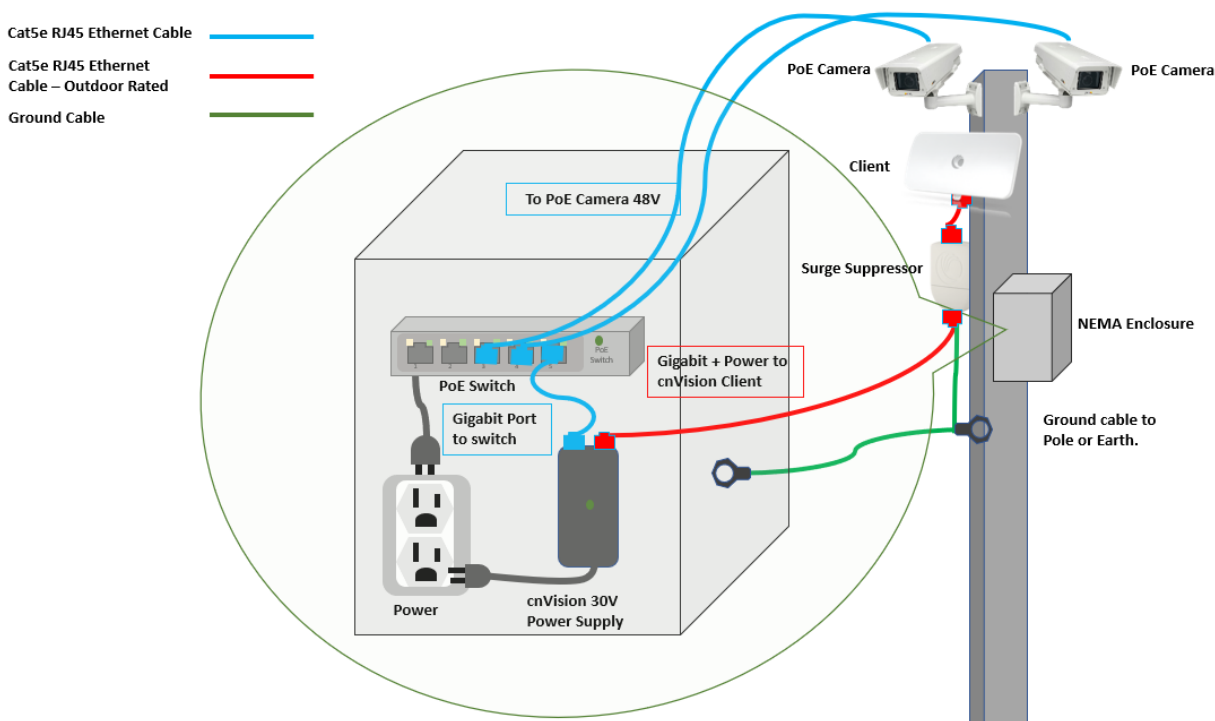


Connecting a Hub or a Client

Note:

- Use Outdoor rated Cat5e RJ45 cables if exposed to the elements.
- Use a NEMA enclosure to house all devices and components that are not rated for outdoor use.

Procedure:

1. Connect a Cat5e Ethernet cable to the Gigabit Data port on the cnVision device power supply to the switch.
2. Connect a Cat5e Ethernet cable to the Gigabit Data + Power port on the power supply to the surge suppressor LAN port.
3. Connect a Cat5e Ethernet cable from the surge suppressor second LAN port to the hub's LAN port.
4. Connect Cat5e cables from the PoE switch ports to each camera's LAN port.
5. Connect the ground cable from the surge suppressor to the grounding point on the mounting structure.
6. Connect the ground cable from the NEMA enclosure (if used) to the mounting structure.
7. Connect the AC cords to the power supplies and the mains.

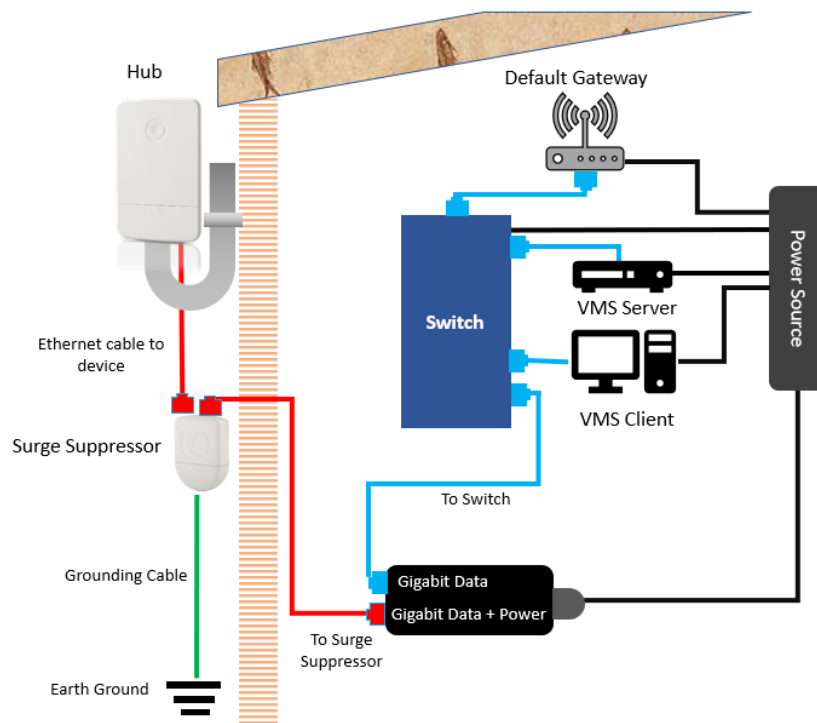


Antenna Alignment

The hub and client antennas should be aligned correctly for the best performance. Only align one device at a time.

Establishing Links

Hub 360r, Hub FLEXr

- The Hub 360r uses an integrated Omnidirectional antenna and transmits in all directions, so no additional adjustments are required after the device has been mounted. The Hub FLEXr uses a directional type antenna which provides a more focused pattern and increased coverage. An optional Horn Antenna can be added to Hub FlexR to provide excellent noise rejection and increased throughput.

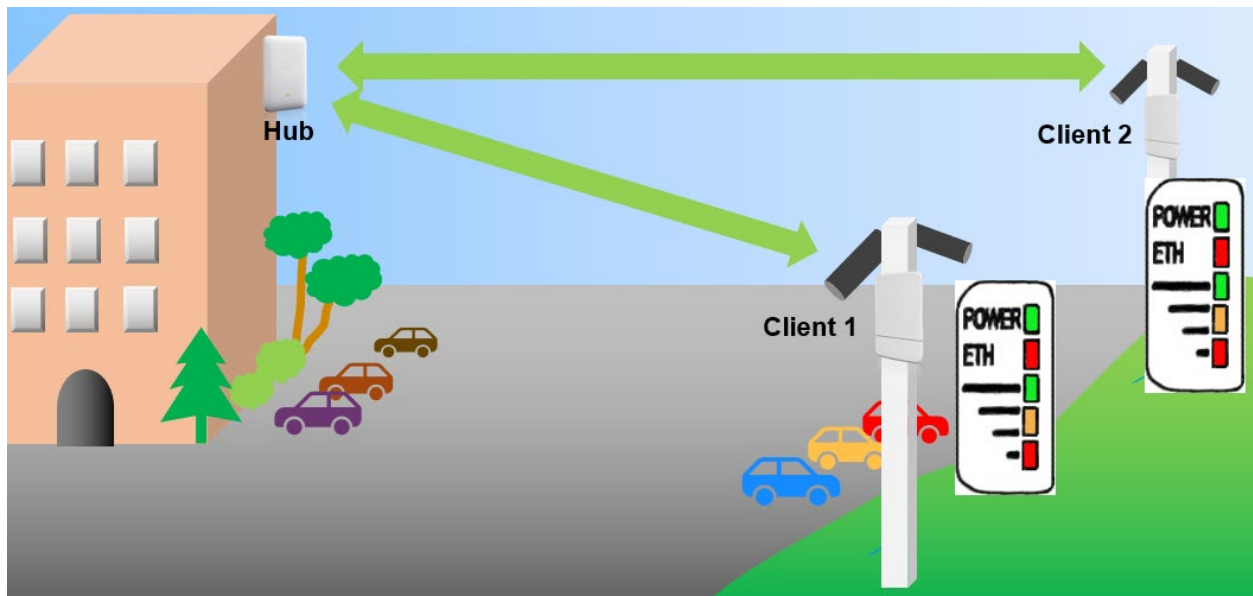


Client MAXr, Client MINI, Client MICRO


1. Visually point the Client antennas at the Hub to achieve the strongest signal. Each client contains LEDs that display the signal strength. Adjust the client up, down, left or right to achieve the highest signal level. Do not tighten the Client yet.



LED	Function
POWER	Green: Power is applied to the device
	Unlit: No power is applied to the device or improper power source
ETH	Ethernet port indicator
	Once lit, blinking indicates Ethernet activity
	Green: 10/100/1000 BaseTX link
RF SIGNAL	Radio scanning: LEDs light in an ascending sequence to indicate that the radio is scanning
	Radio registered: LEDs light to indicate the RSSI level at the device.

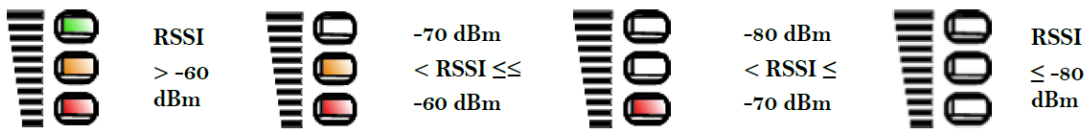

2. Connect a laptop to the Client. Open a web browser and enter the Client's IP Address in the Address bar. Log in to the Web User Interface.
3. Navigate to the **Tools > eAlign** screen. The RSSI bar displays the signal strength, adjust the Client to obtain the strongest signal. The further the signal bar moves to the right, the stronger the signal strength.

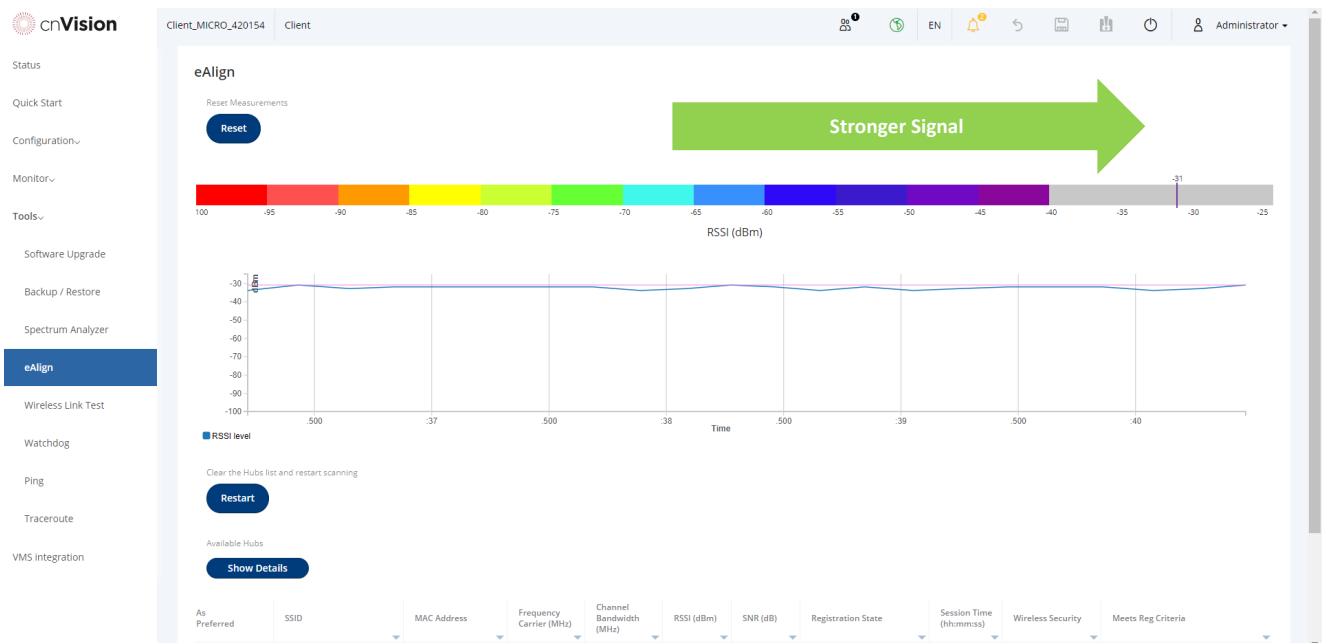

4. Tighten the device once the alignment is complete.

Chapter 5: Using the Web User Interface

This chapter describes all configuration and alignment tasks that are performed when a cnVision system is deployed.











Configure the units by performing the following tasks:

- [Understanding the Toolbar Menu](#)
- [Using the Navigation Menu options](#)

Toolbar Menu

The tool menu at the top of the Web User Interface page provides key information and administrator level functions.

Toolbar Menu

Icon	Name	Description
	Language Settings	Set the default language. <ul style="list-style-type: none"> English (default) Spanish Turkish
	Active Users	Displays the total number of users logged in to the device's Web User Interface.
	Internet Connectivity	Indicates whether the device has internet connectivity. <ul style="list-style-type: none"> Green: Internet connectivity Gray: No Internet connectivity
	GPS (HUB FLEXR only)	Displays GPS connectivity.
	Notifications	Displays system and action notifications.
	Undo Button	Undo All unsaved changes.
	Save Button	Saves changes.
	Temporary Save Button	Allows to temporarily save changes and test before applying them using the Save button.
	Reboot Device	Reboots the device.
 Administrator ▾	Administrator > Log Out	Logs out of the Web User Interface.


Using the Navigation Menu Options

Use the menu navigation bar in the left panel to navigate to each web page. Some of the menu options are only displayed for specific system configurations.



Navigation Menu options and web pages

Main menu	Menu option	Web page description
Status		Status page
Quick Start		Quick Start Wizard
Configuration		Configuration menu
	Radio	Configuration > Radio page
	System	Configuration > System page
	Network	Configuration > Network page
Monitor		Monitor menu
	Performance	Monitor > Performance page
	System	Monitor > System page
	Wireless	Monitor > Wireless Page
	Throughput Chart	Monitor > Throughput Chart
	GPS	Monitor > GPS page (Hub Mode)
	Network	Monitor > Network page
	System Log	Monitor > System Log Page
Tools		Tools menu
	Software Upgrade	Tools > Software Upgrade
	Backup / Restore	Tools > Backup/Restore page
	Spectrum Analyzer	Tools > Spectrum Analyzer page
	Wireless Link Test	Tools > Wireless Link Test page
	Watchdog	Tools > Watchdog page
	Ping	Tools > Ping page
	Traceroute	Tools > Traceroute page
VMS Integration		VMS Integration

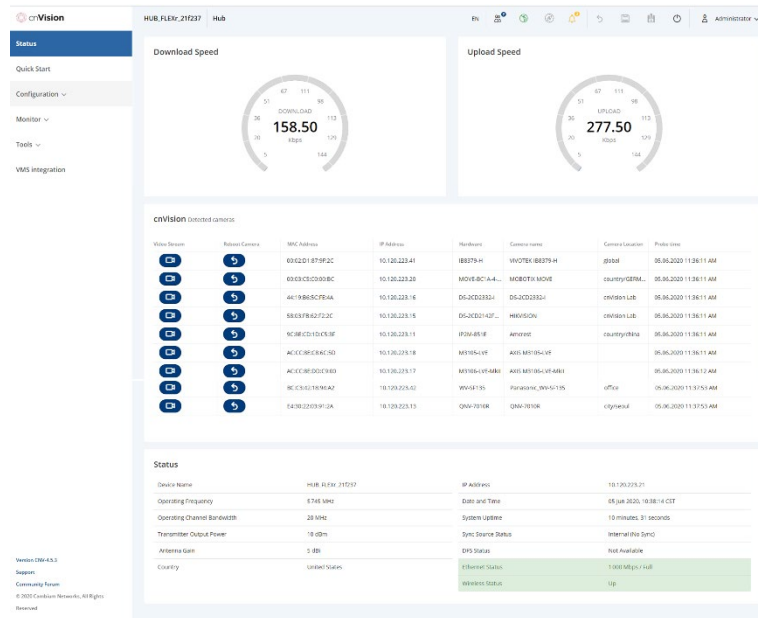Status page



Status page attributes

Attribute	Meaning
Status	
Download Speed	This is the total amount of traffic currently passing from Hub to Client in Kbits.
Upload Speed	This is the total amount of traffic currently passing from Client to Hub in Kbits.
Detected Cameras	<p>This section lists ONVIF compliant cameras connected to the system and provides the hardware and network details for each camera. You can perform the following camera operations:</p> <p>View the video stream </p> <p>Reboot the camera </p>
Status	Displays key parameters such as the operating frequency, channel bandwidth, system time, uptime, Ethernet and wireless status.

Quick Start

See [Configuring the Hub](#)
[Configuring the Client](#)

Configuration menu

Use the **Configuration** menu to access and change all device configuration parameters.

Configuration > Radio page

(Hub Mode -Hub FLEXr)

The screenshot displays the CNVision configuration interface for a Hub device. The left sidebar contains navigation options: Status, Quick Start, Configuration (selected), Radio (selected), System, Network, Security, Monitor, Tools, and VMS integration. The main content area is titled 'HUB_FLEXr_21f237 | Hub' and shows the following configuration sections:

- General:** Radio Mode (Hub), Country (United States), Range Unit (Miles).
- Traffic ratio:** Downlink/Uplink Ratio (75/25, 50/50, 30/70).
- Wireless MAC Address Filtering:** Wireless MAC Filter (Disabled, Enabled).
- Hub Configuration:** SSID (e3KL-Hub1), Channel Bandwidth (20 MHz, 40 MHz, 80 MHz), Frequency Carrier (5745 MHz), Max number of client allowed (32), Max Range (3).
- Power Control:** Transmitter Output Power (10), Antenna Gain (5), Client Target Receive Level (-40).
- Synchronization:** Synchronization Source (GPS, CMM5, Internal (No Sync)), Synchronization Holdoff Time (1000).

Configuration > Radio page attributes

Attribute	Meaning
General	
Radio Mode	<p>Hub: The unit controls the point-to-point link and its maintenance. On startup, the Hub transmits until a link with the Client is made.</p> <p>Client: The unit listens for its peer and only transmits when the peer has been identified.</p>
Country (Hub Mode)	Defines the country code being used by the device. The country code of the Client follows the country code of the associated Hub unless it is an FCC SKU in which case the country code is the United States or Canada. Country code defines the regulatory rules in use for the device.
Range Unit (Hub Mode)	Units of measurement on the device are displayed in either miles (m) or kilometers (km).
Power Control (Hub)	

Attribute	Meaning
Transmitter Output Power (Hub)	Transmitter Output Power is the total transmit power of the device. The Hub 360R device has four transmit chains and total transmit power sums the power from all chains. The HUB FLEXr supports two chains. This does not include antenna gain. Transmitter Output Power may be limited by regulatory rules for the country in use.
Antenna Gain	
Client Target Receive Level	<p>This setting sets the desired receive power level at the Hub from registered Clients. Hubs use this parameter to control the transmission power of their Clients to reduce the system's self-interference.</p> <p>In a GPS synchronized frequency re-use deployment, it is a requirement to set the Target Receive Level (TRL) identical across all Hubs in neighboring sectors and towers.</p>
Traffic Ratio (Hub)	
Downlink/Uplink Ratio	The schedule of downlink traffic to uplink traffic on the radio link. The three options, 75/25 , 50/50 and 30/70 , allow the radio to operate in a fixed ratio on every frame. In other words, this ratio represents the amount of the total radio link's aggregate throughput that will be used for downlink resources, and the amount of the total radio link's aggregate throughput that will be used for uplink resources.
Wireless MAC Address Filtering	
Wireless MAC Filter	<p>Disabled: Disable MAC address filtering.</p> <p>Enabled: Enable MAC address filtering.</p>
Hub Configuration	
SSID	SSID is a unique identifier for a wireless network that is specified in the Hub's beacon (Hub mode). The SSID must be the same at both ends and different from the device name.
Wireless Security	There are two ways to authenticate a Client with a Hub. These are " <u>WPA2</u> " and "Open". The Hub via the beacon will specify the authentication method it uses, and this Client must have the matching authentication method selected in order for authentication to occur. The Client may allow any or all of the authentication methods to be selected. This allows the user to specify minimum levels of authentication security to the Hub.
	The " <u>WPA2</u> Pre-shared Key" is used when the <u>WPA2</u> authentication selection is utilized between the Client and the Hub. The key here must exactly match the key entered on the Hub. This key must be between 8 and 63 symbols.
Channel Bandwidth	Configure the channel size used by the radio for RF transmission.
Max Number of Clients allowed	Enter the number of Clients allowed to connect to the Hub. (min 1 - max 64).

Attribute	Meaning
Frequency Carrier (Hub mode)	Configure the frequency carrier for RF transmission. This list is dynamically adjusted to the regional restrictions based on the setting of the Country parameter. Ensure that a thorough spectrum analysis has been completed prior to configuring this parameter.
Max Range	This parameter represents the cell coverage radius. Clients outside the configured radius will not be able to connect. It is recommended to configure Max Range to match the actual physical distance of the farthest Client.
Synchronization (Hub Mode) HUB FLEXr only	
Synchronization Source (Hub Mode)	<p>GPS: Synchronization timing is received via the Hub's connected GPS antenna. Co-located or in-range Hubs receiving synchronization via GPS or CMM transmits and receives at the same time, thereby reducing self-interference.</p> <p>CMM5: Synchronization timing is received via the Hub's Ethernet port via a connected Cambium Cluster Management Module 5 (CMM5). Co-located or in-range Hubs receiving synchronization via GPS or CMM will transmit and receive at the same time, thereby reducing self-interference.</p> <p>If a CMM is being used, verify that the cables from the CMM to the network switch are at most 30 ft (shielded) or 10 ft (unshielded) and that the network switch is not PoE (802.3af).</p> <p>Internal: Synchronization timing is generated by the Hub and the timing is not based on GPS pulses.</p> <p>Hubs using Synchronization Source of Internal will not transmit and receive in sync with other co-located or in-range Hubs, which introduces self-interference into the system.</p>
Synchronization Holdoff Time (Hub Mode)	<p>The Synchronization Holdoff Time is designed to gracefully handle fluctuations/losses in the GPS synchronization signaling. After the Hub has received a reliable synchronization pulse for at least 60 seconds, if there is a loss of synchronization signal, the Synchronization Holdoff timer is started. During the holdoff interval, all Client registrations are maintained.</p> <p>If a valid GPS synchronization pulse is regained during the holdoff interval, then the Hub continues to operate normally. If a valid synchronization pulse is not regained from the GPS source during the holdoff interval, then the Hub ceases radio transmission. The default is 30 seconds.</p>
General (Client Mode)	
Radio Mode	
Preferred Hubs list (Client Mode)	The Preferred Hubs List is comprised of a list of up to 16 Hub devices to which the Client device sequentially attempts registration. For each Hub configured, if authentication is required, enter the Wireless Security type and WPA2 Pre-shared Key associated with the configured SSID .
Power Control (Client Mode)	

Attribute	Meaning
Max Tx Power (Client Mode)	The Transmitter Output Power is the total transmit power of the Hub. The Hub has two transmit chains, and total transmit power sums the power from both chains. This does not include antenna gain. The Transmitter Output Power may be limited by regulatory rules for the country in use.
Antenna Gain	The total gain of the antenna in use by the device. Incorrect antenna value may impact total EIRP and Tx Power value due to the regulatory limit.

Configuration > System page

Configuration > System page - General

cnVision HUB_FLEXr_21f237 Hub EN Administrator

General

Device Name * HUB_FLEXr_21f237

Display Device Name Before Login ☐ Disabled ☒ Enabled

Inactive Logout * ☐ Disabled ☒ Enabled

Inactive Logout Period * 10
Minutes | Min 5 - Max 60

Web-page Auto Update * 5
Sec | Min 2 - Max 20

Web Access ☒ HTTP ☐ HTTPS

HTTP Port 80
Min 1 - Max 65535

SSH Access ☐ Disabled ☒ Enabled

SSH Server Port 22
Min 1 - Max 65535

Telnet Access ☒ Disabled ☐ Enabled

Telnet Server Port 23
Min 1 - Max 65535

MAC-Telnet Access ☐ Disabled ☒ Enabled

MAC-Telnet Protocol ☒ MAC-Telnet ☐ MAC-SSH

Configuration > System page - Network Time Protocol/Location Services

Tools VMS integration

Network Time Protocol (NTP)

NTP Server IP Assignment ☒ Static ☐ DHCP

Preferred NTP Server 10.120.12.30

Alternate NTP Server 10.120.12.31

Time Zone (UTC-06) CST - Central Standard Time (North America)

Location Services

On-board GPS Latitude N/A

On-board GPS Longitude N/A

On-board GPS Height N/A

Use GPS Coordinates **Update**

Device Latitude 42.053768
Degrees | Min -90 - Max 90

Device Longitude -88.026115
Degrees | Min -180 - Max 180

Device Height 193.3
Meters | Min -20000 - Max 20000

Device Location **Open in Google Maps**

Configuration > System page – SNMP/System Logging (Syslog)

Simple Network Management Protocol (SNMP)

Read-Only Community String ☒ public

Read-Write Community String ☒ private

Traps ☒ Disabled ☐ Enabled

Trap Community String ☒ cambiumtrap

System Name CambiumNetworks

System Description System Description

System Location System Location

System Logging (Syslog)

Server 1 Server 1

Server 2 Server 2

Server 3 Server 3

Server 4 Server 4

SysLog Mask ☒ Info ☒ Alerts ☒ Notices ☒ Emergency ☒ Warnings ☒ Errors

[Select All](#) [Unselect All](#)

Configuration > System page – Account Management

Account Management

Administrator Account ☐ Disabled ☒ Enabled

Username admin

Password

Home User Account ☐ Disabled ☒ Enabled

Username home

Password

Installer Account ☐ Disabled ☒ Enabled

Username installer

Password

Read-Only Account ☐ Disabled ☒ Enabled

Username readonly

Password

Version CNV-4.5.3

Support



Community Forum




© 2020 Cambium Networks, All Rights Reserved



Configuration > System page attributes

Attribute	Meaning
General	
Device Name	The configured identifier used in a Network Management Station (NMS).
Display Device Name Before Login	<p>Disabled: For security, the configured Device Name is hidden on the device login screen.</p> <p>Enabled: The configured Device Name is displayed upper-left on the device login screen.</p>
Inactive Logout	<p>Disabled: The device will not automatically log out users after a period of inactivity.</p> <p>Enabled: After the period configured in the Inactive Logout Period has elapsed, the device will automatically log out the user.</p>
Inactive Logout Period	Represents the amount of time for which a user will remain logged in. After this period has elapsed, the user will be automatically logged out.

Attribute	Meaning
Web-page Auto Update	<p>Configure the interval for which the device retrieves system statistics for display on the management interface. For example, if this setting is configured to 5 seconds, the statistics and status parameters displayed on the management interface will be refreshed every 5 seconds (default).</p> <p>Changes made to this field are effective immediately.</p>
Web Access	<p>HTTP: The device web management interface is accessed via HTTP.</p> <p>HTTPS: The device web management interface may only be accessed via secure HTTPS.</p>
HTTP Port	This specifies the TCP/UDP port to be used with HTTP or HTTPS. The default value for HTTP is 80 and HTTPS is 443.
SSH Access	<p>Disabled: Access to the device through SSH is not possible.</p> <p>Enabled: Cambium engineers can access the device through SSH which enables them to log in to the radio and troubleshoot. SSH Access is Enabled by default.</p>
SSH Server Port	This specifies the SSH port.
Telnet Access	<p>Disabled: Command Line Interface access via Telnet is not allowed</p> <p>Enabled: Command Line Interface access via Telnet is allowed</p>
MAC-Telnet Access	<p>MAC-Telnet enables connections to the Radio on the link layer via MAC address from RouterOS or mactelnet enabled devices.</p> <p>In order to use MAC-Telnet the first time, the Administrator Account password must be changed on the GUI or the CLI. This password can then be used for MAC-Telnet.</p>
MAC-Telnet Protocol	<p>MAC-Telnet Protocol defines which subservience to use with MAC-Telnet for accessing device:</p> <ul style="list-style-type: none"> Secured MAC-SSH Standard MAC-Telnet remote terminal
Network Time Protocol (NTP)	
NTP Server IP Assignment	<p>Static: The device retrieves NTP time data from the servers configured in fields NTP Server IP Address.</p> <p>DHCP: The device retrieves NTP time data from the server IP issued via a network DHCP server.</p>
Preferred NTP Server	Configure the primary NTP server IP addresses from which the device will retrieve time and date information.
Alternate NTP Server	Configure an alternate or secondary NTP server IP addresses from which the device retrieves time and date information.
Time Zone	The Time Zone option may be used to offset the received NTP time to match the operator's local time zone.


Attribute	Meaning
Location Services	
On-board GPS Latitude	GPS-retrieved Latitude information for the device in decimal format.
On-board GPS Longitude	GPS-retrieved Longitude information for the device in decimal format.
On-board GPS Height	GPS-retrieved height information for the device in meters.
Use GPS Coordinates 	Click Update to retrieve device location and height information via the connected GPS source.
Device Latitude	Configure Latitude information for the device in decimal format.
Device Longitude	Configure Longitude information for the device in decimal format.
Device Height	Configure height above sea level for the device in meters.
Device Location 	Hyperlink to display the device location in Google Maps
Simple Network Management Protocol (SNMP)	
Read-Only Community String	Specify a control string that can allow a Network Management Station (NMS) to read SNMP information. No spaces are allowed in this string. This password will never authenticate an SNMP user or an NMS to read/write access. The Read-only Community String value is clear text and is readable by a packet monitor.
Read-Write Community String	Specify a control string that can allow a Network Management Station (NMS) to access SNMP information. No spaces are allowed in this string.
System Name	Specify a string to associate with the physical module. This parameter can be polled by the NMS. Special characters are supported.
System Description	Specify a description string to associate with the physical module. This parameter can be polled by the NMS. Special characters are supported.
System Location	Specify a description string to associate with the physical location. This parameter can be polled by the NMS. Special characters are supported.
Traps	Disabled: SNMP traps for system events are not sent from the device. Enabled: SNMP traps for system events are sent to the servers configured in table Trap Servers .
Trap Community String	Configure an SNMP Trap Community String which is processed by the servers configured in Trap Servers . This string is used by the trap server to decide whether or not to process the traps incoming from the device (i.e. for traps to successfully be received by the trap server, the community string must match).


Attribute	Meaning
System Logging (Syslog)	
Server 1-4	Specify up to four Syslog servers to which the device sends Syslog messages.
Syslog Mask	<p>Configure the levels of Syslog messages which the devices send to the servers configured in parameters Server 1-4.</p> <p> Caution</p> <p>Choose only the Syslog levels appropriate for your installation. Excessive logging can cause the device log file to fill and begin overwriting previous entries.</p>
Account Management	
Administrator Account	<p>The Administrator account has full read and write permissions for the device.</p> <p>Disabled: The disabled user is not granted access to the device management interface. The administrator user level cannot be disabled.</p> <p>Enabled: The user is granted access to the device management interface.</p>
Username	The username associated with the administrator account used upon device login.
Password	<p>Configure a custom password to secure the device. Only the 'Administrator' account can override this password. The password character display may be toggled using the visibility icon .</p>
Installer Account	<p>The Installer account has permissions to read and write parameters applicable to unit installation and monitoring.</p> <p>Disabled: The disabled user is not granted access to the device management interface.</p> <p>Enabled: The user is granted access to the device management interface.</p>
Username	The username associated with the installer account used upon device login.
Password	<p>Configure a custom password to secure the device. Only the 'Administrator' account can override this password. The password character display may be toggled using the visibility icon .</p>
Home User Account	<p>The Home User account has permission to access pertinent information for support purposes.</p> <p>Disabled: The disabled user is not granted access to the device management interface.</p> <p>Enabled: The user is granted access to the device management interface.</p>
Username	The username associated with the home user account used upon device login.

Attribute	Meaning
Password	Configure a custom password to secure the device. Only the 'Administrator' account can override this password. The password character display may be toggled using the visibility icon  .
Read-Only Account	<p>The Read-Only account has permissions to view the Monitor page only.</p> <p>Disabled: The disabled user is not granted access to the device management interface.</p> <p>Enabled: The user is granted access to the device management interface.</p>
Username	The username associated with the read-only account used upon device login.
Password	Configure a custom password to secure the device. Only the 'Administrator' account can override this password. The password character display may be toggled using the visibility icon  .

Configuration > Network page

Configuration > Network page (Hub)

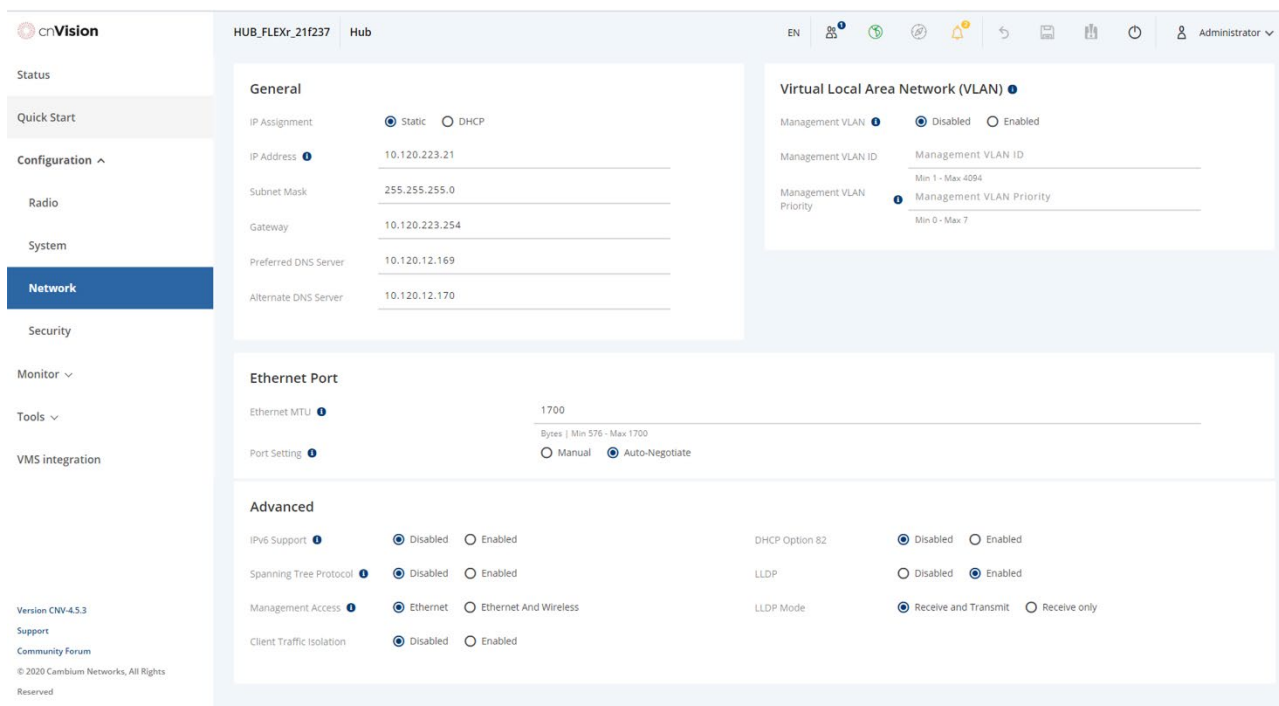

cnVision HUB_FLEXr_21f237 Hub EN  Administrator

Status

Quick Start

Configuration ^

Radio

System

Network

Security

Monitor v

Tools v

VMS integration

Version CNV-4.5.3
Support
Community Forum
© 2020 Cambium Networks, All Rights Reserved

General

IP Assignment ☒ Static ☐ DHCP

IP Address 10.120.223.21

Subnet Mask 255.255.255.0

Gateway 10.120.223.254

Preferred DNS Server 10.120.12.169

Alternate DNS Server 10.120.12.170

Virtual Local Area Network (VLAN)

Management VLAN ☒ Disabled ☐ Enabled

Management VLAN ID Management VLAN ID

Min 1 - Max 4094

Management VLAN Priority Management VLAN Priority

Min 0 - Max 7

Ethernet Port

Ethernet MTU 1700

Bytes | Min 576 - Max 1700

Port Setting ☐ Manual ☒ Auto-Negotiate

Advanced

IPv6 Support ☒ Disabled ☐ Enabled

Spanning Tree Protocol ☒ Disabled ☐ Enabled

Management Access ☒ Ethernet ☐ Ethernet And Wireless

Client Traffic Isolation ☒ Disabled ☐ Enabled

DHCP Option 82 ☒ Disabled ☐ Enabled

LLDP ☐ Disabled ☒ Enabled

LLDP Mode ☒ Receive and Transmit ☐ Receive only

Configuration > Network page (Client Mode)

cnVision Client_MAXr_42054 Client EN Administrator

General

Network Mode ☒ NAT ☐ Bridge

IP Assignment ☒ Static ☐ DHCP

IP Address 10.120.223.32

Subnet Mask 255.255.255.0

Gateway 10.120.223.254

Preferred DNS Server 10.120.12.169

Alternate DNS Server 10.120.12.170

Ethernet Port Security ☒ Disabled ☐ Enabled

Secure MAC Limit 5

MAC Aging Time 300

Seconds | Min:0 - Max:1440

Virtual Local Area Network (VLAN)

Management VLAN ☒ Disabled ☐ Enabled

Management VLAN ID Management VLAN ID

Min 1 - Max 4094

Management VLAN Priority Min 0 - Max 7

Data VLAN ☒ Disabled ☐ Enabled

Data VLAN ID Data VLAN ID

Min 1 - Max 4094

Data VLAN Priority Min 0 - Max 7

Add Show Details

VLAN ID Begin VLAN ID End

Table is empty

Add Show Details

C-VLAN S-VLAN

Table is empty

Ethernet Port

Ethernet MTU 1700

Bytes | Min 576 - Max 1700

Ethernet Port ☒ Disabled ☐ Enabled

Port Setting ☐ Manual ☒ Auto-Negotiate

Advanced

IPv6 Support ☒ Disabled ☐ Enabled

ARP-NAT ☒ Disabled ☐ Enabled

Spanning Tree Protocol ☒ Disabled ☐ Enabled

DHCP Server Below Client ☒ Disabled ☐ Enabled

LLDP ☐ Disabled ☒ Enabled

LLDP Mode ☒ Receive and Transmit ☐ Receive only

Version CNV4.5.3
Support
Community Forum
© 2020 Centium Networks, All Rights Reserved

Configuration > Network page attributes

Attribute	Meaning
General	
Network Mode (Client Mode)	<p>NAT: The Client acts as a router and packets are forwarded or filtered based on their IP header (source or destination).</p> <p>Bridge: The Client acts as a switch and packets are forwarded or filtered based on their MAC destination address.</p>
IP Assignment	<p>Static: Device management IP addressing is configured manually in fields IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server.</p> <p>DHCP: Device management IP addressing (IP address, Subnet Mask, Gateway, and DNS Server) is assigned via a network DHCP server, and parameters IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server are not configurable.</p>
Wireless IP Assignment (NAT Mode)	<p>Static: Wireless IP address is configured manually in fields Wireless IP Address, Wireless IP Subnet Mask, Wireless Gateway IP Address, Preferred DNS IP Address and Alternate DNS IP Address.</p> <p>DHCP: Device management IP addressing (Wireless IP address, Wireless Subnet mask, Wireless Gateway, and DNS server) is assigned via a network DHCP server.</p>

Attribute	Meaning
IP Address Wireless IP Address (NAT Mode)	Internet protocol (IP) address. This address is used by the family of Internet protocols to uniquely identify this unit on a network. If IP Address Assignment is set to DHCP and the device is unable to retrieve IP address information via DHCP, the device management IP is set to fallback IP 192.168.0.1 (Hub) or 192.168.0.2 (Client).
Subnet Mask Wireless IP Address (NAT Mode)	Defines the address range of the connected IP network. For example, if Device IP Address (LAN) is configured to 192.168.2.1 and IP Subnet Mask (LAN) is configured to 255.255.255.0, the device will belong to subnet 192.168.2.X.
Gateway Wireless Gateway (NAT Mode)	Configure the IP address of the device on the current network that acts as a gateway. A gateway acts as an entrance and exit to packets from and to other networks.
Preferred DNS Server	Configure the primary IP address of the server used for DNS resolution.
Alternate DNS Server	Configure the secondary IP address of the server used for DNS resolution.
IPv6 Assignment	IPv6 Assignment specifies how the IPv6 address is obtained. Static: Device management IP addressing is configured manually in fields IPv6 Address and IPv6 Gateway. DHCPv6: Device management IP addressing (IP address and gateway) is assigned via a network DHCP server, and parameters IPv6 Address and IPv6 Gateway are unused. If the DHCPv6 server is not available previous static IPv6 address will be used as a fallback IPv6 address. If no previous static IPv6 address is available, no IPv6 address will be assigned. DHCPv6 will occur over the wireless interface by default.
IPv6 Address	Internet protocol version 6 (IPv6) address. This address is used by the family of Internet protocols to uniquely identify this unit on a network. IPv6 addresses are represented by eight groups of four hexadecimal digits separated by colons.
IPv6 Gateway	Configure the IPv6 address of the device on the current network that acts as a gateway. A gateway acts as an entrance and exit to packets from and to other networks.
Ethernet Port Security (Client Mode)	Disabled: No MAC address limit/gaining timers are imposed for bridging at the Client device Ethernet port. Enabled: By configuring Secure MAC Limit and MAC Aging Time , a limit is imposed on the number and duration of bridged devices connected to the Client Ethernet port.
Secure MAC Limit (Client Mode)	Configure the number of simultaneous secure MAC addresses that will be allowed at the Ethernet interface of the Client

Attribute	Meaning
MAC Aging Time (Client Mode)	Configure the time for which the secure MAC addresses should be allowed to age. Once the Aging timer expires for a MAC address, it will be removed from the internal table and no longer count as an active MAC. Set the time to 0 to disable aging.
Ethernet Interface (Client NAT Mode)	
IP Address (Client NAT Mode, Bridge Mode)	Ethernet interface Internet protocol (IP) address. This address is used by the family of Internet protocols to uniquely identify this unit on a network.
Subnet Mask (Client NAT Mode, Bridge Mode)	Defines the address range of the connected IP network. For example, if Device IP Address (LAN) is configured to 192.168.2.1 and IP Subnet Mask (LAN) is configured to 255.255.255.0, the device will belong to subnet 192.168.2.X.
DHCP Server (Client NAT Mode, Bridge Mode)	<p>Disabled: Use this setting when the Client is in NAT or Router mode if there is an existing DHCP Server below the Client handing out IP Addresses or if all devices below the Client will be configured with static IP Addresses.</p> <p>Enabled: Use this setting when the Client is in NAT or Router mode, to use the Client's local/onboard DHCP server to hand out IP addresses to its clients.</p>
DHCP Start IP (Client NAT Mode, Bridge Mode)	A pool or range of IP addresses needed by the DHCP server to provide IP Addresses to requesting devices. This is the first IP address in the range.
DHCP End IP (Client NAT Mode, Bridge Mode)	The Client acts as a DHCP server to the subnet associated with the ethernet interface and provides IP addresses to devices in the subnet requesting IP addresses via DHCP.
Ethernet Port	
Ethernet MTU	Specify the device MTU or Maximum Transmission Unit; the size in bytes of the largest data unit that the device is configured to process. Larger MTU configurations can enable the network to operate with greater efficiency, but in the case of retransmissions due to packet errors, efficiency is reduced since large packets must be resent in the event of an error.
Port Setting	
Advanced	
IPv6 Support	System-wide IPv6 Protocol Support. When enabled, appropriate IPv6 modules and services will be loaded.
Spanning Tree Protocol	<p>Disabled: When disabled, Spanning Tree Protocol (802.1d) functionality is disabled at the Hub.</p> <p>Enabled: When enabled, Spanning Tree Protocol (802.1d) functionality is enabled at the Hub, allowing for the prevention of Ethernet bridge loops.</p>

Attribute	Meaning
DHCP Server Below Client (Client Mode)	<p>Disabled: This blocks DHCP servers connected to the Client device LAN side from handing out IP addresses to DHCP clients above the Client device (wireless side).</p> <p>Enabled: This allows DHCP servers connected to the Client device LAN side to assign IP addresses to DHCP clients above the Client device (wireless side). This configuration is typical in PTP links.</p>
Management Access (Hub Mode)	<p>Ethernet: Only allow access to the Hub's web management interface via a local Ethernet (LAN) connection. In this configuration, the Hub's web management interface may not be accessed from over the air (i.e. from a device situated below the Client).</p> <p>Ethernet and Wireless: Allow access to the Hub's web management interface via a local Ethernet (LAN) connection and from over the air (i.e. from a device situated below the Client).</p> <p>Hubs configured with Management Access Interface set to Ethernet and Ethernet and Wireless are susceptible to unauthorized access.</p>
Client Traffic Isolation (Hub Mode)	<p>Disabled: This is the default mode. When Client isolation is disabled, an Client is able to communicate with another Client, when both the Clients are associated to the same Hub.</p> <p>Enabled: When Client Isolation feature is Enabled, a Client is unable to communicate with another Client (peer-to-peer traffic) when both the Clients are associated with the same Hub. This feature essentially enables the Hub to drop the packets to avoid peer-to-peer traffic scenarios.</p>
DHCP Option 82 (Hub Mode)	<p>Disabled: The device does not insert the "remote-id" (option ID 0x2) and the "circuit-id" (ID 0x01). DHCP Option 82 is 'Disabled' by default.</p> <p>Enabled: The device inserts "remote-id" (option ID 0x2) to be the Client MAC address and the "circuit-id" (ID 0x01) to be the Hub's MAC address. Those two fields are used to identify the remote device and connection from which the DHCP request was received.</p>
LLDP	<p>The Link Layer Discovery Protocol (LLDP) is a vendor-neutral link layer protocol (as specified in IEEE 802.1AB) used by cnVision for advertising its identity, capabilities, and neighbors on the Ethernet/wired interface.</p> <p>Disabled: cnVision does not receive or transmit LLDP packets from/to its neighbors.</p> <p>Enabled: cnVision can receive LLDP packets from its neighbors and send LLDP packets to its neighbors, depending on the LLDP Mode configuration below.</p>
LLDP Mode	<p>Receive and Transmit: cnVision sends and receives LLDP packets to/from its neighbors on the Ethernet/LAN interface.</p> <p>Receive Only: cnVision receives LLDP packets from its neighbors on the Ethernet/LAN interface and discovers them.</p>
De-Militarized Zone (Client NAT Mode)	

Attribute	Meaning
DMZ (Client NAT Mode)	<p>Disabled: Packets arriving on the wireless interface destined for the Ethernet side of the network are dropped if a session does not exist between the Source IP (Wireless) and Destination IP (Ethernet). By default, NAT requires the sessions to be initiated from the Ethernet side before a packet is accepted from the Wireless to the Wired side.</p> <p>Enabled: Any packets with an unknown destination port (not associated with an existing session or not defined in the port forwarding rules) are automatically sent to the device configured with DMZ IP Address.</p>
IP Address (Client NAT Mode)	Configure the IP address of a Client-connected device that is allowed to provide network services to the wide-area network.
Allow ICMP to DMZ (Client NAT Mode)	<p>Enabled: ICMP packets are forwarded to the DMZ IP</p> <p>Disabled: Client answers ICMP requests, and Client Wireless IP Address becomes reachable by ping when DMZ enabled</p>


Configuration > Security

Configuration > Security (Hub)

The screenshot displays the 'Security' configuration page for a Hub device. The interface includes a left sidebar with navigation options: Status, Quick Start, Configuration (expanded), Radio, System, Network, Security (selected), Monitor, Tools, and VMS integration. The main content area is titled 'Security Options' and contains several sections:

- Wireless Security:** Includes radio buttons for Open, WPA2 (selected), and RADIUS.
- WPA2:** A section for configuring WPA2 Pre-shared Key, currently showing a masked key.
- RADIUS:** A section for configuring RADIUS settings, including a table for IP Address, Port, and Secret. Below the table are fields for Server Retries (set to 5) and Server Timeout (set to 5).
- Firewalls:** A section for configuring firewalls, including radio buttons for Disabled and Enabled (selected) for Layer 2 Firewall and Layer 3 Firewall. Each has an 'Add' button and a 'Show List' button.
- Wireless MAC Address Filtering:** A section for configuring Wireless MAC Filter, with radio buttons for Disabled (selected) and Enabled.

The bottom left corner of the page shows version information: Version CNV-4.5.3, Support, Community Forum, © 2020 Cambium Networks, All Rights Reserved.

Attribute	Meaning
Security Options	
Wireless Security	<p>Open: All Client devices requesting network entry are allowed registration.</p> <p>WPA2: The WPA2 mechanism provides AES radio link encryption and Client network entry authentication. When enabled, the Client must register using the Authentication Pre-shared Key configured on the Hub and Client.</p> <p>RADIUS: Enables Client Module authentication via a pre-configured Radius server.</p>
WPA2	
WPA2 Pre-shared Key	Configure this key on the Hub, then configure the Client Module with this key to complete the authentication configuration. This key must be between 8 to 128 symbols.
Radius	
Wireless Security	<p>Click the  button to add a new Radius server.</p> <p>Up to 3 RADIUS servers can be configured on the device with the following attributes:</p> <p>IP Address: IP Address of the RADIUS server on the network.</p> <p>Port: The RADIUS server port. The default is port number is 1812.</p> <p>Secret: Secret key that is used to communicate with the RADIUS server. Radius server IP address.</p>
Server Retries	Set the number of times the device will try to contact the RADIUS server in case the server is unreachable.
Server Timeout	Set the amount of time the device waits to receive a response before retrying the request.
Firewalls	
Layer 2 Firewall	<p>Disabled: Modifications to the Layer 2 Firewall Table are not allowed and rules are not enforced.</p> <p>Enabled: Modifications to the Layer 2 Firewall Table are allowed and rules are enforced.</p>
Layer 3 Firewall	<p>Disabled: Modifications to the Layer 3 Firewall Table are not allowed and rules are not enforced.</p> <p>Enabled: Modifications to the Layer 3 Firewall Table are allowed and rules are enforced.</p>
Wireless MAC Address Filtering	
Wireless MAC Filter	Disabled: MAC filtering is not used.

Attribute	Meaning
	<p>Enabled: MAC filtering is a security method for access control. Each network device is assigned a hard-coded 48-bit address. It helps define which devices are allowed or denied access to the Wi-Fi network. Enter the MAC address and define the rules whether the device can access the network or not.</p> <ul style="list-style-type: none"> • MAC Address: Enter the device's MAC address. • Description: Enter a description for the device.
Wireless MAC Filter Policy	<p>Prevent: Prevents the device from accessing the Wi-Fi network.</p> <p>Permit: Allows the device to access the Wi-Fi network.</p>

Monitor menu

Use the **Monitor** menu to access device and network statistics and status information. This section may be used to analyze and troubleshoot network performance and operation.

Monitor > Performance page

Monitor > Performance page (Hub)

The screenshot displays the CNVision Hub Performance page. The interface includes a sidebar with navigation options: Status, Quick Start, Configuration, Monitor (selected), Performance (selected), System, Wireless, Throughput Chart, GPS, Network, System Log, Tools, and VMS integration. The main content area is titled 'HUB FLEX-cnVision-e3KL Hub' and features several statistics sections:

- Statistics display mode:** Advanced statistics (Disabled/Enabled).
- Reset Statistics:** Time Since Last Reset: 0000:16:01:00. A 'Reset Stats' button is available.
- System Statistics:** Session Drops: 5 sessions; Total Device Reboots: 2 times.
- Ethernet Statistics - Transmitted:** Total Traffic: 1 243 025 Kbytes (100%); Total Transmitted Packets: 1 042 558 packets (100%).
- Ethernet Statistics - Received:** Total Traffic: 70 046.9 Kbytes (100%); Total Transmitted Packets: 574 414 packets (100%).
- Wireless Statistics - Downlink:** Total Traffic: 208 991.5 Kbytes (100%); Total Transmitted Packets: 737 653 packets (100%); Multicast / Broadcast Traffic: 54 980.1 Kbytes (26%).
- Wireless Statistics - Uplink:** Total Traffic: 2 008 643 Kbytes (100%); Total Transmitted Packets: 1 848 442 packets (100%); Multicast / Broadcast Traffic: 25 954 Kbytes (1%).
- Client Statistics:** A table showing details for two clients.

Client Statistics Table:

MAC Address	IP Address	Device Name	Total Uplink (Kbits)	Total Uplink Packets	Uplink Packet Drops	Total Downlink (Kbits)	Total Downlink Packets	Downlink Packet Drops	Downlink Capacity Packet Drops	Downlink Retransmitted Packets	Downlink Power (dBm)
00:04:56:42:01:55	10.120.223.23	client-micro-cnVision-F300-13	164 194	73 281	2 (0%)	1 060 467	299 448	0 (0%)	0 (0%)	499 (0.1%)	15
00:04:56:21:81:1e	10.120.223.22	client-Mini-cnVision-F300-16	6 169 906	775 261	12 (0%)	412 435	346 365	0 (0%)	0 (0%)	924 (0.2%)	15

Version CNV-4.5.9-RC3
Support
Community Forum
© 2019 Cambium Networks, All Rights Reserved

Monitor > Performance page attributes

Attribute	Meaning
Statistics display mode	
Advanced Statistics	<p>Disabled: Displays only minimum statistics from system, wireless, and ethernet interfaces</p> <p>Enabled: Displays advanced statistics from system, wireless, and ethernet interfaces</p>
Ethernet Statistics – Transmitted	
Total Traffic	Total amount of traffic in Kbits transferred from the device Ethernet interface.
Total Transmitted Packets	Total number of packets transferred from the device Ethernet interface.
Ethernet Statistics – Received	
Total Traffic	Total amount of traffic in Kbits received by the device Ethernet interface.
Total Received Packets	Total number of packets received by the device Ethernet interface.
Wireless Statistics – Downlink	
Total Traffic	Total amount of traffic transmitted out of the device wireless interface in Kbits.
Total Packets	Total number of packets transmitted out of the device wireless interface.
Multicast / Broadcast Traffic	Total amount of multicast and broadcast traffic transmitted out of the device wireless interface in Kbits.
Wireless Statistics – Uplink	
Total Traffic	Total amount of traffic received via the device wireless interface in Kbits.
Total Packets	Total number of packets received via the device wireless interface.
Multicast / Broadcast Traffic	Total amount of multicast and broadcast traffic received on the device wireless interface in Kbits.
Client Statistics	
MAC Address	MAC Address of the Client connected to the Hub.
Total Uplink (Kbits)	Total amount of traffic received via the Hub wireless interface from the Client in Kbits.
Total Uplink Packets	Total number of packets received via the Hub wireless interface from this Client.
Uplink Packet Drops	Total number of packets dropped prior to sending out of the Hub Ethernet interface due to RF errors (packet integrity error and other RF related packet error) from the Client.

Attribute	Meaning
Total Downlink (Kbits)	Total amount of traffic transmitted out of the Hub wireless interface in Kbits.
Total Downlink Packets	Total number of packets transmitted out of the Hub wireless interface.
Downlink Packet Drops	Total number of packets dropped after transmitting out of the Hub wireless interface due to RF errors (No acknowledgment and other RF related packet error).
Downlink Capacity Packet Drops	Total number of packets dropped after transmitting out of the Hub Wireless interface due to capacity issues (data buffer/queue overflow or other performance or internal packet errors).
Downlink Retransmitted Packets	Total number of packets re-transmitted after transmitting out of the Hub Wireless interface due to the packets not being received by the Client.
Downlink Power (dBm)	The transmit power of the Hub for the downlink packets to the Client.

Monitor > System page

Monitor > System page

The screenshot shows the 'System' page of the cnVision Hub interface. The left sidebar contains navigation options: Status, Quick Start, Configuration, Monitor, Performance, System (selected), Wireless, Throughput Chart, GPS, Network, System Log, Tools, VMS Integration, Version CNV-4.5.0-RC8, Support, and Community Forum. The main content area displays the following system attributes:

System	
Hardware Version	5 GHz ePMP3000L (FCC)
Serial Number (MSN)	EBVB0R5P7MV7
Firmware Version	U-Boot IPQ40xx 2012.08.11 (Jun 19 2019 - 20:25:21)
cnVision Software Version	4.5-RC8
Software Version (Active Bank)	CNV-4.5-RC8
Software Version (Inactive Bank)	CNV-4.5-RC7
Device-Agent Version	2.105.42
NTP Status	NTP Enabled, Date and Time is obtained from NTP Server
Date and Time	24 Oct 2019, 13:47:10 CDT
System Uptime	16 hours, 1 minute
Wireless MAC Address	00:04:56:21:F2:38
Ethernet MAC Address	00:04:56:21:F2:37
Sync Source Status	Sync Down
Read-Only Users	0
Read-Write Users	1
GUI User Authentication	Device Local Only
Factory Reset Via Power Sequence	Enabled

At the bottom of the page, it says: © 2019 Cambium Networks. All

Monitor > System page attributes

Attribute	Meaning
Hardware Version	Board hardware version information.

Attribute	Meaning
Serial Number (MSN)	Serial Number information.
Firmware Version	U-Boot version information.
Software Version	The currently operating version of software on the device.
Software Version (Active Bank)	The currently operating version of software on the device.
Software Version (Inactive Bank)	The backup software version on the device used upon failure of the active bank. Two software upgrades in sequence will update both the Active Software Bank Version and the Inactive Software Bank Version .
Device-Agent Version	The operating version of the device agent.
NTP Status	Indicates whether time and date have been obtained from NTP server.
Date and Time	Current date and time, subject to time zone offset introduced by the configuration of the device Time Zone parameter. Until a valid NTP server is configured, this field will display the time configured from the factory.
System Uptime	The total system uptime since the last device reset.
Wireless MAC Address	The hardware address of the device wireless interface.
Ethernet MAC Address	The hardware address of the device LAN (Ethernet) interface.
SFP Port MAC Address	The hardware address of the device SFP interface.
Sync Source Status	The status of the configured GPS synchronization source.
Read-Only Users	Displays the number of active Read-Only users logged into the radio.
Read-Write Users	Displays the number of active Read-Write users logged into the radio.
GUI User Authentication	The method by which users are authenticated when logging into the device management interface.
Factory Reset Via Power Sequence	<p>Enabled: When Enabled under Tools > Backup/Restore > Reset Via Power Sequence, it is possible to reset the radio's configuration to factory defaults using the power cycle sequence explained under Resetting cnVision to factory defaults by power cycling</p> <p>Disabled: When Disabled, it is not possible to factory default the radio's configuration using the power cycle sequence.</p>

Monitor > Wireless Page

Monitor > Wireless page (Hub Mode)

Status

Quick Start

Configuration

Monitor

Performance

System

Wireless

Throughput Chart

GPS

Network

System Log

Tools

VMS Integration

Version CNV-4.5.0-RC8

Support

Community Forum

HUB FLEKr-cnVision-e3KLHub

EN

Administrator

Wireless StatusUp

Operating Frequency5240 MHz

Operating Channel Bandwidth20 MHz

DFS StatusNot Available

Transmit Power15 dBm

Registered Clients2

Registered Elevate Subscriber Modules0

Ethernet Status1000 Mbps / Full

CountryUnited States

Registered Clients

Show Details

	MAC Address	IPv4 / IPv6 Addresses	Device Name	Client Distance (miles)	Session Time (hh:mm:ss)	RSSI (dBm) Downlink / Uplink	SNR (dB) Downlink / Uplink	MCS Downlink / Uplink	Downlink Quality	Downlink Capacity	Model Name
Deregister	00:04:56:42:01:55	10.120.223.23	client-micro-cnVision...	0	03:15:50	-46/-41	48/48	DS 9/DS 9	99 %	100 %	5 GHz Force 300-13 I
Deregister	00:04:56:21:81:1E	10.120.223.22	client-Mini-cnVision-F...	0	03:15:30	-55/-40	39/50	DS 9/DS 9	100 %	100 %	5 GHz Force 300-16 I

Monitor > Wireless page (Client Mode)

Quick Start

Configuration

Monitor

Performance

System

Wireless

Throughput Chart

GPS

Network

System Log

Tools

VMS Integration

Version CNV-4.5.0-RC8

Support

HUB FLEKr-cnVision-e3KLHub

EN

Administrator

Wireless StatusUp

Registered Hub MAC AddressNot Associated

Operating Frequency5240 MHz

Operating Channel Bandwidth20 MHz

DFS StatusNot Available

Downlink RSSIN/A

Downlink SNRN/A

Uplink MCSN/A

Downlink MCSN/A

Transmit Power15 dBm

Power Control Mode from HubClosed Loop

Ethernet Status1000 Mbps / Full

CountryUnited States

Registered Clients

Time Since Last Scan

Registration Status

0

Clear the Hub's list and restart scanning

Restart



Available Hubs

Show Details

As Preferred	SSID	MAC Address	Frequency Carrier (MHz)	Channel Bandwidth (MHz)	RSSI (dBm)	SNR (dB)	Registration State	Session Time (hh:mm:ss)	Wireless Security	Meets Reg Criteria
Table is empty										

Monitor > Wireless page attributes

Attribute	Meaning
Wireless Status (Hub Mode)	<p>Up: The device wireless interface is functioning and sending beacons.</p> <p>Down: The device wireless interface has encountered an error disallowing full operation. Reset the device to reinitiate the wireless interface.</p>
Wireless Status (Client Mode)	<p>Up: The device wireless interface is functioning and the device has completed network entry.</p> <p>Down: The device wireless interface has encountered an error disallowing full operation. Evaluate radio and security configuration on the Hub and Client device to determine the network entry failure.</p>
Registered Hub MAC Address (Client Mode)	Wireless MAC address of the Hub to which the Client is registered.
Range (Client Mode)	The calculated distance from the Hub, determined by radio signal propagation delay.
Operating Frequency	The current frequency at which the device is operating.
Operating Channel Bandwidth	The current channel size at which the device is transmitting and receiving.
DFS Status	<p>Not Available: DFS operation is not required for the region configured in parameter Country Code.</p> <p>Channel Availability Check: Prior to transmitting, the device must check the configured Frequency Carrier for radar pulses for 60 seconds). If no radar pulses are detected, the device transitions to state In-Service Monitoring.</p> <p>In-Service Monitoring: Radio is transmitting and receiving normally while monitoring for radar pulses which require a channel move.</p> <p>Radar Signal Detected: The receiver has detected a valid radar pulse and is carrying out detect-and-avoid mechanisms (moving to an alternate channel).</p> <p>In-Service Monitoring at Alternative Channel: The radio has detected a radar pulse and has moved the operation to a frequency configured in DFS Alternative Frequency Carrier 1 or DFS Alternative Frequency Carrier 2.</p> <p>System Not In Service due to DFS: The radio has detected a radar pulse and has failed channel availability checks on all alternative frequencies. The non-occupancy time for the radio frequencies in which radar was detected is 30 minutes.</p>
Transmitter Power	The current power level at which the device is transmitting.
Ethernet Status	The speed and duplex at which the configured LAN port is operating.

Attribute	Meaning
Country	Defines the country code being used by the device. The country code of the Client follows the country code of the associated Hub unless it is an FCC SKU in which case the country code is United States or Canada. Country code defines the regulatory rules in use for the device.
Registered Clients (Hub Mode) 	Use the Registered Clients table to monitor the registered Client device, their key RF status, and statistics information. The client management interface may also be accessed by clicking the hyperlinks in the IPv4 / IPv6 Addresses and Device Name columns. Click the Deregister button to disassociate the client device from the Hub.
MAC Address (Hub Mode)	The MAC address of the Client wireless interface.
IPv4 / IPv6 Addresses (Hub Mode)	The IP address of the Client wireless interface.
Device Name (Hub Mode)	The configured device name of the Client wireless interface.
Client Distance (miles)	Indicates the calculated distance of the Client from the Hub.
Session Time (hh:mm:ss) (Hub Mode)	Time duration for which the Client has been registered and in session with the Hub.
RSSI (dBm) Downlink / Uplink	Indicates the estimated RSSI of the Hub at the Client (first value) and the RSSI of the Client measured at the Hub (second value).
SNR (dB) Downlink / Uplink	Indicates the estimated SNR of the Hub at the Client (first value) and the SRN of the Client measured at the Hub (second value).
MCS Downlink / Uplink (Hub Mode)	Current MCS at which the downlink (first value) and uplink (second value) are operating.
Downlink Quality (Hub Mode)	The downlink quality based on the current MCS and PER (Packet Error Rate) for this Client.
Downlink Capacity (Hub Mode)	The downlink capacity based on the current DL MCS with respect to the highest supported MCS (DS 9). The downlink capacity based on the current DL MCS with respect to the highest supported MCS (DS 9).
Model Name	Model of Client.
Restart (Hub Mode)	Click the Restart  button to Clear the Hubs list and restart scanning.
SSID	The SSID of the visible Hub.


Attribute	Meaning
(Hub Mode)	
MAC Address (Hub Mode)	The MAC address of the visible Hub.
Frequency Carrier (MHz) (Hub Mode)	The current operating frequency of the visible Hub.
Channel Bandwidth (MHz) (Hub Mode)	The current operating channel bandwidth of the visible Hub.
RSSI (dBm) (Hub Mode)	The current measured Received Signal Strength Indicator at the Hub.
SNR (dB) (Hub Mode)	The current measured Signal-to-Noise Ratio of the Client to Hub link.
Registration State (Client Mode)	<p>The indication of the result of the Client device network entry attempt:</p> <p>Successful: Client registration is successful</p> <p>Failed: Out of Range: The Client is out of the Hub's configured maximum range (Max Range parameter)</p> <p>Failed: Capacity limit reached at Hub: The Hub is no longer allowing Client network entry due to capacity reached</p> <p>Failed: No Allocation on Hub: The Client to Hub handshaking failed due to a misconfigured pre-shared key between the Client and Hub</p> <p>Failed: SW Version Incompatibility: The version of software resident on the Hub is older than the software version on the Client</p> <p>Failed: PTP Mode: ACL Policy: The Hub is configured with PTP Access set to MAC Limited and the Client's MAC address is not configured in the Hub's PTP MAC Address field</p> <p>Failed: Other: The Hub does not have the required available memory to allow network entry</p>
Session Time (hh:mm:ss) (Client Mode)	This timer indicates the time elapsed since the Client registered to the Hub.
Wireless Security (Client Mode)	This field indicates the security state of the Hub to Client link.
Meets Reg Criteria (Client Mode)	Yes: The scanned Hub meets the Network Entry criteria defined by the internal Network Algorithm.

Attribute	Meaning
	No: The scanned Hub does not meet the Network Entry criteria defined by the internal Network Algorithm.

Monitor > Throughput Chart page

Use the Throughput Chart page to reference a line chart visual representation of system throughput over time. The blue line indicates downlink throughput and the orange line indicates uplink throughput. The X-axis may be configured to display data over seconds, minutes, or hours, and the Y-axis is adjusted automatically based on average throughput. Hover over data points to display details.

Monitor > Throughput Chart page

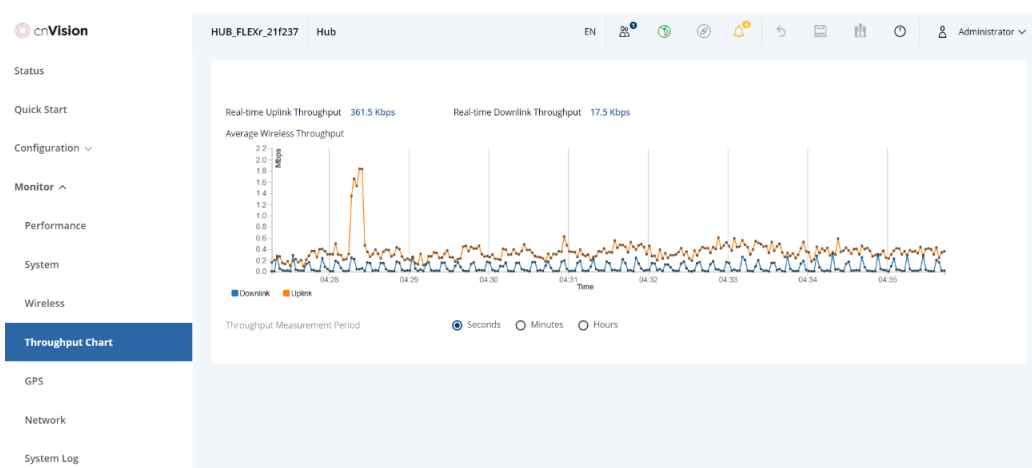

Monitor > Throughput Chart page attributes

Attribute	Meaning
Throughput Measurement Period	Adjust the X-axis to display throughput intervals in seconds, minutes, or hours

Monitor > GPS page (Hub Mode – Only available on HUB FLEXr)

Use the GPS Status page to reference key information about the device GPS readings, tracked satellites, and firmware version.

Monitor > GPS page attributes (Hub Mode)

ID	Signal-to-Noise Ratio	Status
5	25	Tracked
29	0	Visible
2	19	Tracked
13	26	Tracked
25	0	Visible
48	0	Visible
16	17	Tracked

Monitor > GPS page attributes (Hub Mode)

Attribute	Meaning
On-board GPS Latitude (Hub Mode)	On a GPS Synchronized cnVision radio, the field is automatically populated with the Device Latitude information from the on-board GPS chip.
On-board GPS Longitude (Hub Mode)	On a GPS Synchronized cnVision radio, the field is automatically populated with the Device Longitude information from the on-board GPS chip.
On-board GPS Height (Hub Mode)	On a GPS Synchronized cnVision radio, the field is automatically populated with the Device height above sea level from the onboard GPS chip.
GPS Time (Greenwich Mean Time) (Hub Mode)	On a GPS Synchronized cnVision radio, the field is automatically populated with the time from the onboard GPS chip.
GPS Firmware version (Hub Mode)	On a GPS Synchronized cnVision radio, the field indicates the current firmware version of the onboard GPS chip.
Satellites Tracked (Hub Mode)	On a GPS Synchronized cnVision radio, the field indicates the number of satellites current tracked by the onboard GPS chip.

Attribute	Meaning
Satellites Visible (Hub Mode)	On a GPS Synchronized cnVision radio, the field indicates the number of satellites visible to the on-board GPS chip.
Satellites (Hub Mode)	The Satellites table provides information about each satellite that is visible or tracked along with the Satellite ID and Signal to Noise Ratio (SNR) of the satellite.
ID (Hub Mode)	Represents the Satellite ID.
Signal-to-Noise Ratio (Hub Mode)	This is an expression of the carrier signal quality with respect to signal noise.
Status (Hub Mode)	Status of each Satellite available.

Monitor > Network page

Use the Network Status page to reference key information about the device network status.

Monitor > Network page (Hub)

Status

Quick Start

Configuration ▾

Monitor ▲

Performance

System

Wireless

Throughput Chart

GPS

Network

System Log

Tools ▾

VMS integration

Version CNV-4.5.3

Support

Community Forum

© 2020 Cambium Networks, All Rights Reserved

HUB_FLEXr_21f237

Hub

EN

Administrator ▾

Ethernet Interface

IP Assignment

Static

IP Address ⓘ

10.120.223.21

Subnet Mask

255.255.255.0

Default Gateway

10.120.223.254

MTU Size

1700

Ethernet Status ⓘ

1000 Mbps / Full

Port Speed

1000 Mbps

Port Duplex Mode

Full

Network Status

DNS Server IP

10.120.12.169, 10.120.12.170

DHCP Option 82

Disabled

NTP Status ⓘ

NTP Enabled, Date and Time is obtained from NTP Server

ARP Table

Show Details

MAC Address	IP Address	Interface
00:22:BE:6E:40:00	10.120.223.254	Bridge
00:03:C5:C0:00:BC	10.120.223.20	Bridge
AC:CC:8E:DD:C9:00	10.120.223.17	Bridge
58:03:FB:62:F2:2C	10.120.223.15	Bridge
44:19:B6:5C:FE:4A	10.120.223.16	Bridge
AC:CC:8E:C8:6C:5D	10.120.223.18	Bridge
00:18:85:18:A7:92	10.120.223.14	Bridge
9C:8E:CD:1D:C5:3F	10.120.223.11	Bridge
E4:30:22:03:91:2A	10.120.223.13	Bridge
08:00:27:69:83:9D	10.120.223.6	Bridge
70:85:C2:BD:BF:FD	10.120.223.2	Bridge
BC:C3:42:18:94:A2	10.120.223.42	Bridge
00:02:D1:87:9F:2C	10.120.223.41	Bridge

Bridge Table

Bridge Name	MAC Address	Port	Client MAC	Aging Timer (secs)
br-lan	00:04:56:21:F2:38	Own	N/A	0
br-lan	00:04:56:21:81:1E	WLAN	N/A	2
br-lan	58:C1:7A:F0:2D:8A	WLAN	00:04:56:42:01:55	0
br-lan	00:02:D1:87:9F:2C	WLAN	00:04:56:42:01:55	0
br-lan	58:C1:7A:F0:2D:83	WLAN	00:04:56:21:81:1E	0
br-lan	00:04:56:42:01:55	WLAN	N/A	4
br-lan	E4:30:22:03:91:2A	WLAN	00:04:56:21:81:1E	0
br-lan	EC:F4:BB:38:A3:1B	WLAN	00:04:56:42:01:55	25

CNVISION USER GUIDE V.4.5.3
PAGE 105

Table 5-1 Monitor > Network page attributes

Attribute	Meaning
Ethernet Interface	
IP Assignment	<p>Static: Device management IP addressing is configured manually in fields IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server.</p> <p>DHCP: Device management IP addressing (IP Address, Subnet Mask, Gateway, and DNS Server) is assigned via a network DHCP server, and parameters IP Address, Subnet Mask, Gateway, Preferred DNS Server, and Alternate DNS Server are not configurable.</p>
IP Address	<p>Internet protocol (IP) address. This address is used by the family of Internet protocols to uniquely identify this unit on a network.</p> <p>If IP Address Assignment is set to DHCP and the device is unable to retrieve IP address information via DHCP, the device management IP is set to fallback IP 192.168.0.1 (Hub) or 192.168.0.2 (Client).</p>
Subnet Mask	Defines the address range of the connected IP network. For example, if Device IP Address (LAN) is configured to 192.168.2.1 and IP Subnet Mask (LAN) is configured to 255.255.255.0, the device will belong to subnet 192.168.2.X.
Default Gateway	Configure the IP address of the device on the current network that acts as a gateway. A gateway acts as an entrance and exit to packets from and to other networks.
MTU Size	The currently configured Maximum Transmission Unit for the device Ethernet (LAN) interface. Larger MTU configurations can enable the network to operate with greater efficiency, but in the case of retransmissions due to packet errors, efficiency is reduced since large packets must be resent in the event of an error.
Main PSU Port	The speed and duplex at which the configured LAN port is operating.
Port Speed	The speed at which the configured LAN port is operating.
Port Duplex Mode	The duplex at which the configured LAN port is operating.
Network Status	
DNS Server IP	The configured IP address(es) of the network DNS servers.
DHCP Option 82	Status of DHCP Option 82 operation in the network.
NTP Status	Represents the status of NTP retrieval in the network.
ARP Table	
MAC Address	MAC Address of the devices on the bridge.
IP Address	IP Address of the devices on the bridge.
Interface	The interface on which the cnVision identified the devices on.
Bridge Table	

Attribute	Meaning
MAC Address	The hardware address of the cnVision device.
Port	The port to which the device is connected.
Client MAC	MAC Address for the connected Client device.
Aging Timer (secs)	Time set for the MAC addresses in the Bridge table before renewal.

Monitor > System Log Page

Use the System Log page to view the device system log and to download the log file to the accessing PC/device.

Monitor > System Log page

The screenshot displays the 'System Log' page in the cnVision interface. The left sidebar contains navigation links, with 'System Log' currently selected. The main panel shows the 'System Log' title and two toggle switches: 'Syslog Display' (set to 'Enabled') and 'Device Agent logging' (set to 'Disabled'). Below these, a 'Syslog File' section contains a scrollable list of log entries. Each entry starts with a timestamp (e.g., 'Jun 16 16:33:24'), followed by the device name 'HUB_FLEXr_21f237', the protocol 'ONVIF', and a detailed log message. A 'Download' button is positioned at the bottom of the log file list.

Monitor > System Log page attributes

Attribute	Meaning
Syslog Display	Enabled: The system log file is displayed on the management GUI. Disabled: The system log file is hidden on the management GUI.
Device Agent Logging	Enabled: The log from Device Agent is displayed on the management GUI. Disabled: The log from Device Agent is hidden on the management GUI.
Syslog File	Use the Download button to download the full system log file to a connected PC or device.

Tools menu

The **Tools** menu provides several options for upgrading device software, configuration backup/restore, managing licenses, analyzing RF spectrum, testing the wireless link, testing network connectivity, and analyzing interferers.

Tools > Software Upgrade page

Use the **Software Upgrade** page to update the device radio software to take advantage of new software features and improvements.




Attention Please read the Release Notes associated with each software release for special notices, feature updates, resolved software issues, and known software issues. The Release Notes may be accessed at the [Cambium Support Center](#).

Tools > Software Upgrade page

Tools > Software Upgrade page attributes


Attribute	Meaning
Main Software	
Hardware Version	Defines the board type and frequency band of operation.
Software Version	Defines the current operating software version.
Software Version (Active Bank)	cnVision devices two banks of flash memory which each contain a version of the software. The version of the software last upgraded onto the Flash memory is made the Active Bank. This software will be used by the device when rebooted.

Attribute	Meaning
Software Version (Inactive Bank)	The version of the software that was the Active Bank is made the Inactive Bank when another version of the software is upgraded onto the Flash memory. The Inactive Bank of software will be used by the device in case the Active Bank cannot be used due to a failure condition.
Firmware Version	The current U-boot version.
Upgrade Options	<p>URL: A web server may be used to retrieve software upgrade packages (downloaded to the device via the webserver). For example, if a web server is running at IP address 192.168.2.1 and the software upgrade packages are located in the home directory, an operator may select an option From URL and configure the Software Upgrade Source field to http://192.168.2.1/<software_upgrade_package>.</p> <p>Local File: Click Browse to select the local file containing the software upgrade package.</p>
Select File	Click Browse to select a local file (located on the device accessing the web management interface) for upgrading the device software.
Upgrade	<p>Click the  button to begin the software upgrade process.</p> <p>Please ensure that power to the device is not interrupted during a software upgrade. Power interruption may cause flash corruption and render the device inoperable.</p>
GPS Firmware (HUB FLEXr Only)	
Firmware Version	The current firmware of the on-board GPS chip.


Tools > Backup/Restore page

Use the **Backup/Restore** page to update the device radio software to take advantage of new software features and improvements.

Tools > Backup/Restore page

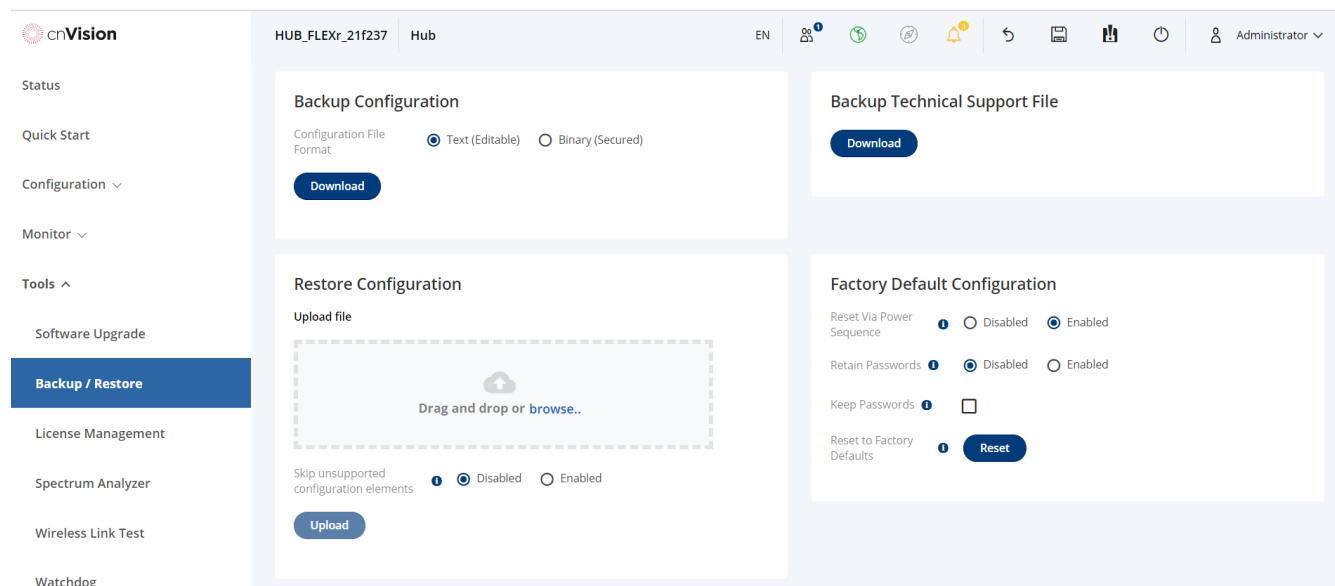

Tools > Backup/Restore page attributes

Attribute	Meaning
Backup Configuration	
Configuration File Format	<p>Text (Editable): Choosing this option will download the configuration file in the .json format and can be viewed and/or edited using a standard text editor.</p> <p>Binary (Secured): Choosing this option will download the configuration file in the .bin format, and cannot be viewed and/or edited using an editor. Use this format for a secure backup.</p>
Restore Configuration	
Select File	Click Browse to select a local file (located on the device accessing the web management interface) for restoring the device configuration.
Skip unsupported configuration elements	In the case of configuration incompatibility, the unsupported configuration elements can be ignored and skipped.
Upload	Click the  button to upload the file.
Factory Default Configuration	
Reset Via Power Sequence	<p>Enabled: When Enabled, it is possible to reset the radio's configuration to factory defaults using the power cycle sequence explained under Resetting cnVision to factory defaults by power cycling on page 184.</p> <p>Disabled: When Disabled, it is not possible to factory default the radio's configuration using the power cycle sequence.</p>

Attribute	Meaning
Retain Passwords	<p>When set to Enabled, then after a factory default of the radio for any reason, the passwords used for GUI and CLI access will not be defaulted and will remain unchanged. The default value of this field is Disabled.</p> <p>If the passwords cannot be retrieved after the factory default, access to the radio will be lost/unrecoverable. This feature prevents unauthorized users from gaining access to the radio for any reason, including theft.</p>
Keep Passwords	<p>When the Keep Passwords checkbox is selected, the passwords used for GUI and CLI access will not be defaulted and will remain unchanged. This is a one-time option, and it does not apply to factory default procedures completed by power cycling (Reset Via Power Sequence).</p>
Reset to Factory Defaults	<p>Use this button to reset the device to its factory default configuration.</p> <p>A reset to factory default configuration resets all device parameters. With the Client device in the default configuration, it may not be able to register to a Hub device configured for your network.</p>
Backup Technical Support File	
Download	<p>The Backup Technical Support File is a compressed archive of the applied statistics and configuration parameters used by Cambium Support for troubleshooting. This file is downloaded from the cnVision device to the accessing device.</p>

Tools > License Management (Hub only)

Add text here


The screenshot shows the cnVision web interface. On the left is a sidebar with navigation links: Status, Quick Start, Configuration, Monitor, Tools, Software Upgrade, Backup / Restore, License Management (highlighted), Spectrum Analyzer, and Wireless Link Test. The main area displays the 'License Management' page for a 'Hub' device (HUB_FLEXR_21f237). The page title is 'License Management'. Below it, there are input fields for 'Local License Key', 'Version', 'MAC address', 'Country Code', and 'Signature'. Each field has a status indicator: 'Local License Key' is empty, 'Version' is 'Not received', 'MAC address' is 'Not received', 'Country Code' is 'Not received', and 'Signature' is 'Unknown'. A message states: 'The License Key and Cloud Licensing ID are available by request on Cambium Networks Support website.'

Attribute	Meaning
Local License Management	The
Version	
MAC address	
Country Code	
Signature	

Tools > Spectrum Analyzer page

Use the **Spectrum Analyzer** page to enable or disable the Spectrum Analyzer feature.

Tools > Spectrum Analyzer page

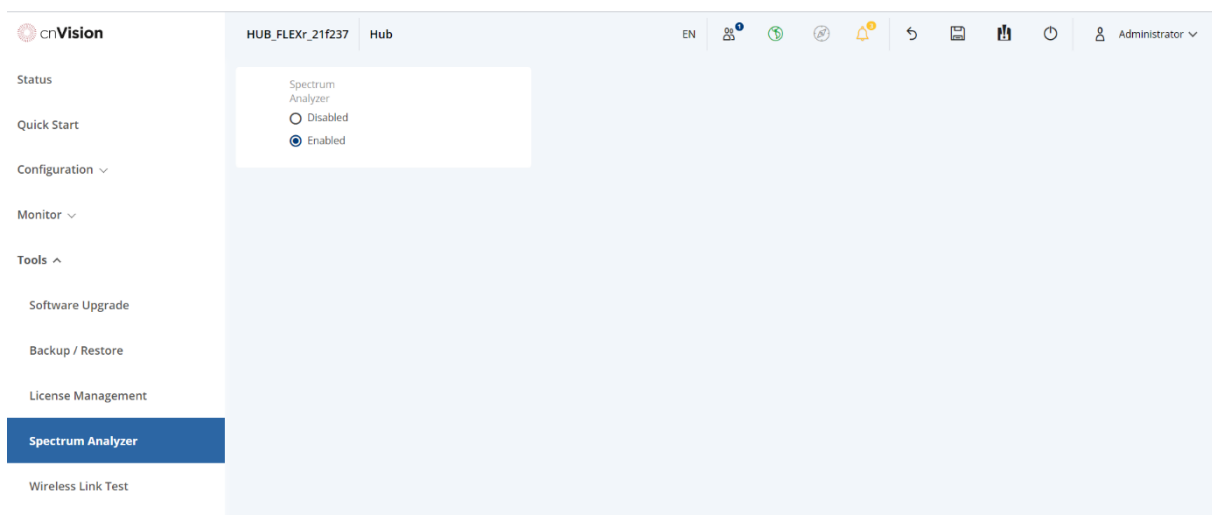

Tools > Spectrum Analyzer page attributes

Attribute	Meaning
Spectrum Analyzer	<p>Disabled: The Spectrum Analyzer process is not running on the device.</p> <p>Enabled: The Spectrum Analyzer process is running on the device, necessary for displaying results in the web management interface.</p>



Attention cnVision supports Automatic Transmit Power Control (ATPC) where the Client devices are instructed by the Hub to adjust their Tx power in order for the Client device signal (UL RSSI) to arrive at the Hub at a predetermined RSSI level (configurable on the Hub under Configuration>Radio>Power Control>Client Target Receive Level). This feature is beneficial to keep the overall noise floor in the sector to an acceptable level. However, the feature negates the purpose of eAlign measurements on the Hub device since, during the alignment, the Client may constantly change its Tx power. It is recommended to turn off ATPC and set the Client Tx power to maximum allowable power during alignment.

While aligning the link using eAlign, please follow these steps:


Procedure:

- 1 On the Client, set Configuration > Radio > Power Control > Max Tx Power to Manual.
- 2 Set Configuration > Radio > Power Control > Transmitter Power to 26 dBm (or maximum value allowed by regulations).
- 3 Click the Save button
- 4 Perform link alignment using eAlign
- 5 Once alignment is complete, set Configuration>Radio>Power Control>Max Tx Power back to Auto
- 6 Click the Save button

Tools > Wireless Link Test page

Use the Wireless Link Test page to conduct a simple test of wireless throughput. This allows the user to determine the throughput that can be expected on a particular link without having to use external tools.

Tools > Wireless Link Test page

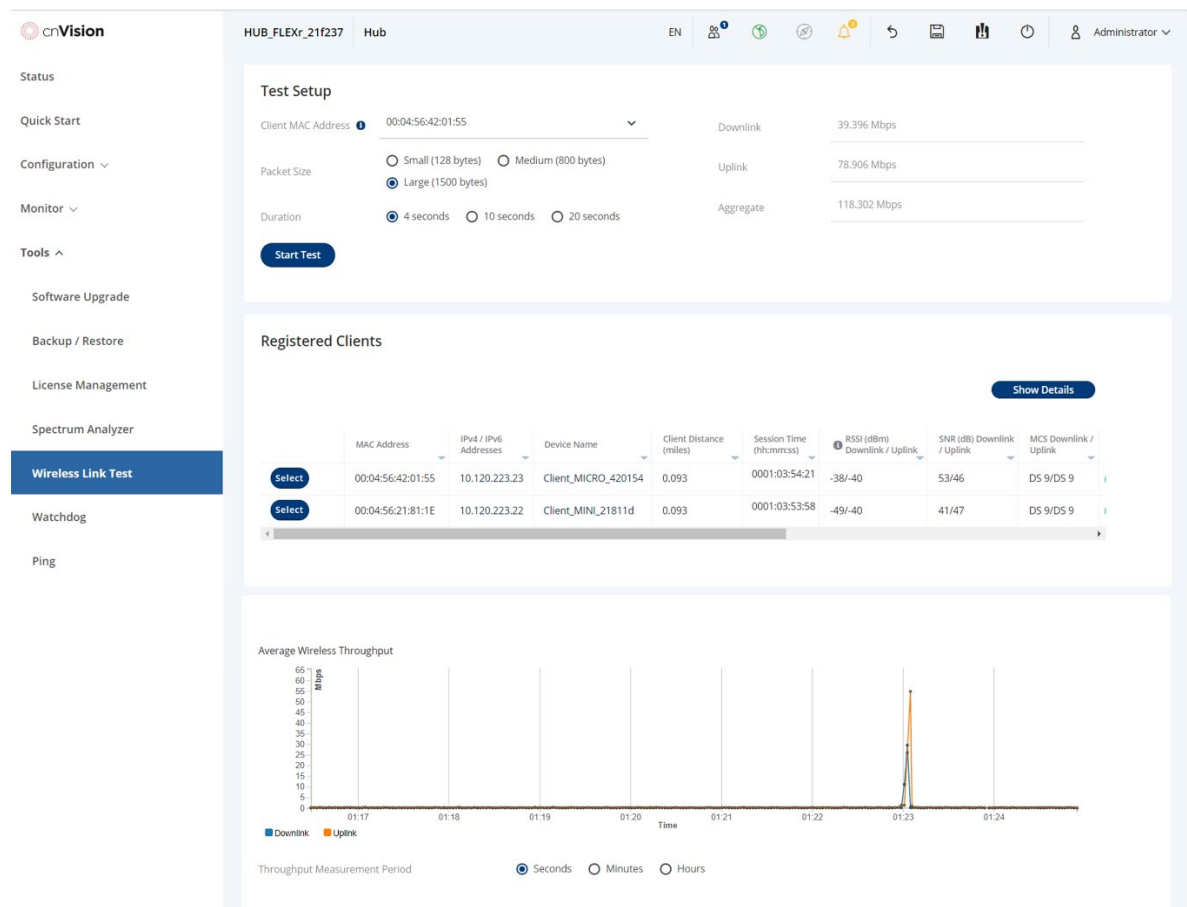

Tools > Wireless Link Test page attributes

Attribute	Meaning
Test Setup	
Client MAC Address	Choose the MAC Address of the Client with which the wireless link test will be conducted.
Packet Size	Choose the Packet Size to use for the throughput test (small/medium/large)
Duration	Choose the time duration in seconds to use for the throughput test (4/10/20secs)
Downlink	This field indicates the result of the throughput test on the downlink, in Mbps
Uplink	This field indicates the result of the throughput test on the uplink, in Mbps
Average	An auto-adjusting chart displaying the average throughput of the link
Registered Clients	This table provides information about the wireless link of each registered Client.

Tools > Watchdog page

Watchdog performs ping checks to determine the reachability of a target IP address. If the target IP address is unreachable, a chosen action is performed.

Tools > Watchdog page

The screenshot displays the Watchdog configuration interface in the CNVision web portal. The left sidebar contains navigation links: Status, Quick Start, Configuration, Monitor, Tools (selected), Software Upgrade, Backup / Restore, License Management, Spectrum Analyzer, Wireless Link Test, and Watchdog (highlighted). The main content area is titled 'HUB_FLEXR_21F237 Hub' and shows the following settings:

- Watchdog:** Radio buttons for Disabled and Enabled. 'Enabled' is selected.
- Watchdog Action:** Radio buttons for Wireless Restart, Ethernet Restart, and Device Reboot. 'Wireless Restart' is selected.
- IP Address:** A text field containing '10.120.223.32'.
- Watchdog Ping Interval:** A text field containing '10'. Below it, a label reads 'Minutes | Min 1 - Max 60'.
- Watchdog Ping Retries:** A text field containing '4'. Below it, a label reads 'Min 3 - Max 30'.


Tools > Watchdog page attributes

Attribute	Meaning
Test Setup	
Watchdog	<p>Disabled: The device does not ping a specified IP address periodically for verification of connectivity</p> <p>Enabled: The device periodically pings the IP address specified. If IP connectivity is lost, the action defined in Watchdog Action is performed.</p>
Watchdog Action	<p>Wireless Restart: In case of lost ping connectivity to the specified IP address, the device automatically restarts the wireless interface.</p> <p>Ethernet Restart: In case of lost ping connectivity to the specified IP address, the device automatically restarts the Ethernet interface.</p> <p>Device Reboot: In case of lost ping connectivity to the specified IP address, the device automatically reboots.</p>
IP Address	Indicates the target IP address for which the device attempts ping connectivity diagnostics.
Watchdog Ping Interval	Indicates the interval in minutes between each ping connectivity diagnostic.
Watchdog Ping Retries	Indicates the number of ping retries executed by the device prior to considering the test failed (and conducting the action defined in Watchdog Action).


Tools > Ping page

Use the Ping page to conduct a simple test of IP connectivity to other devices that are reachable from the network. If no ping response is received or if “Destination Host Unreachable” is reported, the target may be down, there may be no route back to the device, or there may be a failure in the network hardware (i.e. DNS server failure).

Tools > Ping page

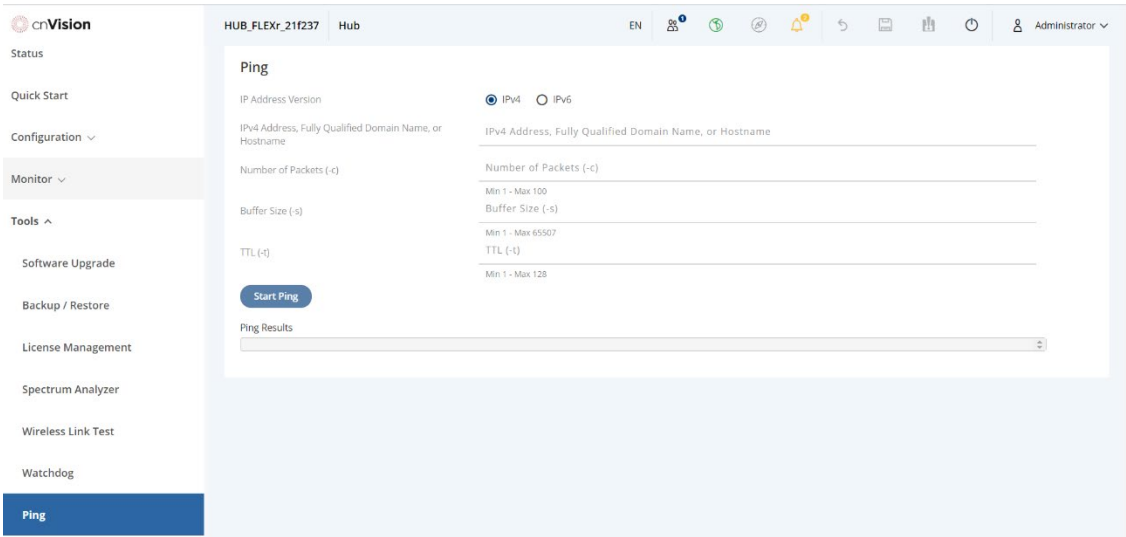

Tools > Ping page attributes

Attribute	Meaning
Ping	
IP Address Version	IPv4: The ping test is conducted via the IPv4 protocol. IPv6: The ping test is conducted via the IPv6 protocol.
IP Address	Enter the IP address of the ping target.
Number of packets (-c)	Enter the total number of ping requests to send to the target.
Buffer size (-s)	Enter the number of data bytes to be sent.
TTL (-t)	Set the IP Time-To-Live (TTL) for multicast packets. This flag applies if the ping target is a multicast address.
Start Ping	Click the  button to start the ping process.
Ping results	The results of the ping test are displayed in the box.


Tools > Traceroute page

Use the Traceroute page to display the route (path) and associated diagnostics for IP connectivity between the device and the destination specified.

Tools > Traceroute page

The screenshot shows the cnVision Traceroute page. The sidebar on the left contains the following items: Status, Quick Start, Configuration (with a dropdown arrow), Monitor (with a dropdown arrow), Tools (with an expand/collapse arrow), Software Upgrade, Backup / Restore, License Management, Spectrum Analyzer, Wireless Link Test, Watchdog, Ping, and Traceroute (which is highlighted in blue). The main content area is titled 'Traceroute' and has a header bar showing 'HUB_FLEXr_21f237' and 'Hub'. Below the header, there are two input fields for 'IPv4/IPv6 Address, Fully Qualified Domain Name, or Hostname'. The settings section includes: 'Fragmentation (-F)' with radio buttons for 'OFF' (selected) and 'ON'; 'Trace method (-I)' with radio buttons for 'ICMP ECHO' (selected) and 'UDP'; 'Display TTL (-l)' with radio buttons for 'OFF' (selected) and 'ON'; and 'Verbose (-v)' with radio buttons for 'OFF' (selected) and 'ON'. A blue 'Start Traceroute' button is located below the settings. At the bottom, there is a 'Traceroute Results' section with a placeholder box.

Tools > Traceroute page attributes

Attribute	Meaning
Traceroute	
IP4/IPV6 Address	Enter the IP address of the target of the traceroute diagnostic.
Fragmentation (-F)	ON: Allow the source and target to fragment probe packets. OFF: Do not fragment probe packets (on the source or target).
Trace method (-I)	ICMP ECHO: Use ICMP ECHO for traceroute probes. UDP: Use UDP for traceroute probes.
Display TTL (-l)	ON: Display TTL values for each hop on the route. OFF: Suppress display of TTL values for each hop on the route.
Verbose (-v)	ON: ICMP packets other than TIME_EXCEEDED and UNREACHABLE are displayed in the output. OFF: Suppress display of extraneous ICMP messaging.
Start Traceroute	Click the  button to start the traceroute process.
Traceroute Results	Traceroute test results are displayed in the box.

VMS Integration


The **VMS Integration** screen provides several options for configuring the Video Management System settings. Refer to the VMS Integration section for Configuring the devices for Wisenet Wave VMS and Milestone XProtect VMS systems. Refer to the VMS integration chapter for detailed steps.

Tools > VMS Integration page

The screenshot shows the 'VMS Integration' configuration page in the cnVision interface. The page is titled 'HUB_FLEXr_21f237 Hub'. On the left, there is a sidebar with navigation options: Status, Quick Start, Configuration (selected), Monitor, and Tools. The main content area is divided into two sections. The top section, 'VMS integration', contains settings for 'VMS agent' (radio buttons for Disabled and Enabled, with Enabled selected), 'VMS's type' (a dropdown menu showing 'Genetec Security Center VMS'), 'VMS address' (text field with '10.120.223.2'), 'VMS Port' (text field with '4059'), 'VMS Username' (text field with 'admin'), and 'VMS Password' (password field with masked characters). The bottom section, 'VMS Preview Link', includes a 'Generate Link' button and a text field displaying the generated link: 'http://10.120.223.21/vms.html?i=576e5ad2d17059cd11975365c5226a90'. The footer of the interface shows 'Version CNV-4.5.3', 'Support', 'Community Forum', and '© 2020 Cambium Networks, All Rights Reserved'.

VMS Integration > VMS Integration attributes

Attribute	Meaning
VMS Integration	
VMS agent	Enabled: The VMS Integration settings are displayed. Disabled: The VMS Integration settings are hidden.
VMS type	Wisenet Wave VMS: Select this option if you are using Wisenet Wave VMS Milestone XProtect VMS: Select this option if you are using Milestone Xprotect VMS.
VMS address	Enter the VMS IP address or the fully qualified domain name (FQDN).
VMS port	Enter the VMS port.
VMS username	Enter the VMS username.
VMS password	Enter the VMS password.
VMS Preview Link	


Attribute	Meaning
Generate Link	Click the  button to generate a URL link.
VMS Preview Link	This is the generated URL link to use to integrate with VMS systems.

Chapter 6: Configuring VMS Integration

VMS Integration Overview

The cnVision devices can be integrated with Video Management Systems (VMS) to display device statistics and to send event and alarm messages within the VMS consoles. This feature allows users to monitor device status and performance within the VMS console instead of having to connect to each device individually.

Depending on the VMS systems in use, you can set up alarms to notify the user of key events such as when a new device is registered or removed from the system, or if it has been disconnected or rebooted, and so forth.

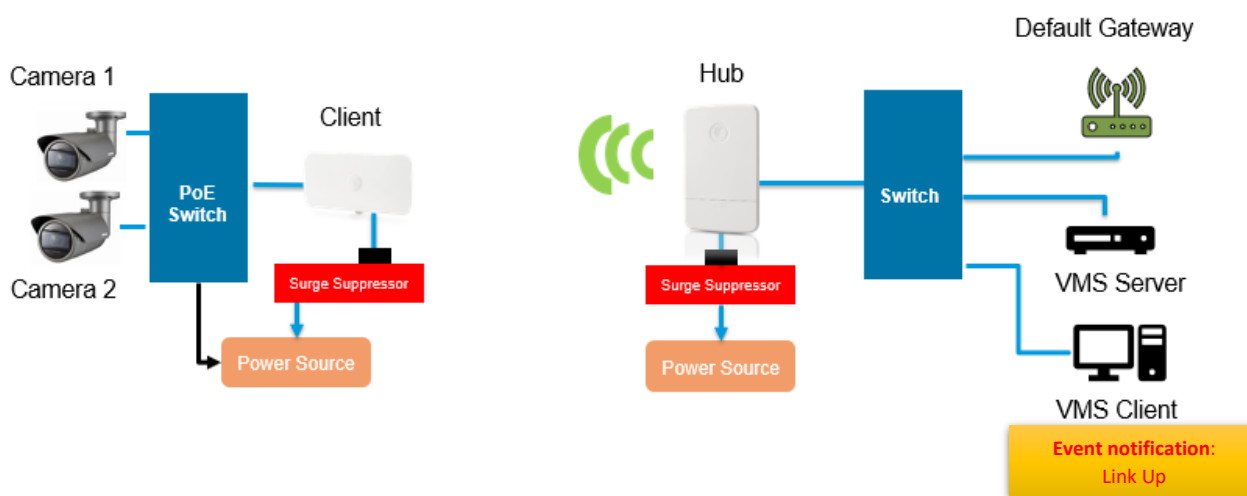


The cnVision devices currently supports the following Video Management Systems:

- [Wisenet Wave](#) VMS
- [Milestone XProtect](#) VMS
- [Genetec Security](#) VMS
- [NX Witness](#) VMS




Note This guide provides the basic steps necessary to configure the cnVision devices with the supported Video Management Systems (VMS). Refer to the specific VMS documentation for advanced configuration details. Contact the VMS manufacturer for VMS support if necessary.

Below are examples of the Wisenet Wave VMS and the Milestone XProtect VMS systems integrated with a cnVision Client. The device statistics and the event messages generated by the device are displayed within the consoles.

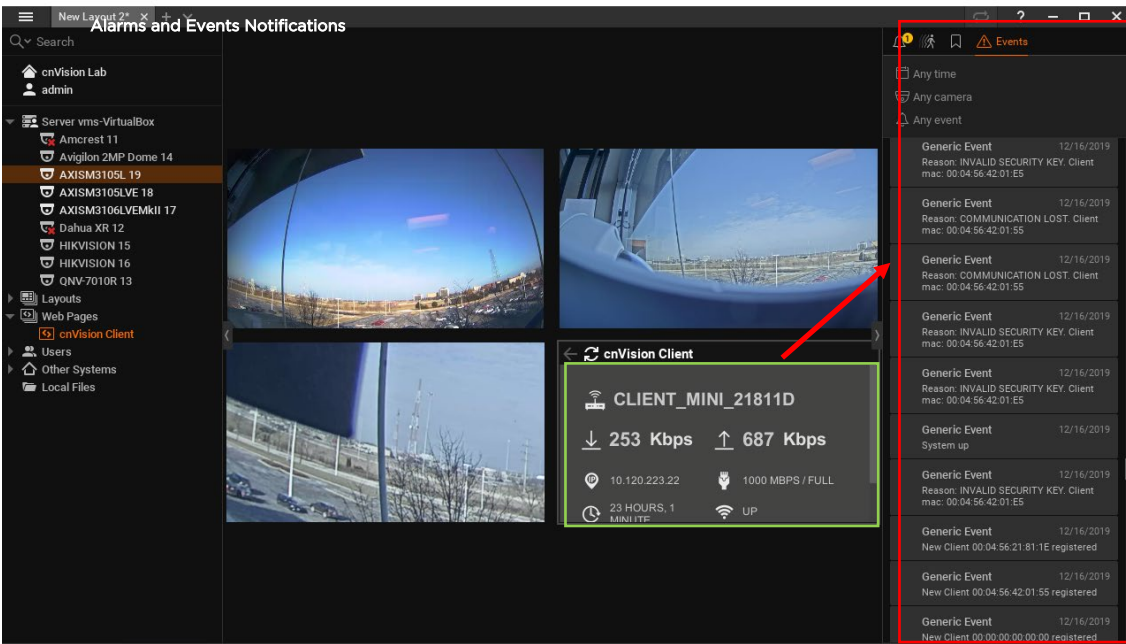

Wisenet Wave VMS

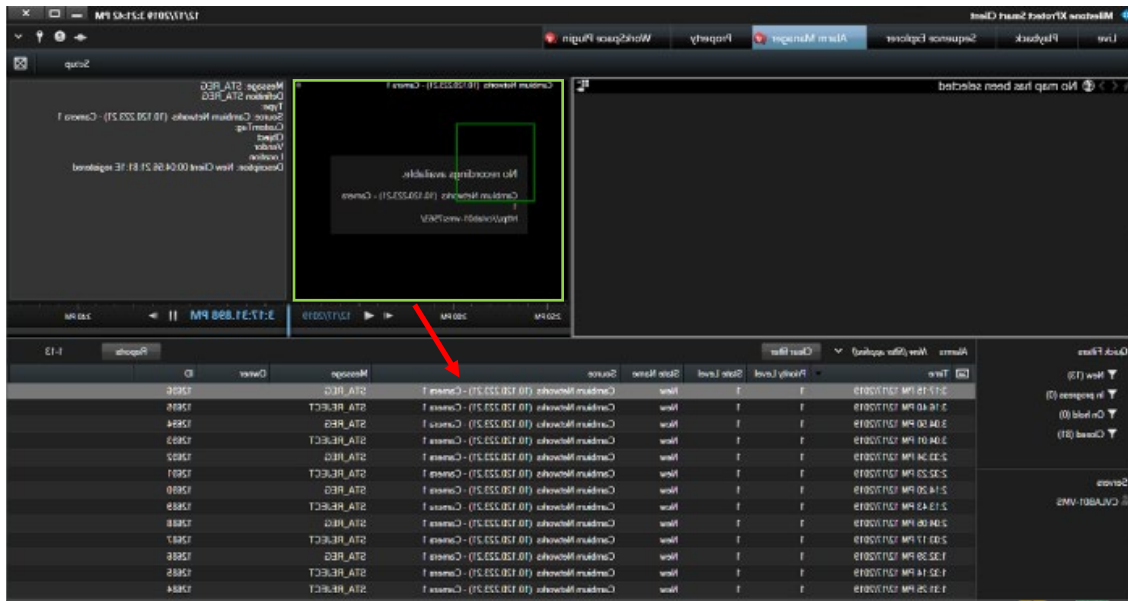

Milestone XProtect VMS

Events and Alarms

cnVision devices support the following event messages for the VMS systems. Depending on the type of VMS system being used, additional configurations may be required to display these messages. The Wisenet Wave VMS, and the NX Witness systems displays these messages automatically. The Milestone XProtect VMS, and the Genetec VMS systems require additional configurations to map and display these messages.

Supported Event Types

Event Type	Description
SYS_UP	System up
STA_REG	Station registration
STA_DROP	Station Drop
SA_MODE	Spectrum Analyzer mode
CFG_IMPORT	Configuration import status
CFG_EXPORT	Configuration export status
FW_UPD_ST	Software update status
GPS_FW_UPD_ST	GPS Software update status
GPS_SYNC_ST	GPS Sync status
DFS_ST	Change in DFS Status
LINK_ST	Link up/down events
BSA_ST	BSA state
SYSTEM_CONFIG_APPLIED	Configuration successful
CFG_RESTORE	Configuration restore
CFG_BACKUP	Configuration backup
STA_REJECT	STA Reject reason

Configuring Hubs and Clients for VMS Integration

Prerequisites:


- Install and configure the VMS software (Server and Client) in your environment.
- Document the VMS IP address, the port number, the VMS username, and the password.




Note The device VMS integration steps are the same for all supported VMS systems.

The following steps are required to configure the VMS settings for the cnVision Hubs and Clients.


1. Log in to the Hub or Client device.
2. Navigate to the VMS Integration screen.
3. Click the **Enabled** radio button to enable the VMS Integration settings.

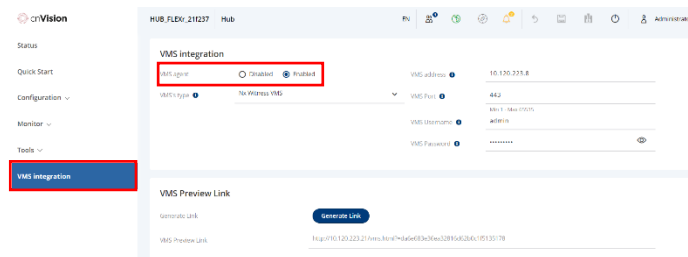

4. Select the VMS system type. The options are **Wisenet Wave VMS**, **Milestone XProtect VMS**, **Genetec Security System VMS**, or the **NX Witness VMS**.
5. Enter the VMS IP address.
6. Enter the VMS port number.
7. Enter the VMS system's username and password credentials.

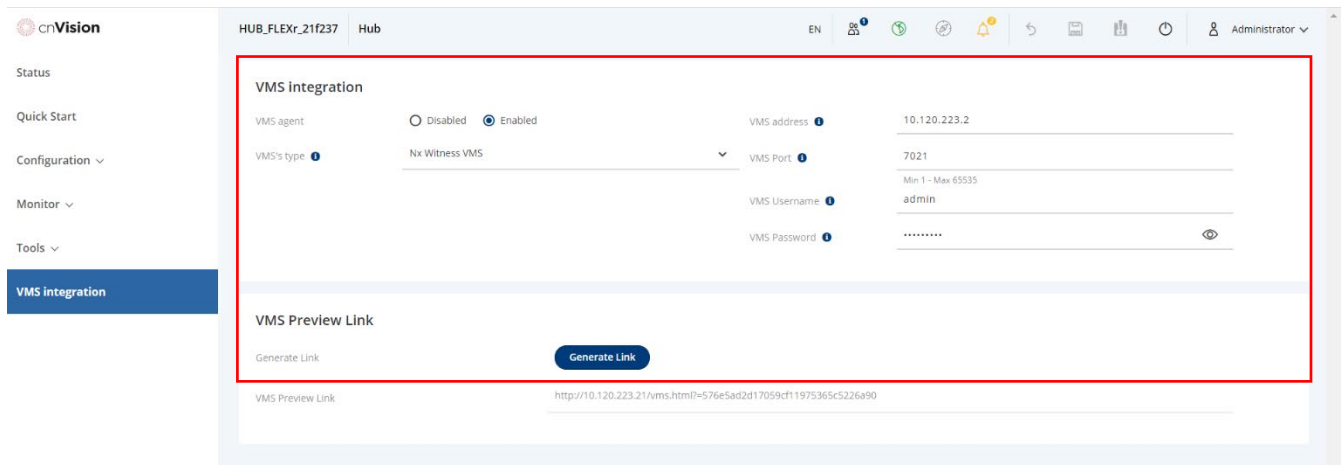

8. Click the **Save** button to save the settings.

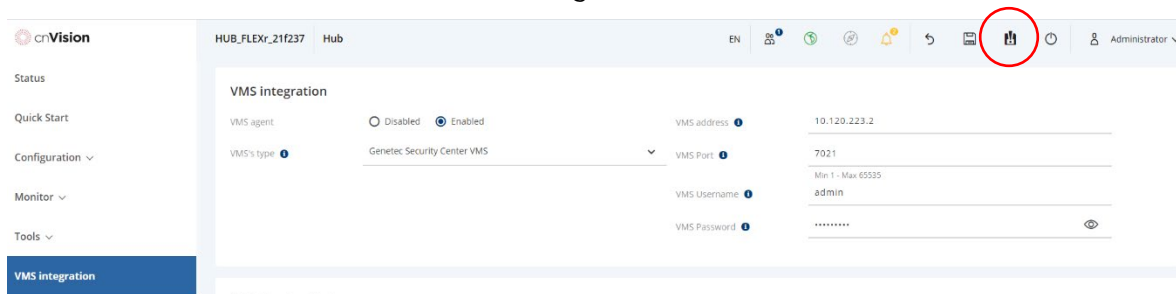

The device may automatically connect to the VMS system, or require additional configuration steps to display the device statistics. Refer to the configuration steps for the specific VMS integration.

Configuring cnVision Devices in Genetec VMS

Prerequisites:

Please complete the following steps before integrating the cnVision devices with Genetec VMS.


- Confirm the Web SDK feature is supported. Contact Genetec to obtain the Web SDK license.
- Install Cambium Networks cnVision Certificate from Genetec. The license must be purchased directly from Genetec using part number **GSC-1SDK-Cambium-cnV**.
- Configure Web SDK settings.

VMS Configuration Steps

1. [Configuring Event Messages](#)
2. [Configuring Alarms](#)
3. [Linking Event Messages to Alarms](#)
4. [Configuring Device Statistics Tiles in Config Tool application \(Genetec VMS\)](#)
5. [Configuring Device Statistics Tile in Security Desk application \(Genetec VMS\)](#)


Confirm Web SDK is supported

1. From the **Config Tool** tab, navigate to the **About** page.
2. Click the **Security Center** tab and scroll down the list to confirm the **Web SDK** option is supported.

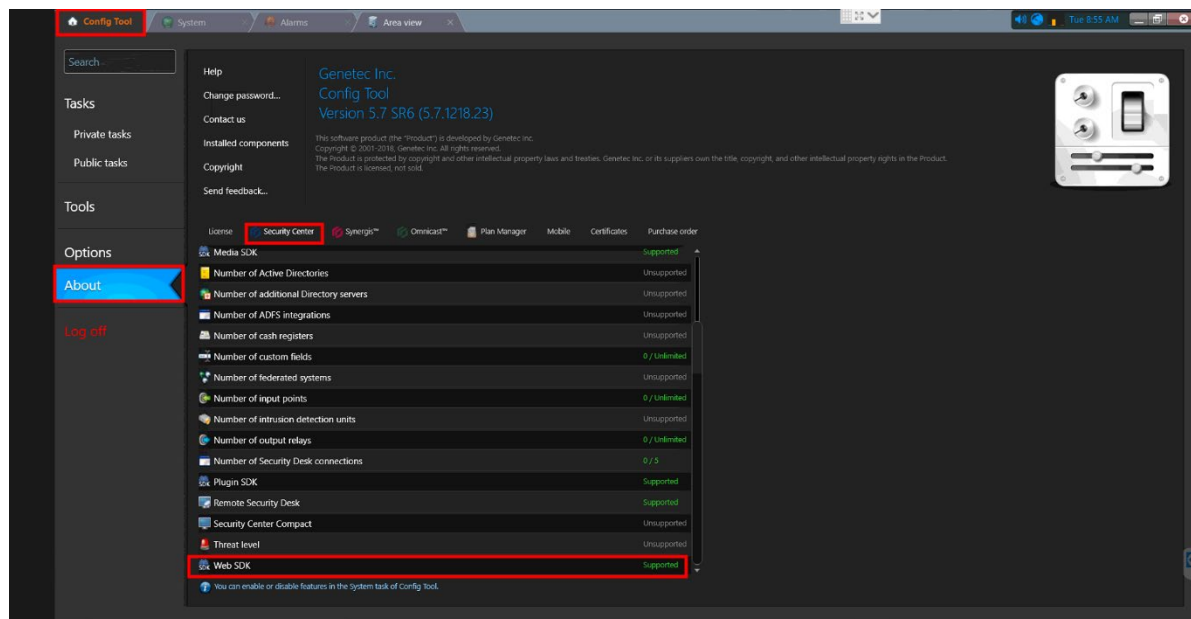


Configure Web SDK Role


1. From the **Config Tool** page, click the **System** icon.

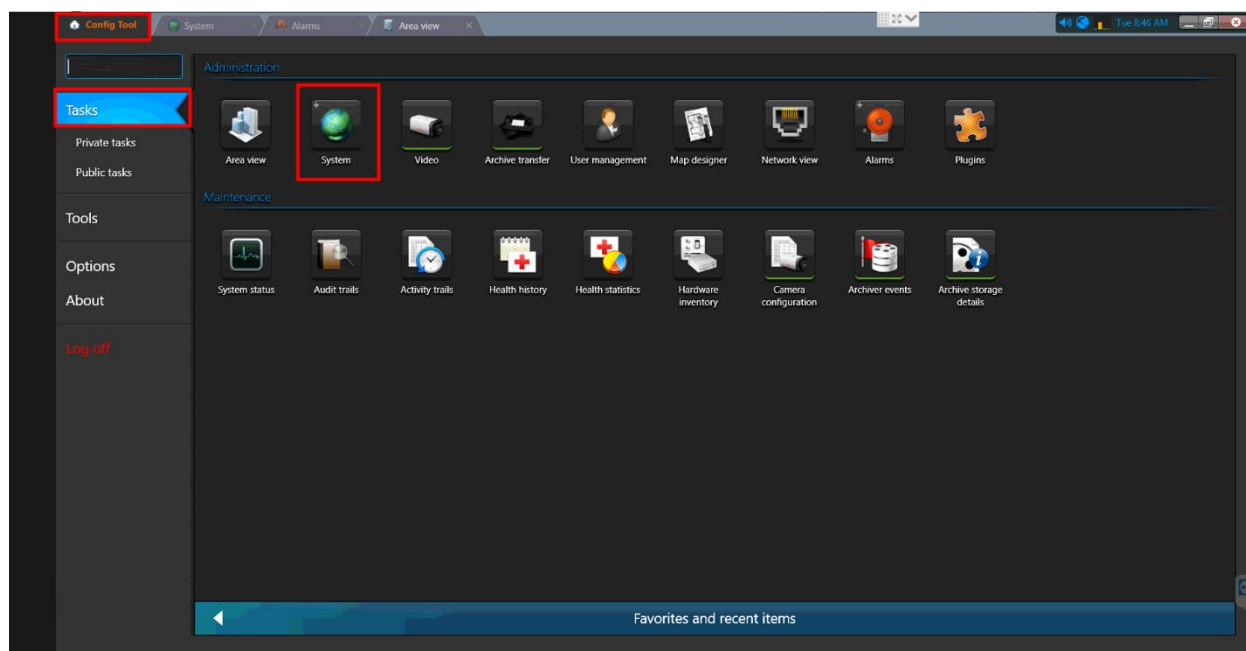


2. Click the **Add an entity** button. Select the **Web-based SDK** option from the context menu.

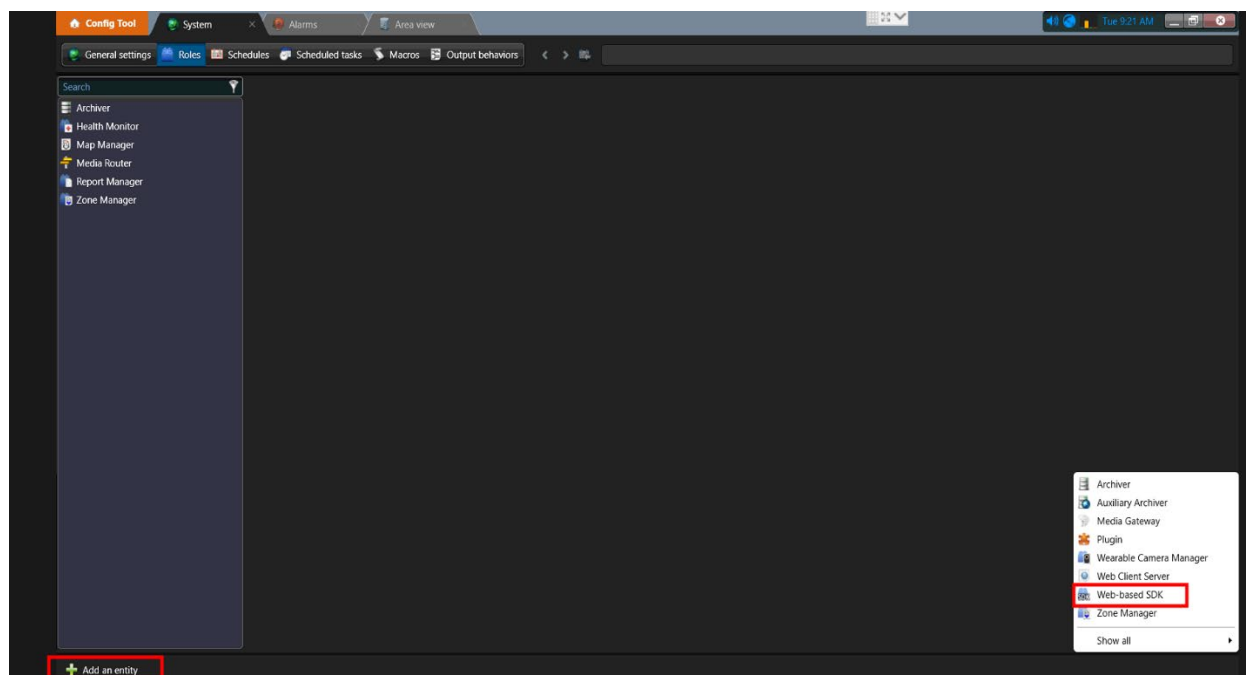


3. Enter a different name for the Entity or leave it at the default value. Click the **Next** button to continue.

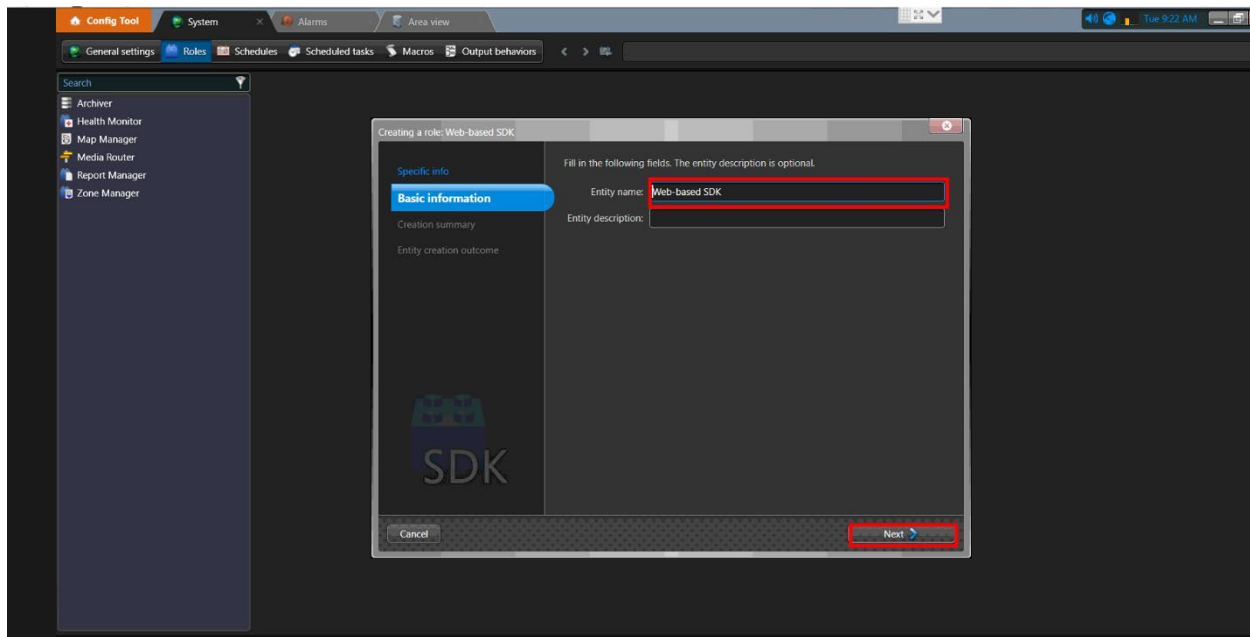


4. The dialog box will display the role summary. Click the **Create** button.

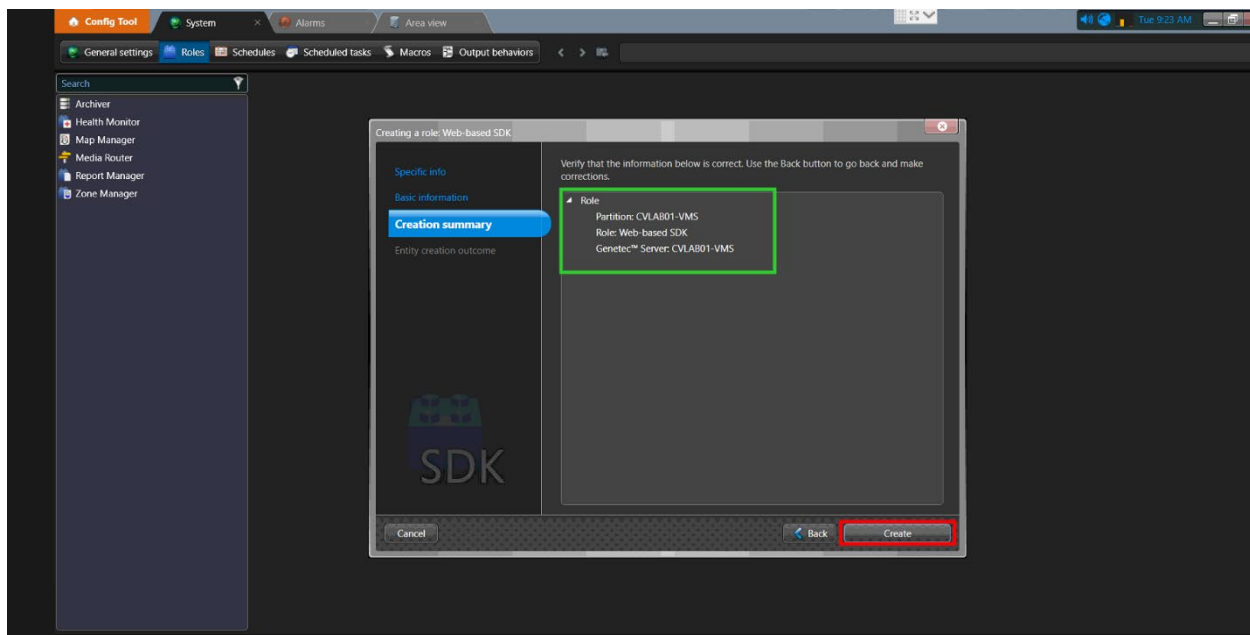


5. A message displaying the operation results is displayed. Click the **Close** button to finish the process.

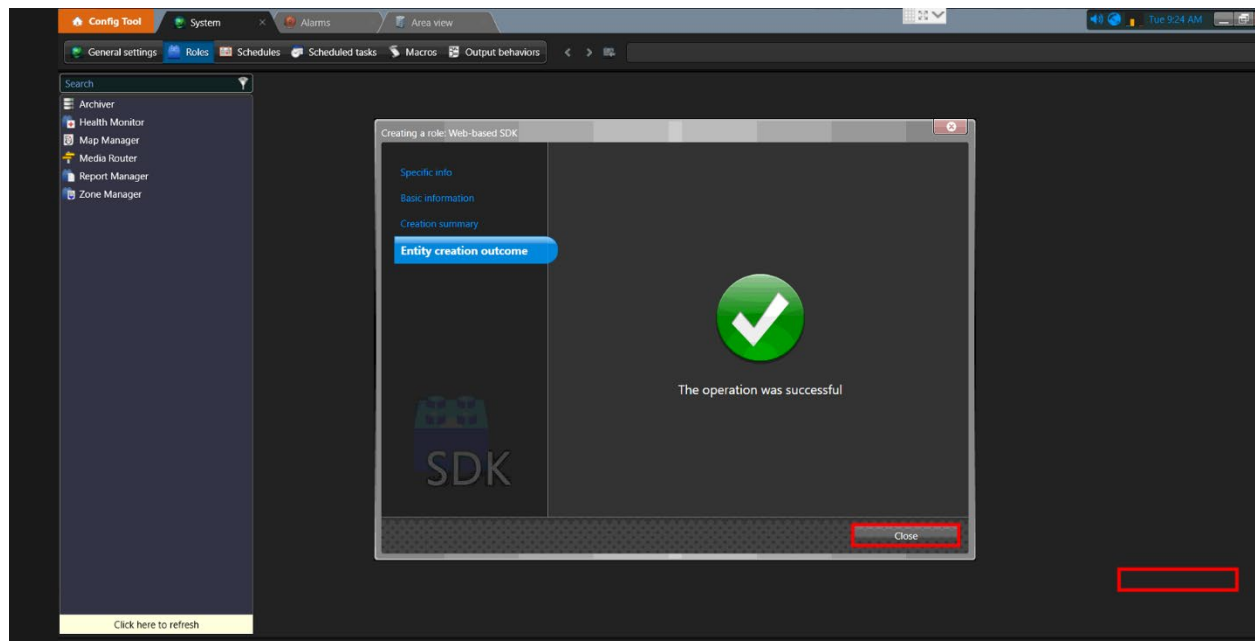


6. The Web SDK role should be displayed in the left pane. Confirm the settings are correct.

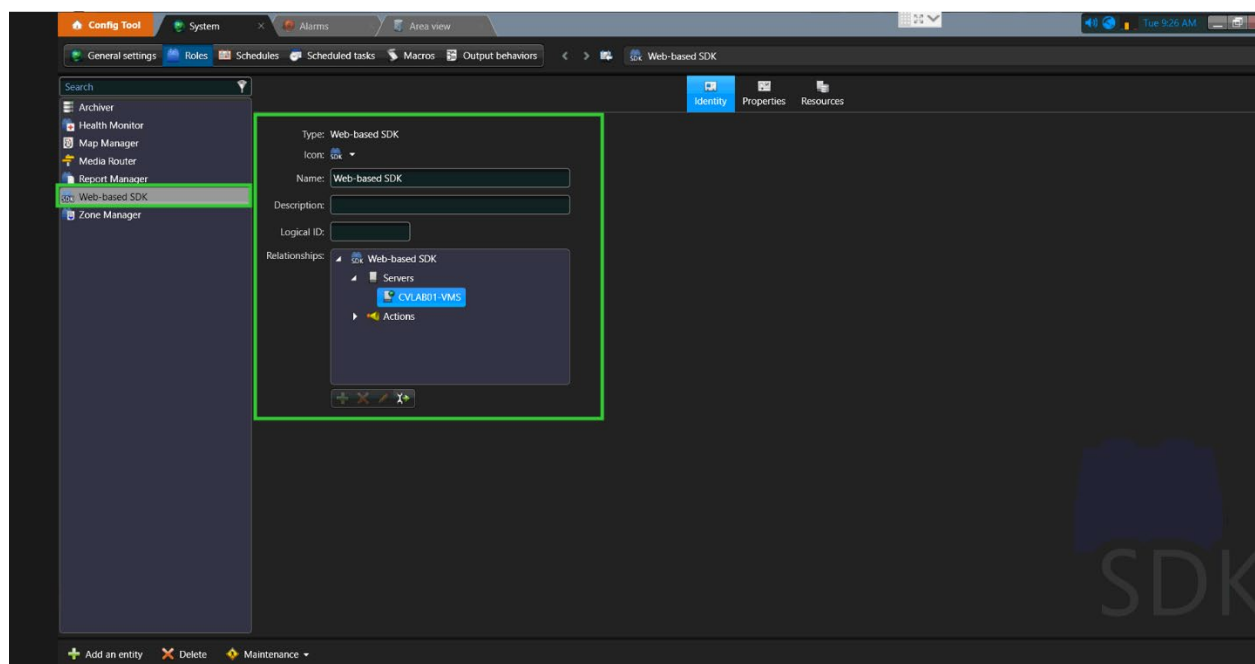

7. Next, click the **Properties** button to access the Port Number. **Note:** This information will be required to configure the VMS settings on the hubs and clients connecting to this system.

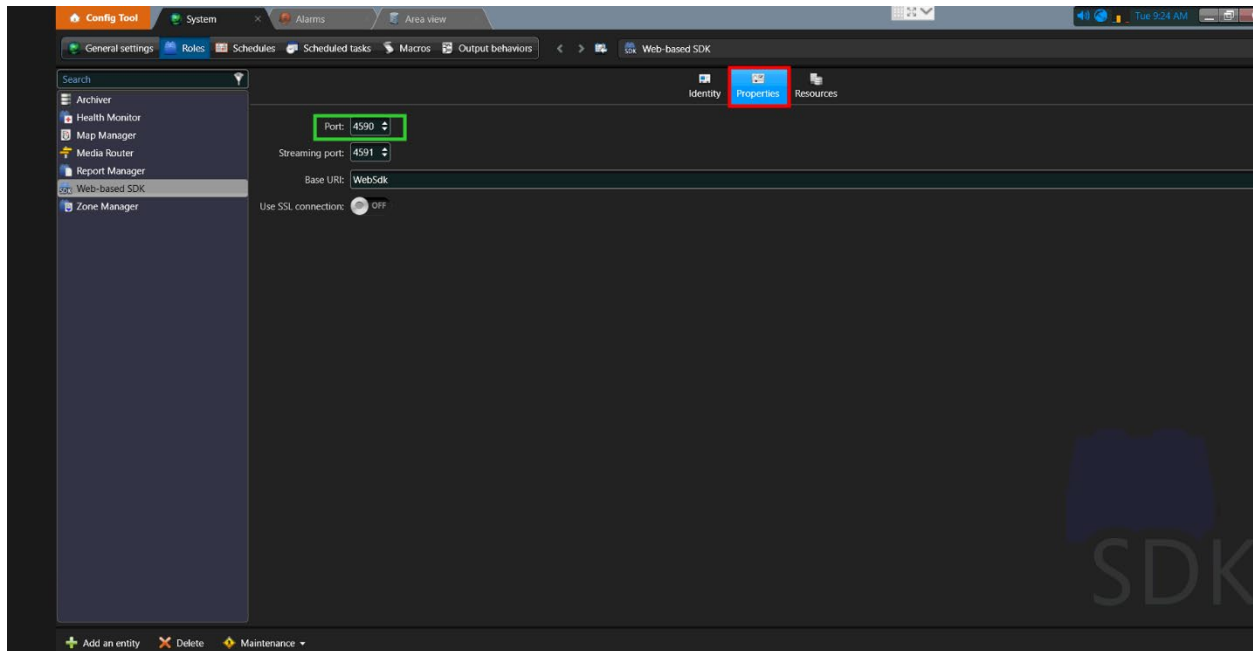


8. Finally, click the **Resources** button to verify the server information is correct. The next step is to configure the Event Messages.

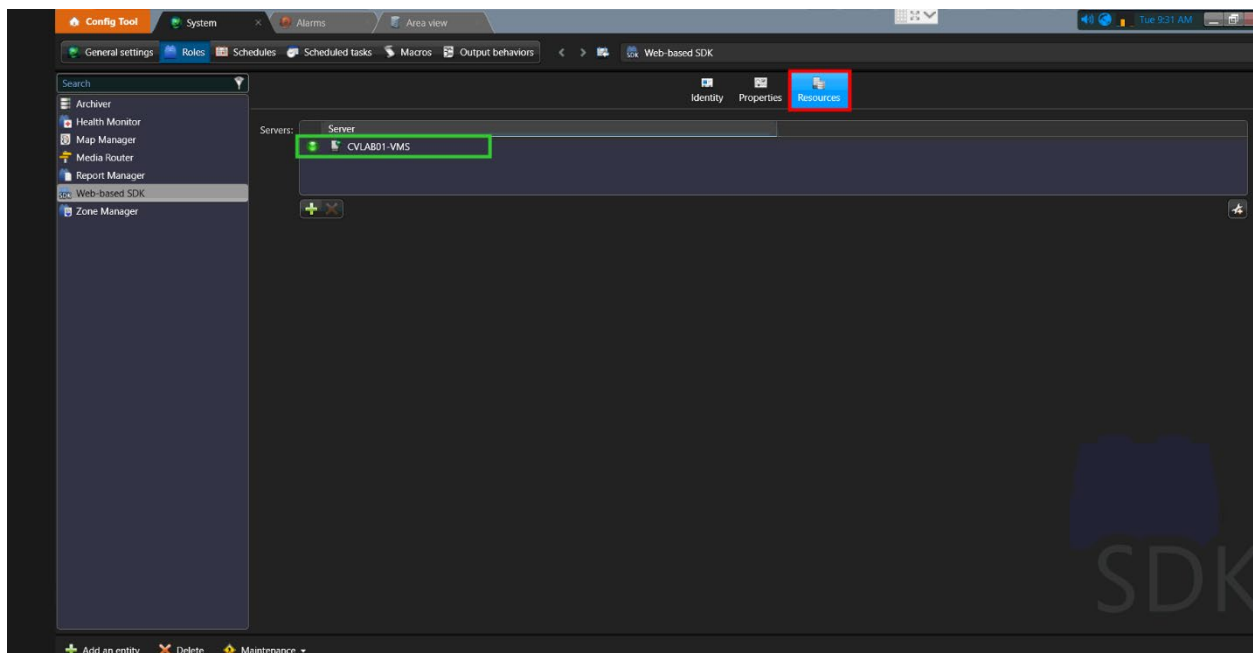


Configuring Event Messages


1. From the **Systems** page, navigate to the **General settings > Events** page. Click the **Add an entity** button.

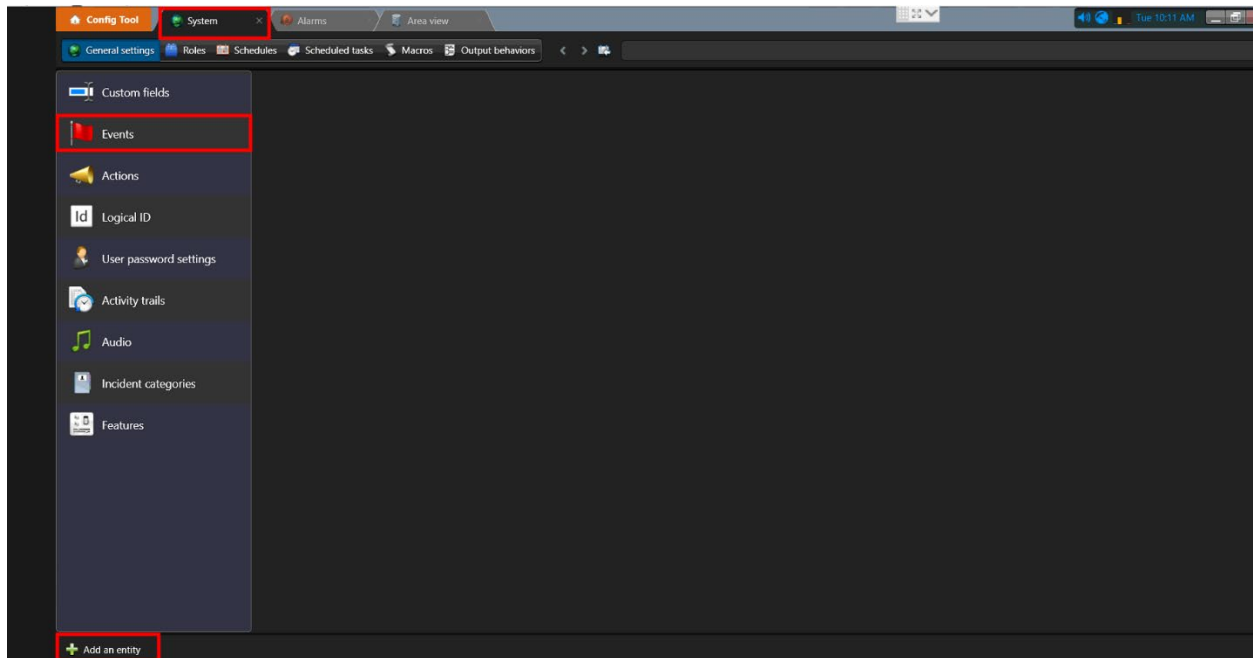


2. The system events supported by the cnVision devices can be found in the [Events and Alarms](#) section. Enter a system event you want to use in **Name** field.

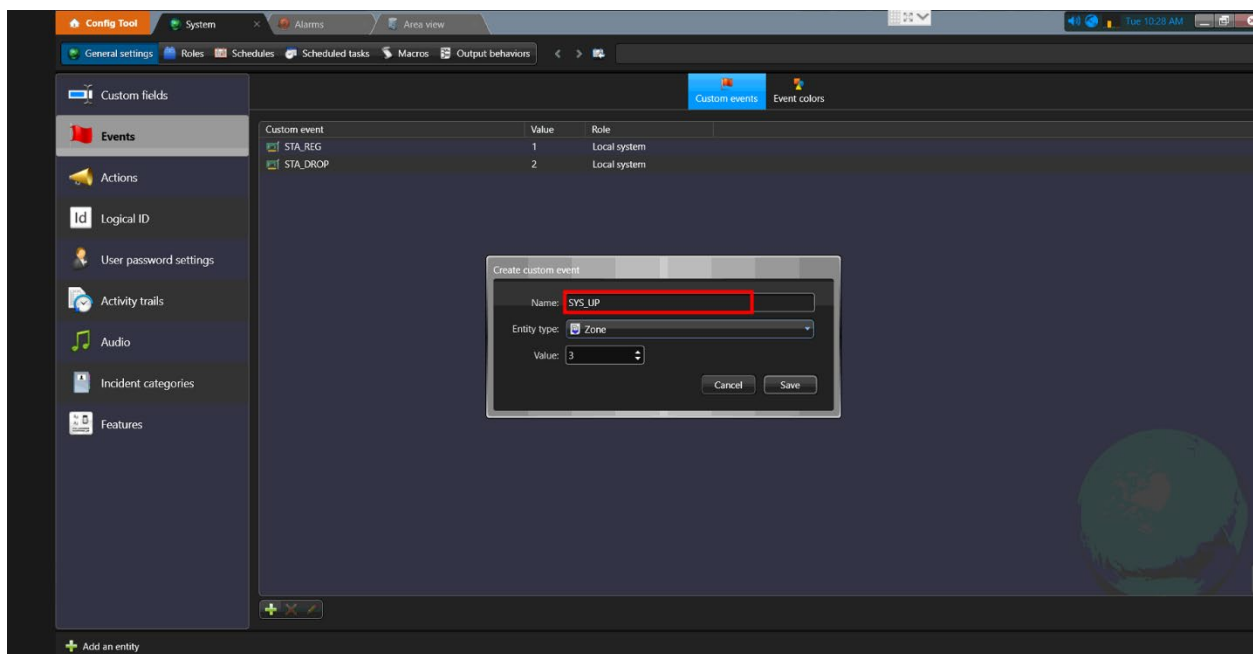


- Next, Click the Entity type drop-down to select an entity from the list. In this example, we will select **Device** from the list.

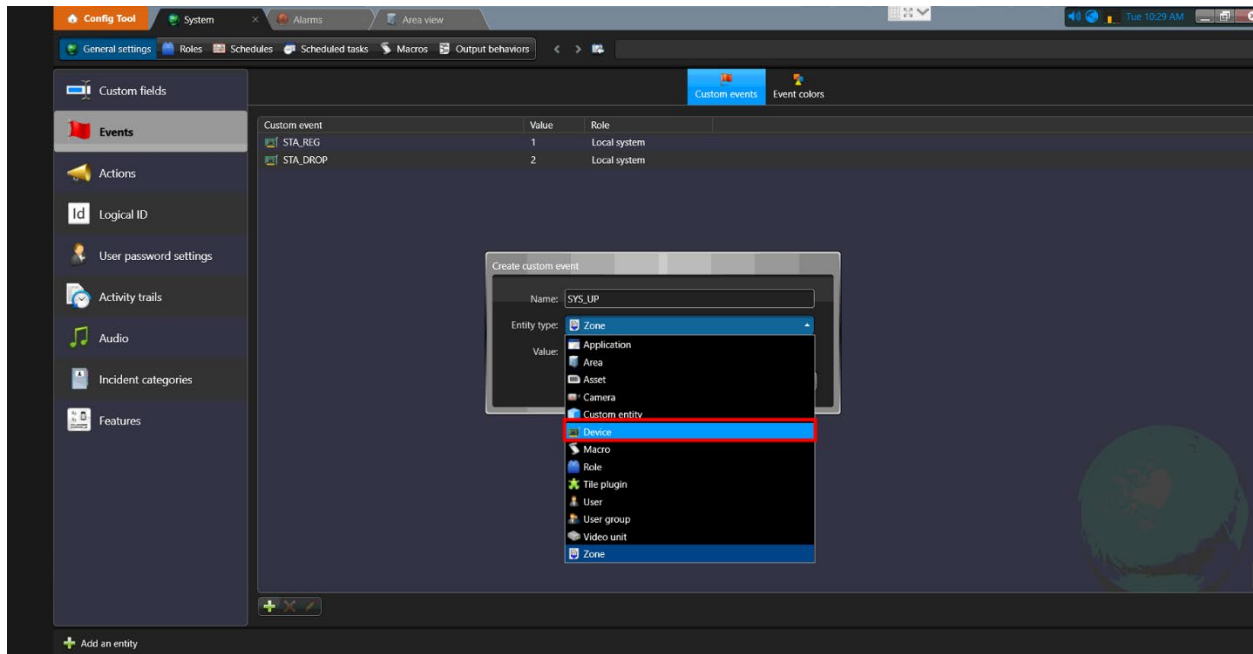

- Click the **Save** button to save the settings.

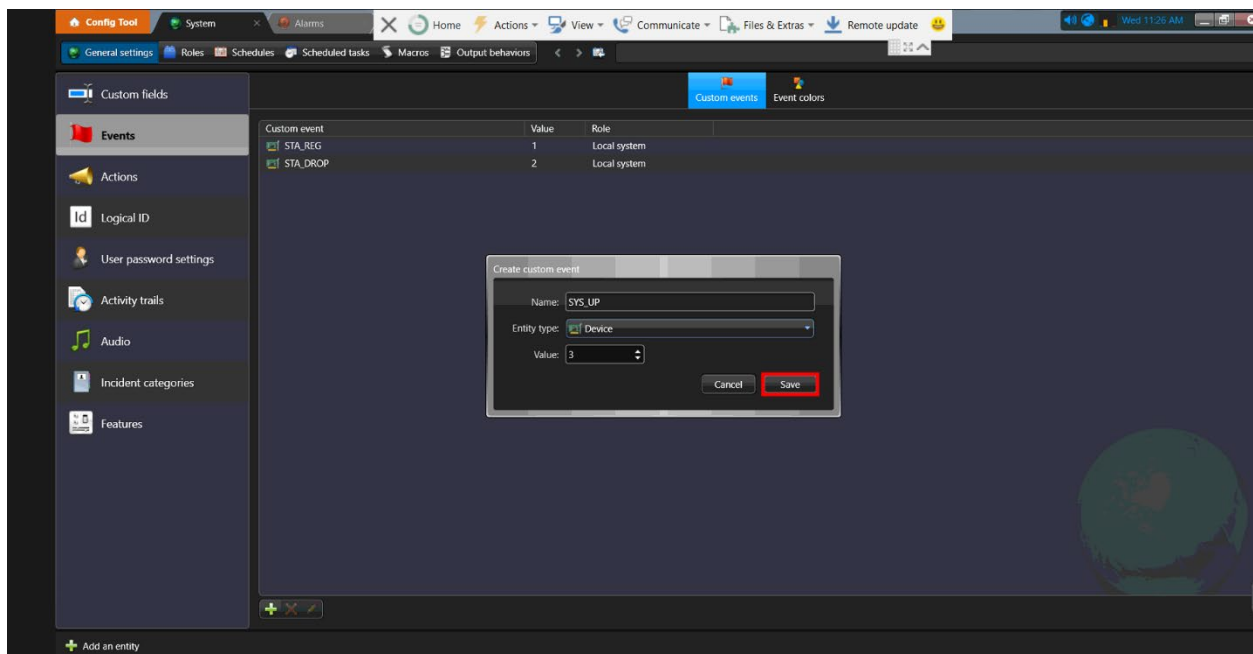


5. The new Event has been created and is displayed in the list. Click the Apply button to save the changes. The next step is to configure the Alarms.

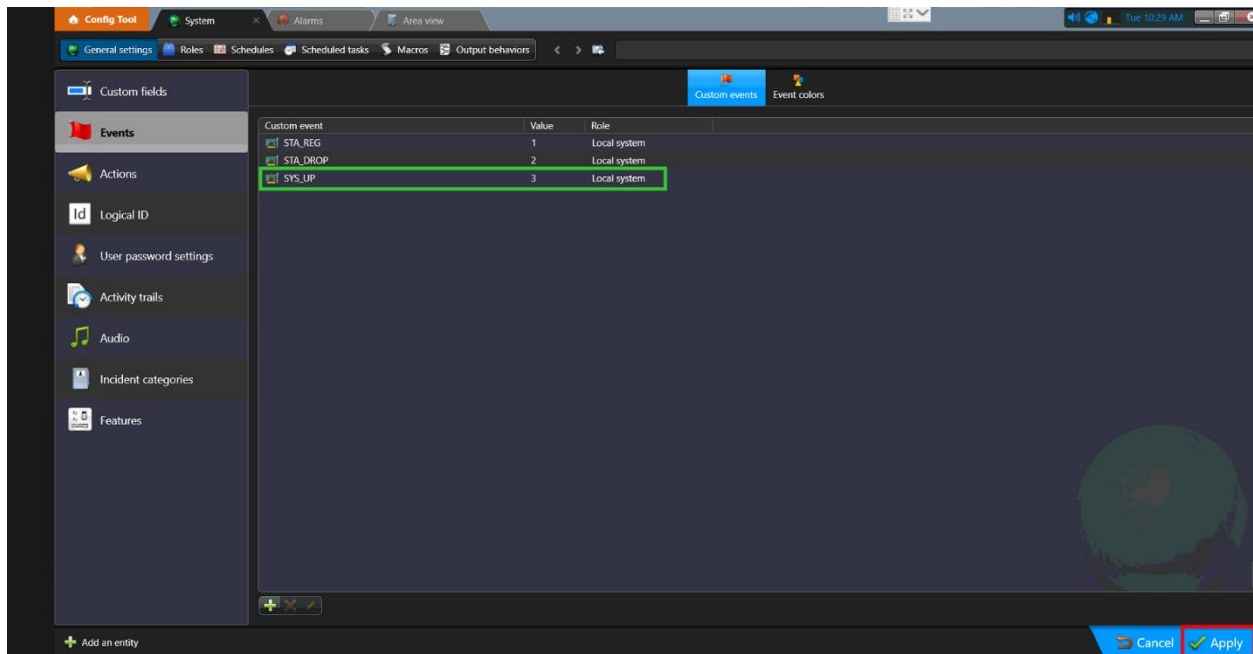


Configuring Alarms


1. To configure Alarms, navigate to the **Config Tool** page and click the **Alarms** buttons.

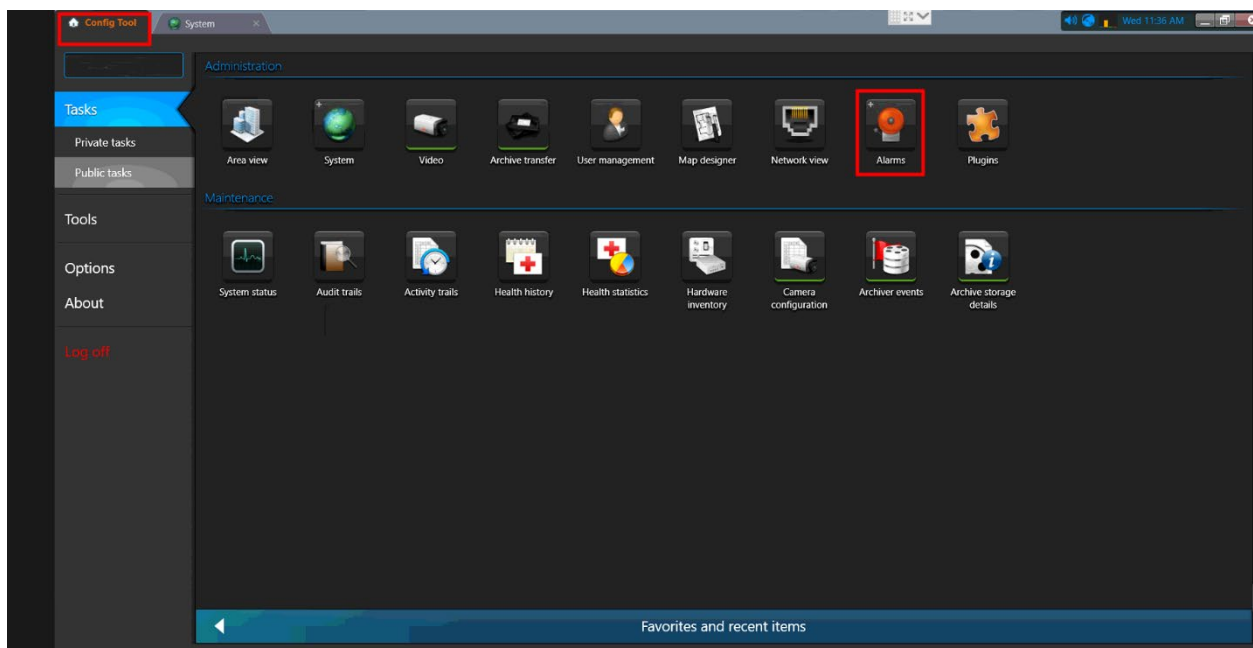


2. Click the **Add an entity** button to create a new Alarm.

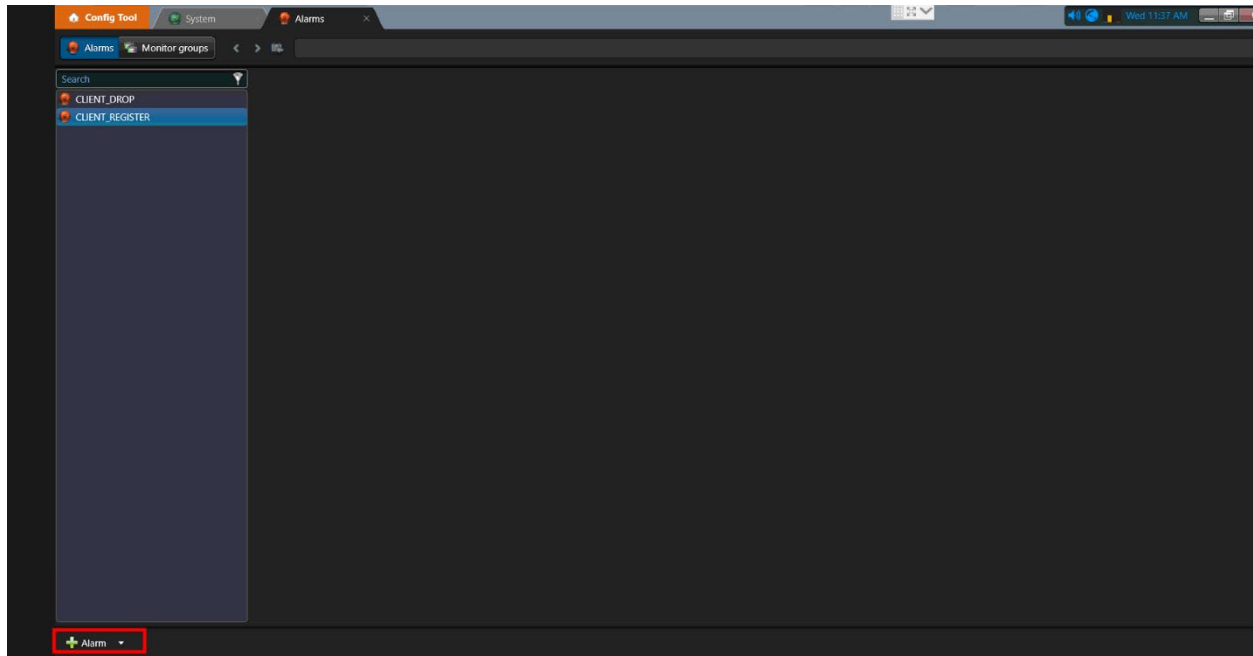


3. Enter a name for the new Alarm in the **Name** field.

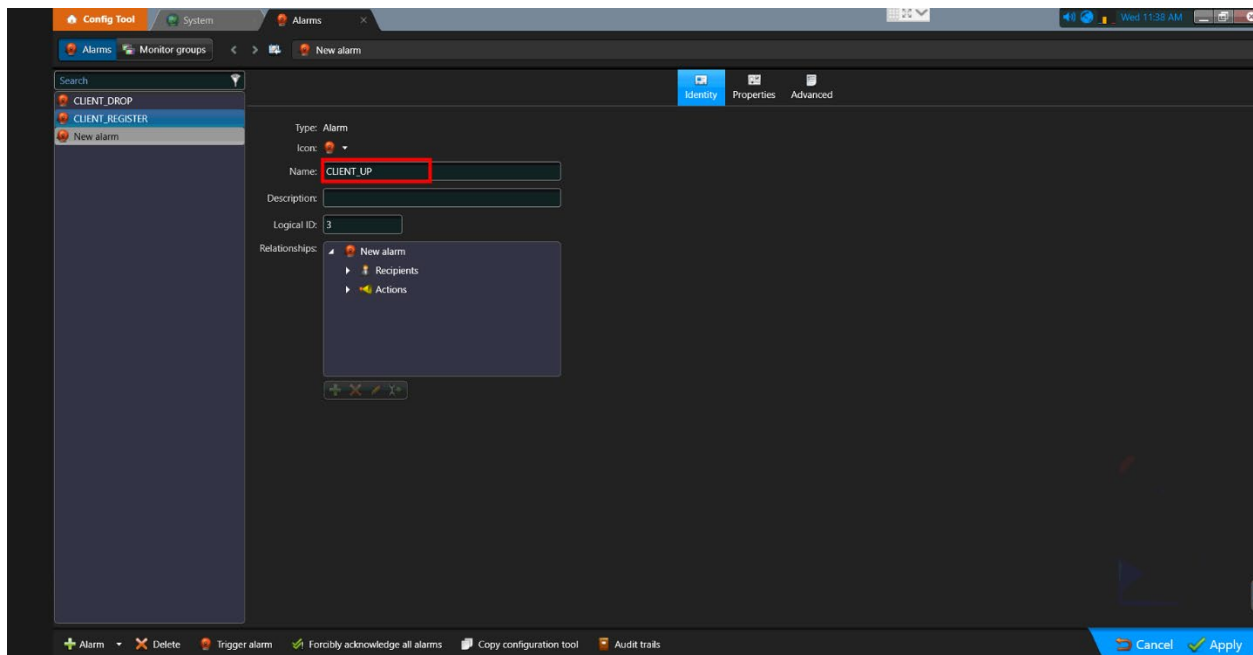


- Next, select the users who should receive the alarm notification. Select the **Recipients** menu item and click the **Plus** button.

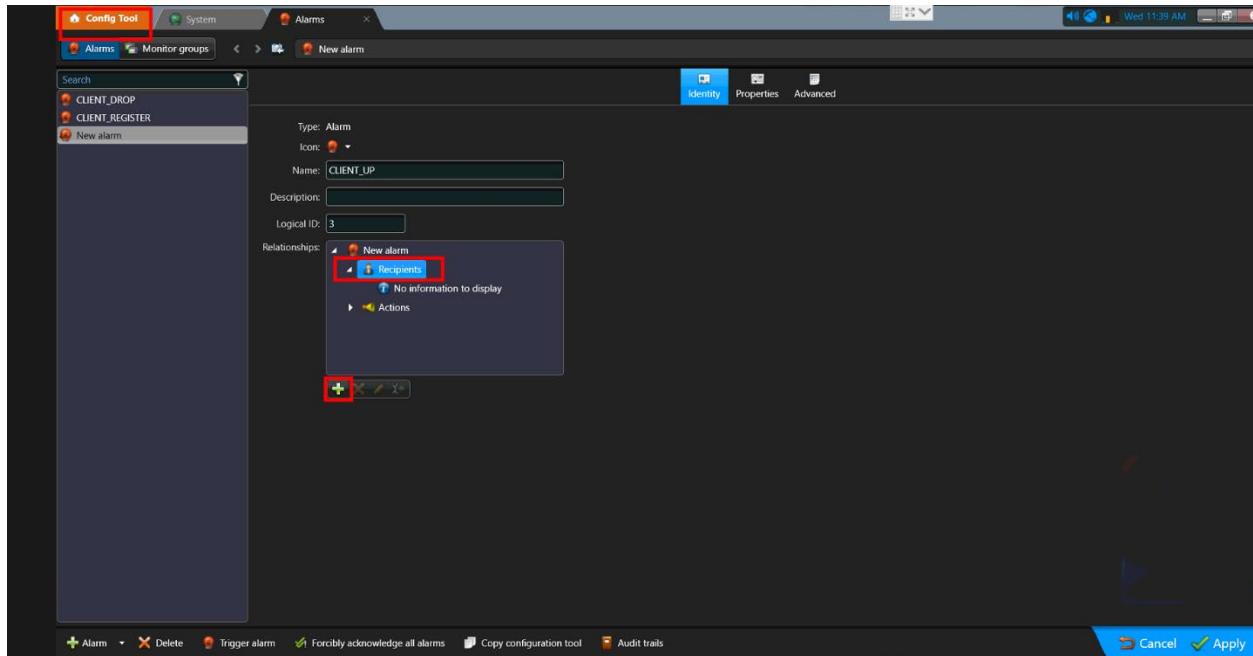


- Select the users from the list and click the **Select** button.

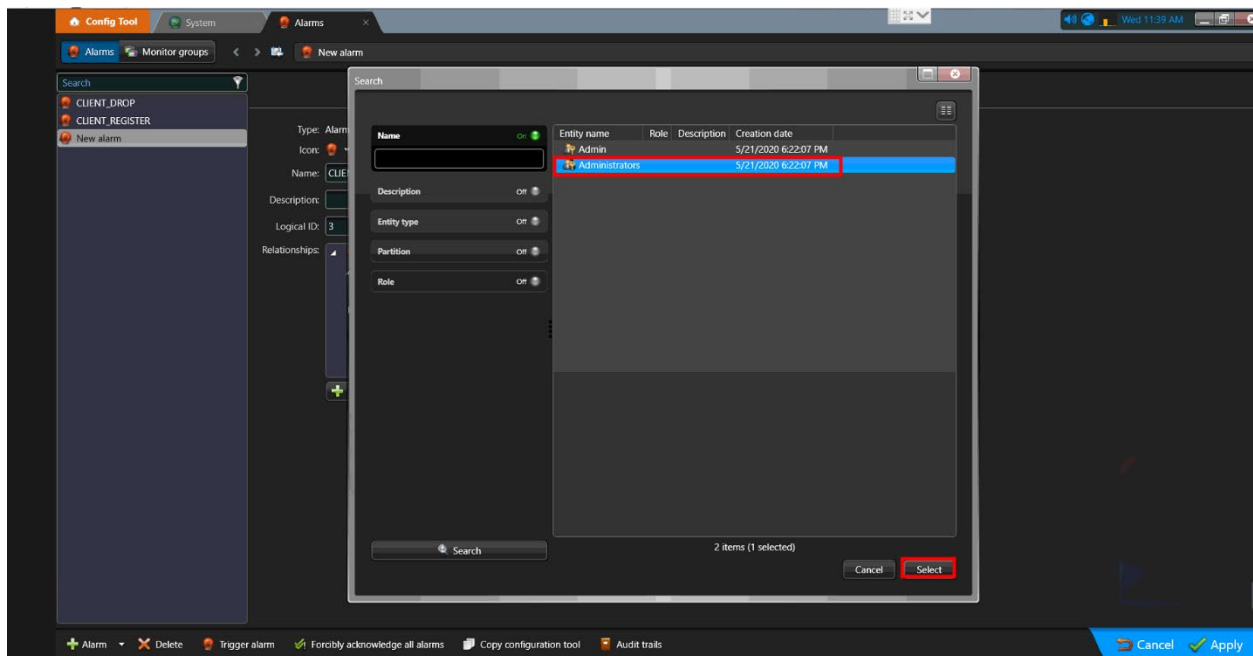

6. Click the **Apply** button to save the settings.

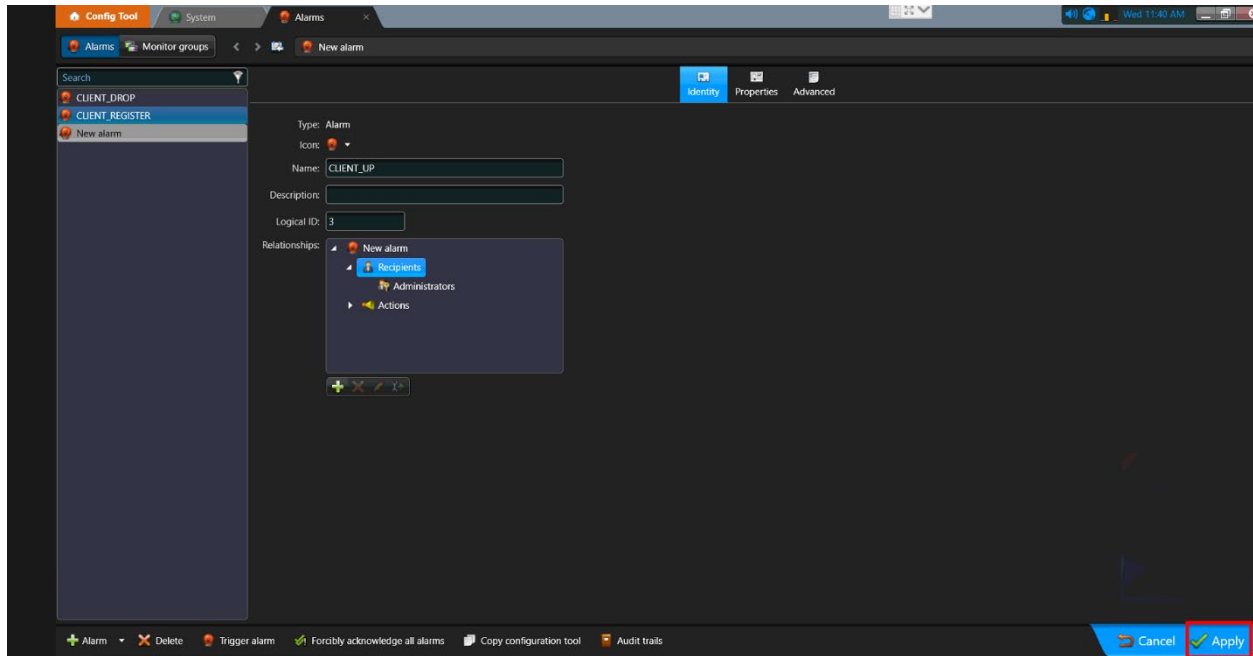


7. The new Alarm has been created and displayed in the left pane. The next step is to link Event message to Alarms.

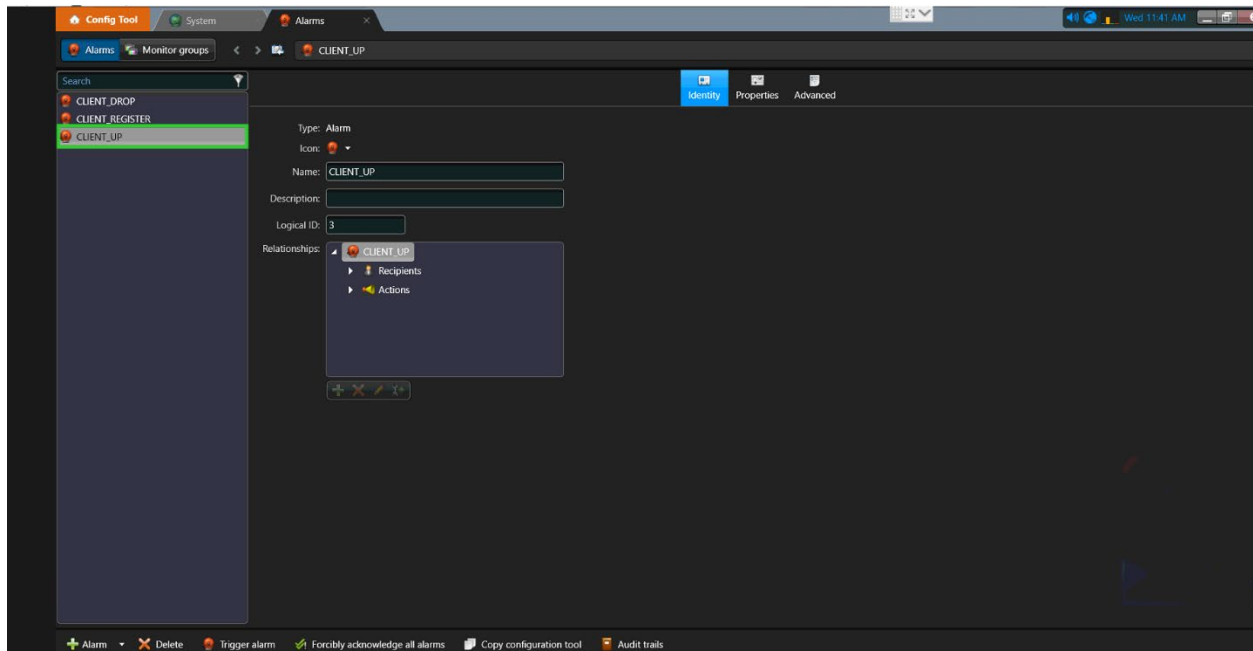


Linking Event Messages to Alarms


1. To link Events to Alarms, navigate to **Config Tool > System** page.

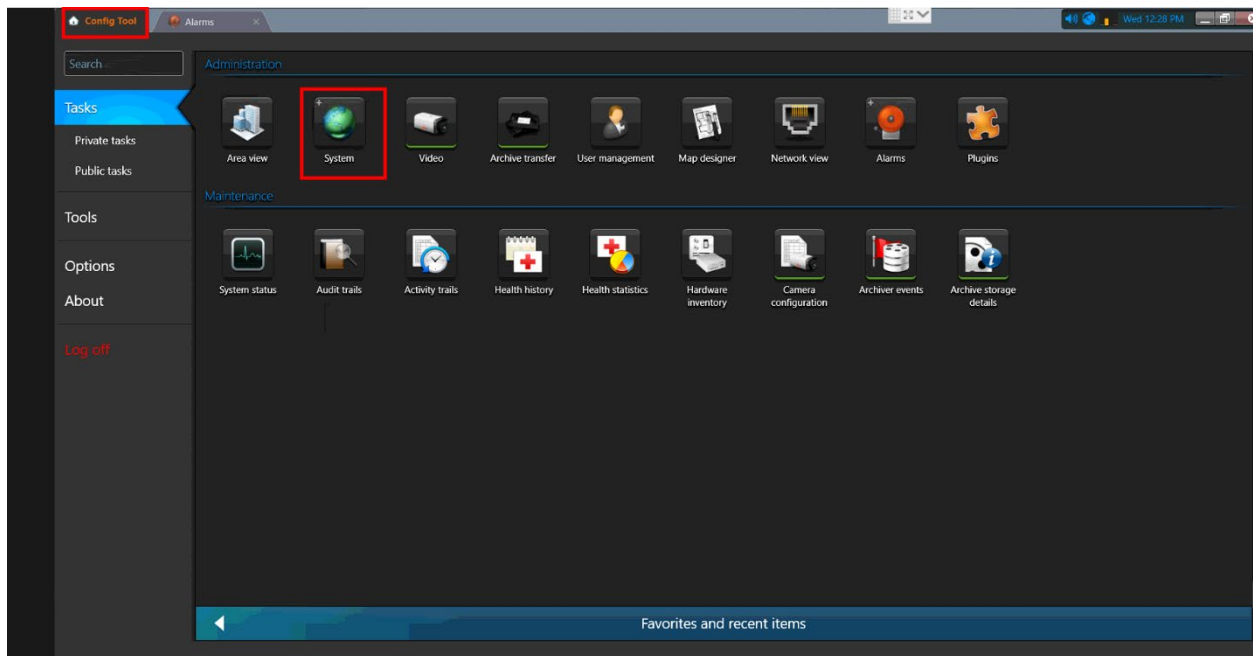


2. From the **General Settings** page, navigate to the **Actions** page. Click the **Plus** button to create a new Event to Alarm link.

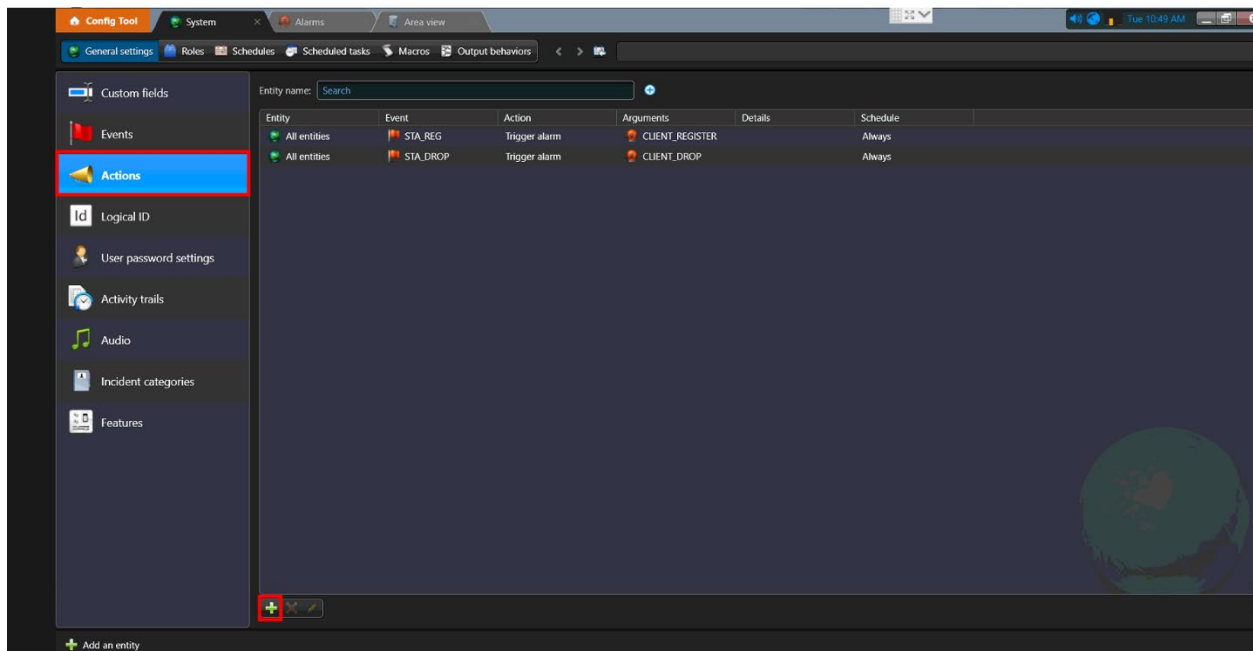


3. Click the **When** drop-down button to select an Event.

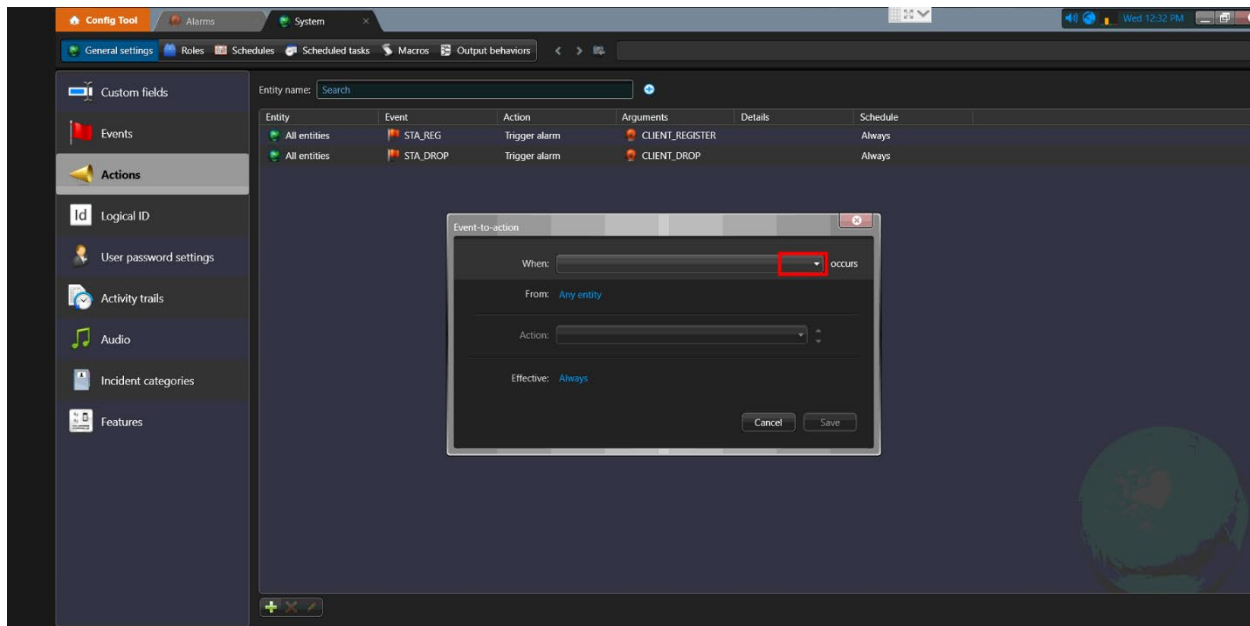


4. Select an Event from the list. We are selecting the **SYS_UP** Event as an example.

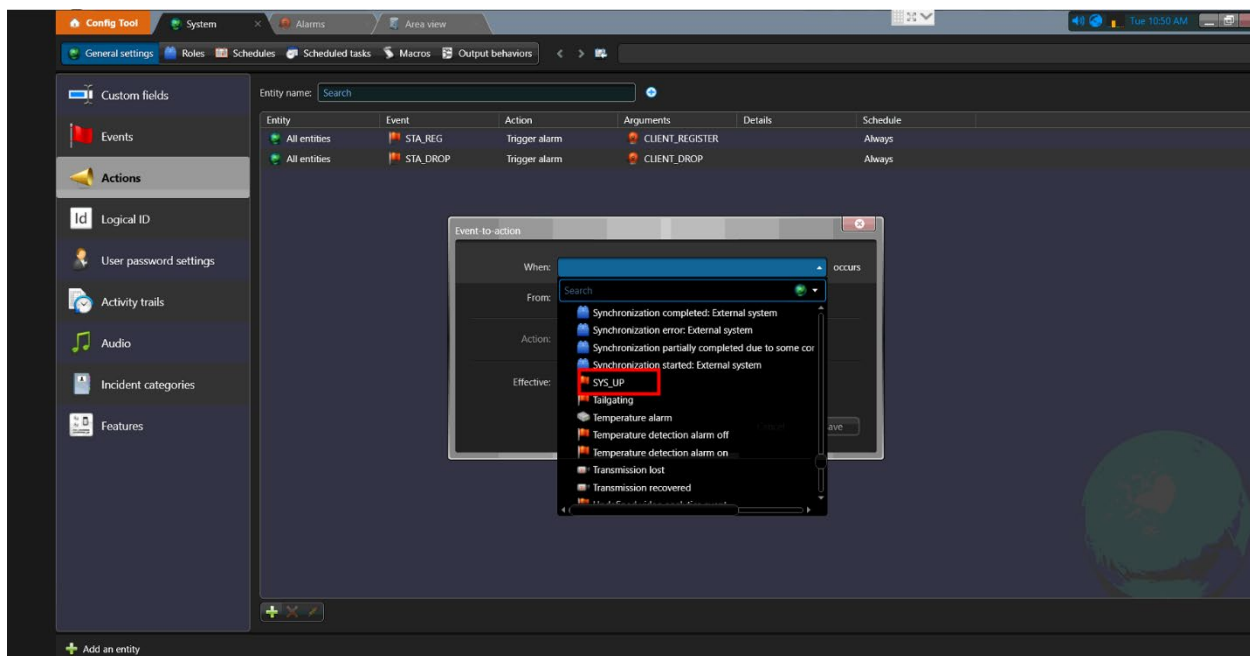


5. Next, click the **Action** drop-down button to select an action, in this example, the Event will trigger an alarm.

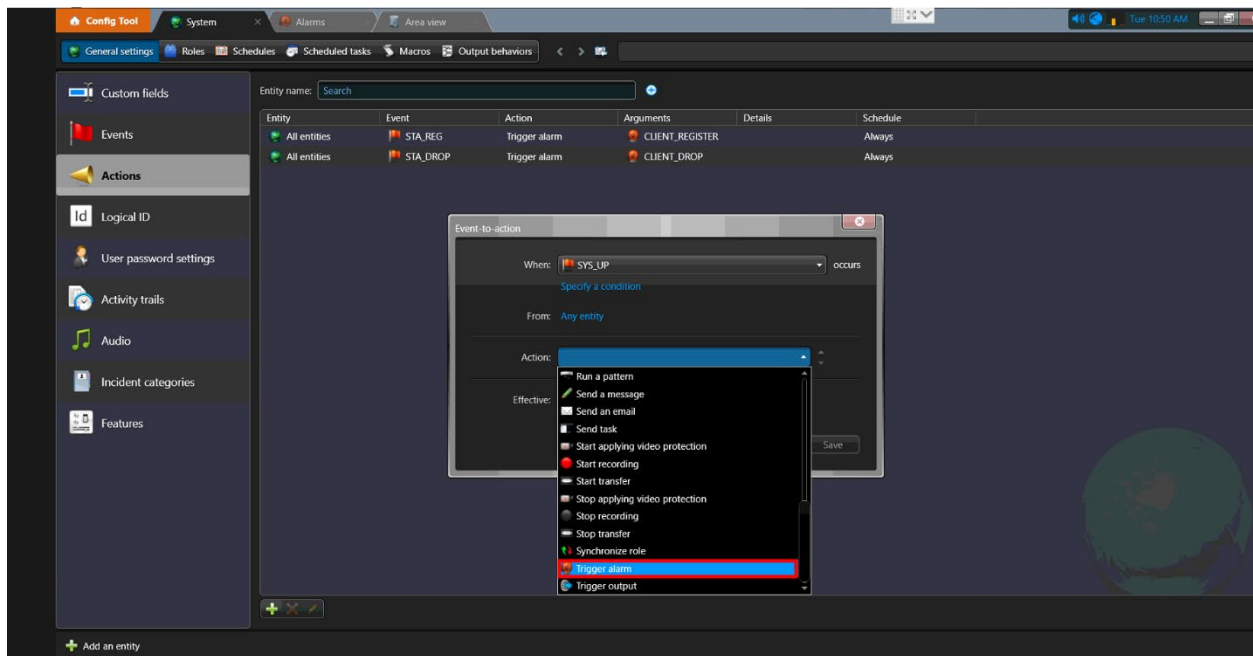


6. Next, select the Alarm from the list. In this example, we will select the **CLIENT_UP** alarm.

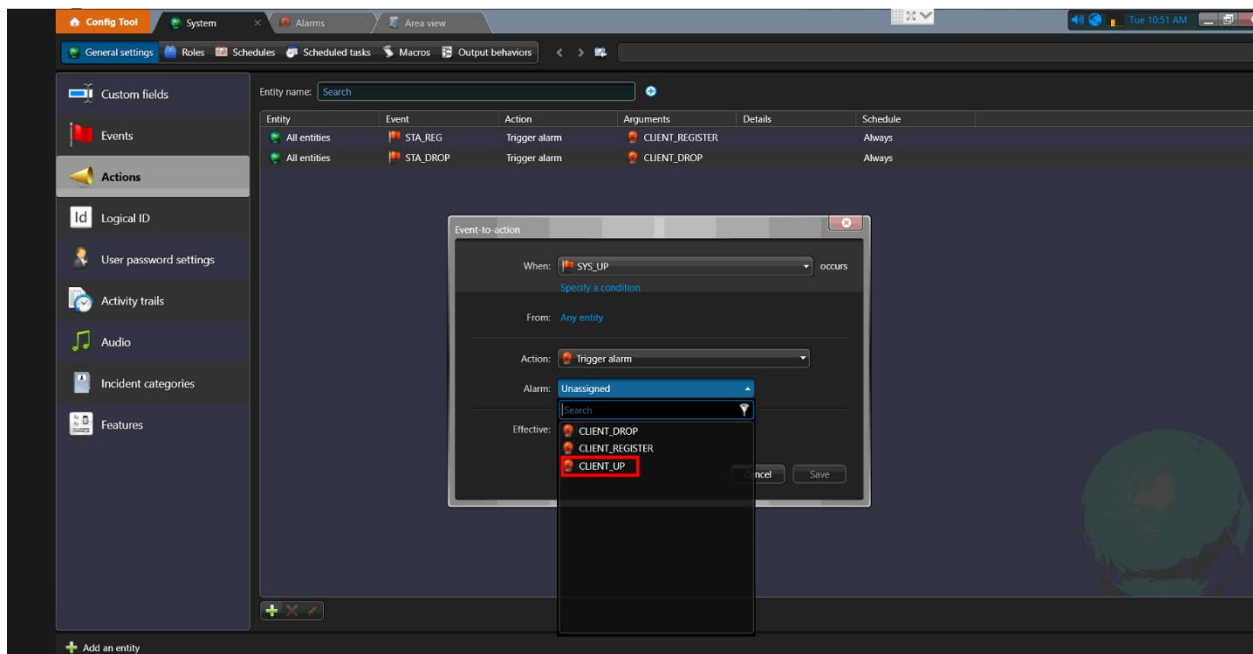

7. Click the **Save** button to save the settings.

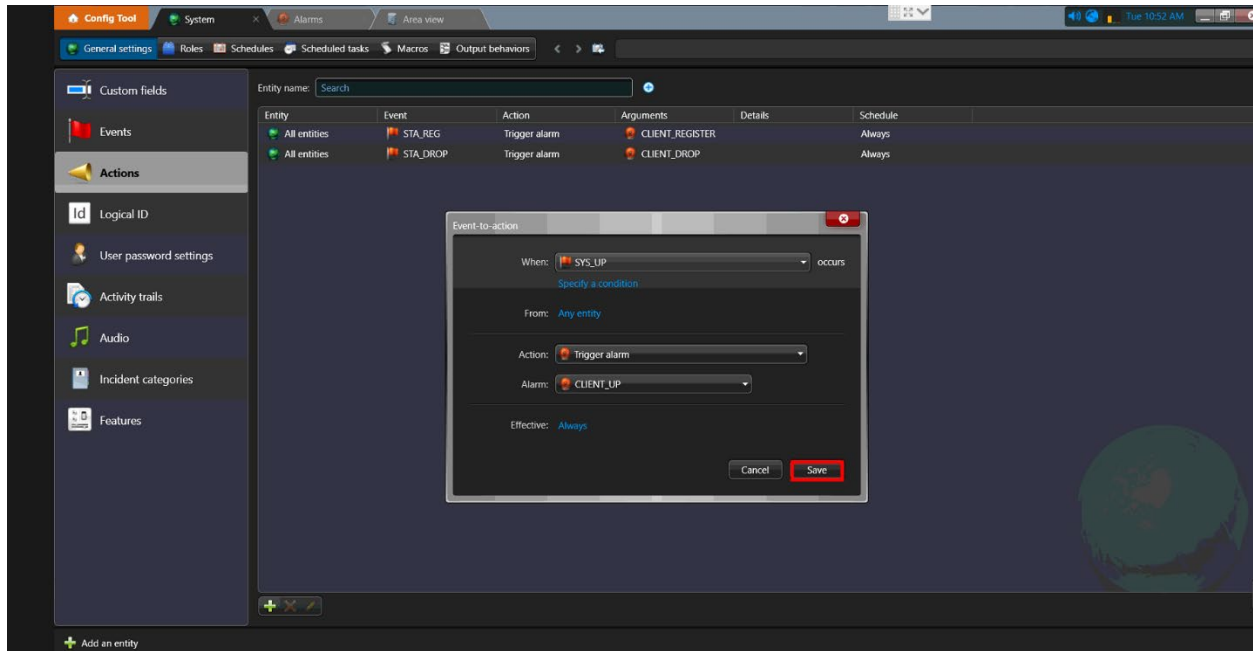


8. The new Event to Alarm link has now been configured. The Genetec VMS system is ready to receive the Events. The next step is to configure the device statistics tiles.

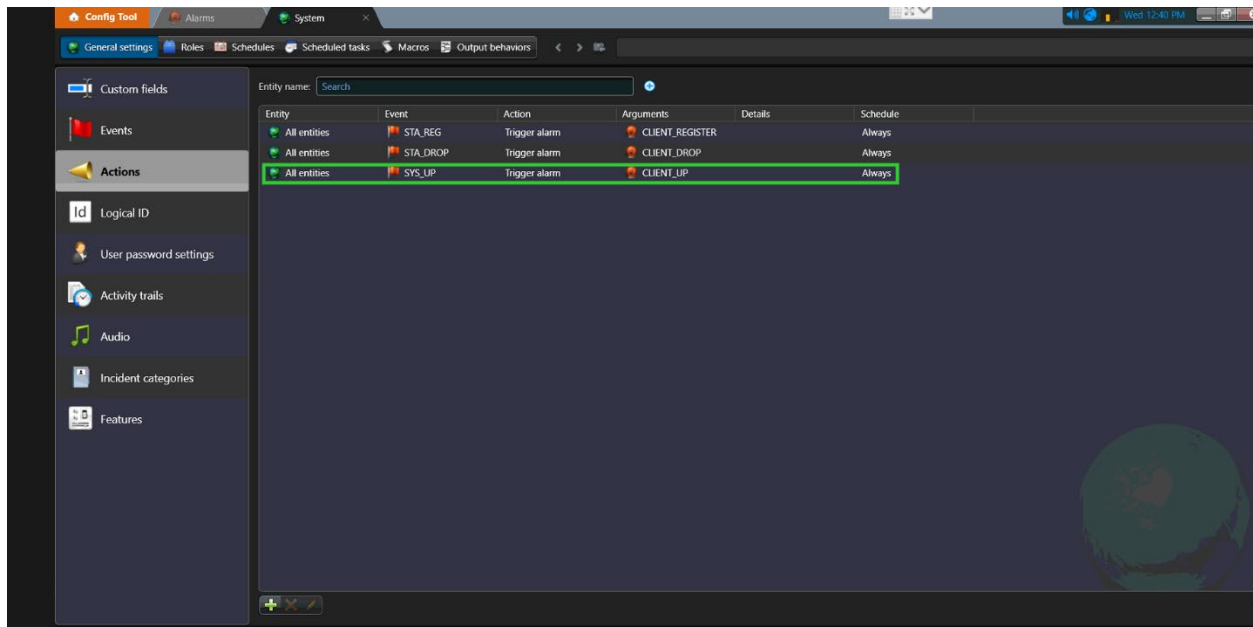


Configuring Device Statistics Tiles in Config Tool


1. To configure the device tile statistics, navigate to the **Area view** from the Config Tool application.

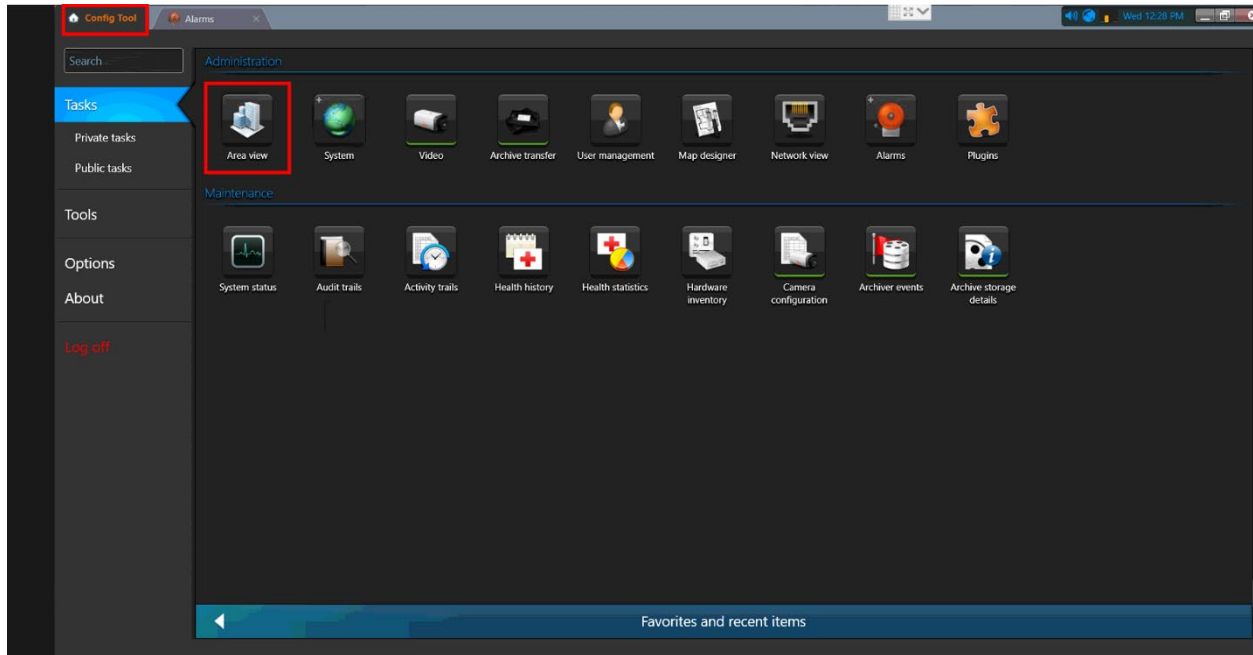


2. Click the **Add an entity** button and select the **Tile Plugin** option from the context menu.

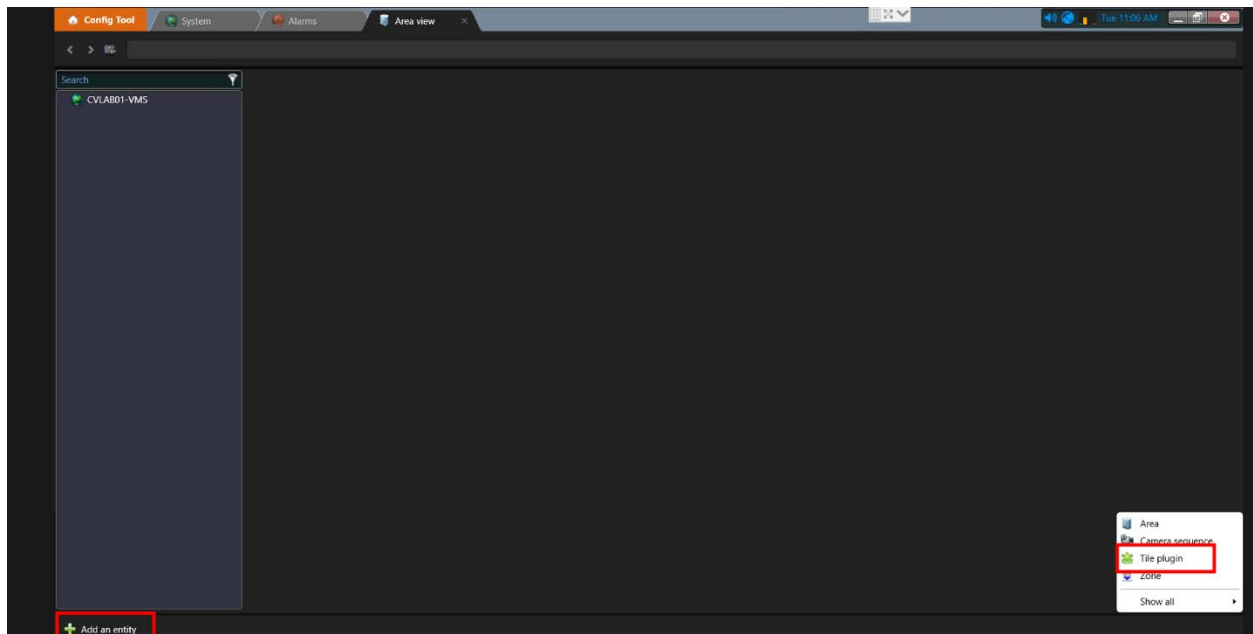


3. Enter a name for the device. Click the **Next** button to continue.

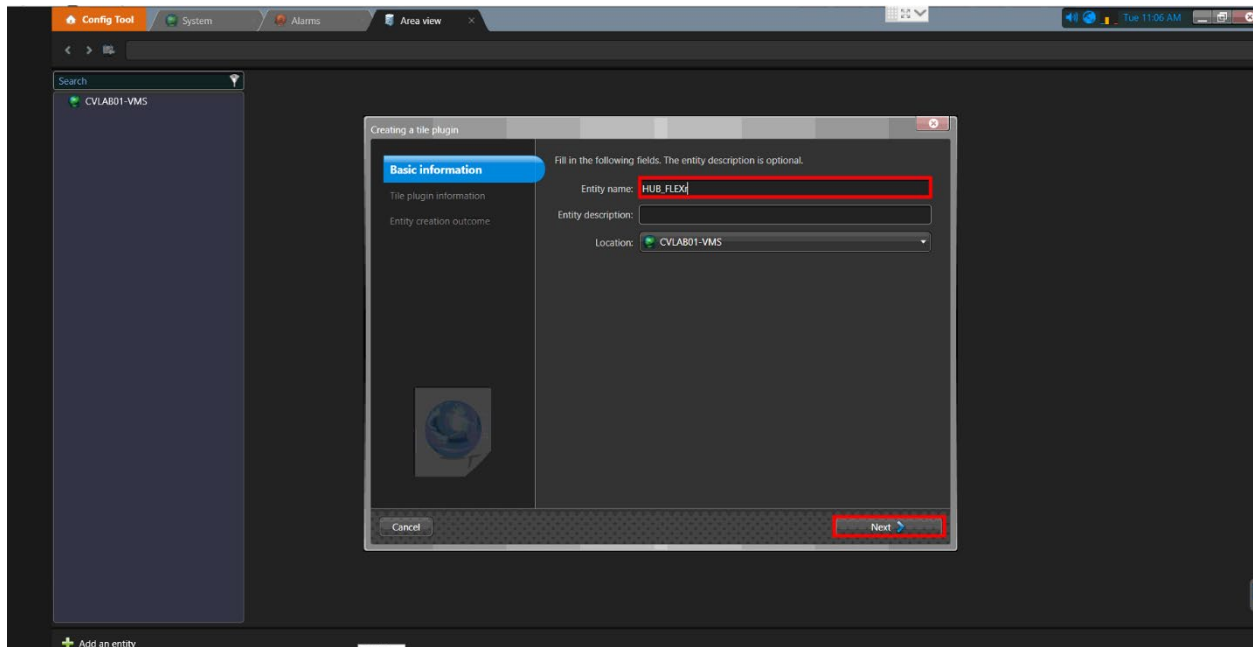


4. Select the **Web site** option from the list.

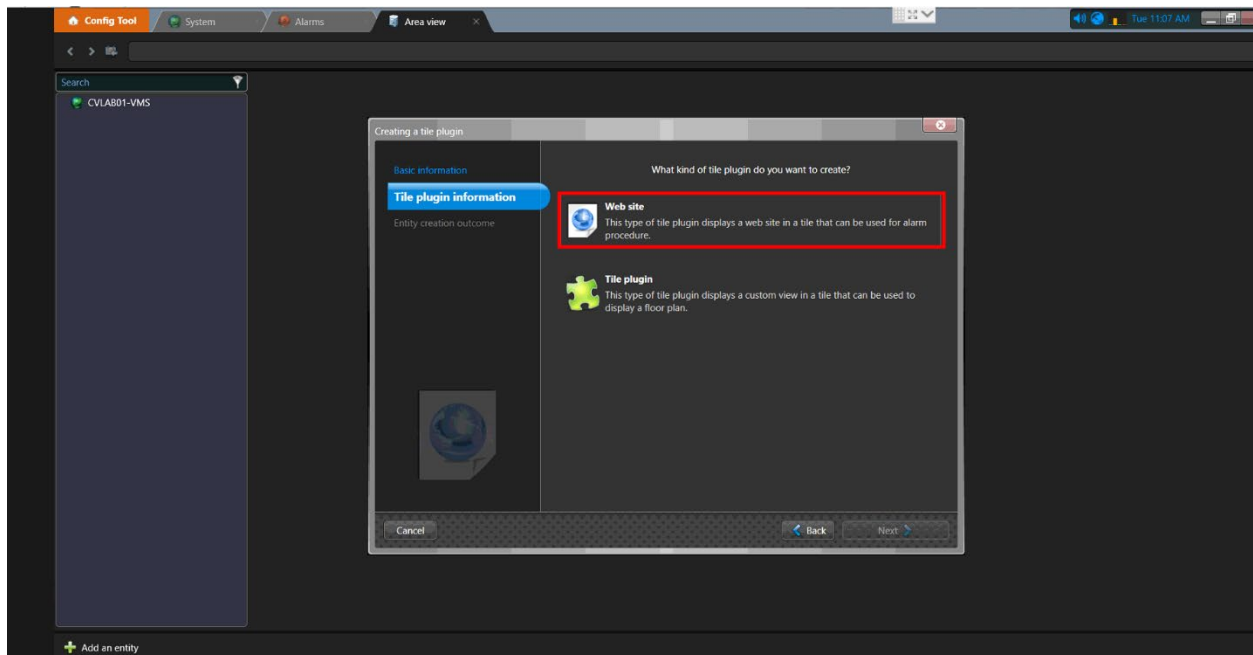

5. A successful message will be displayed once the process is complete. Click the **Close** button.

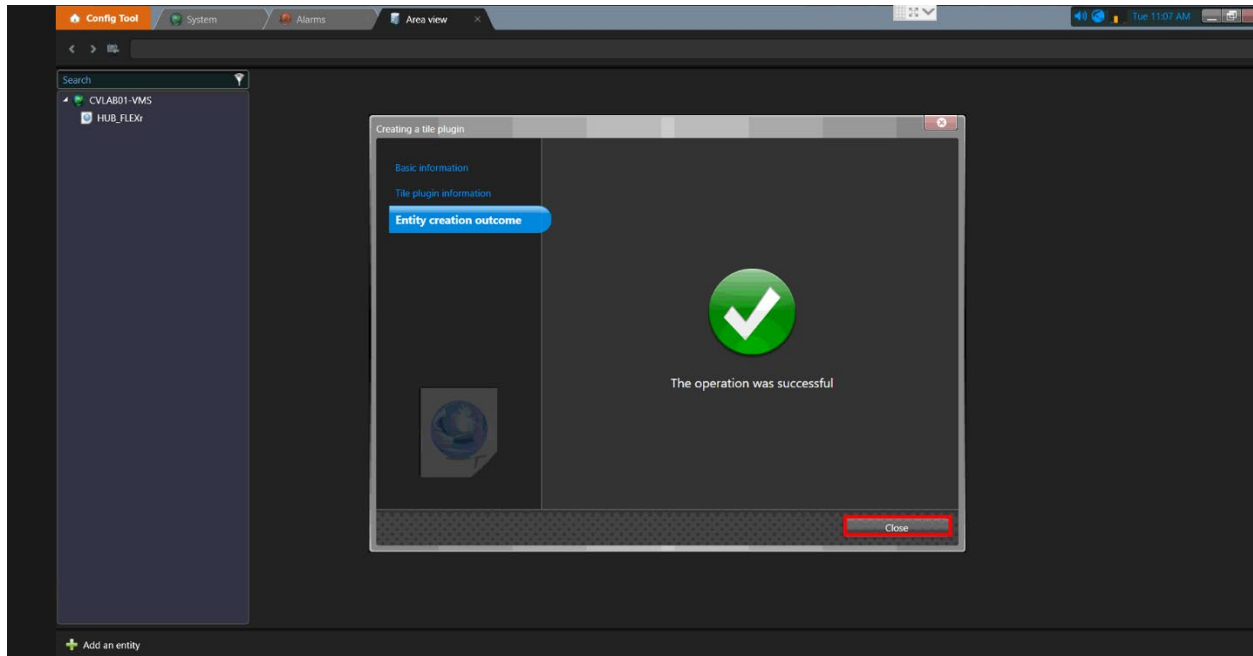


6. The next step is to copy the Preview URL link from the cnVision device you are adding and paste in the Web page field. Log in to the device and navigate to the VMS Integration page. Copy the VMS Preview link.

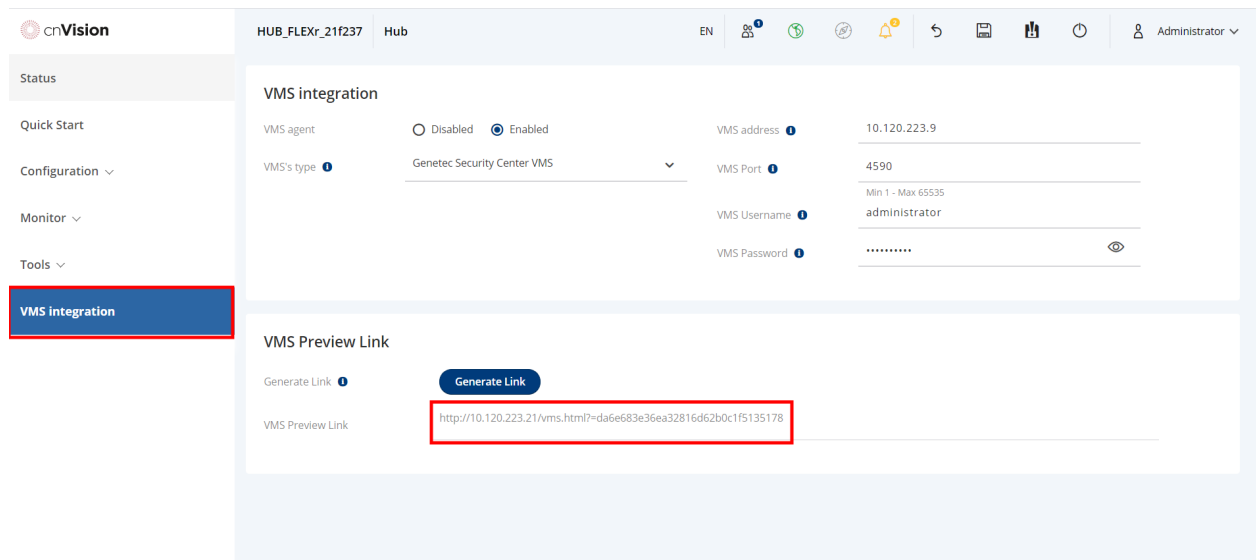


Warning Do not press the Generate Link button if a URL link is already displayed. Generating a new link disconnects any pre-existing device statistics tiles in VMS systems using it.

7. Navigate back to the Config Tool > Area View page and paste the link in the Web page field. Click the Apply button to save the settings.

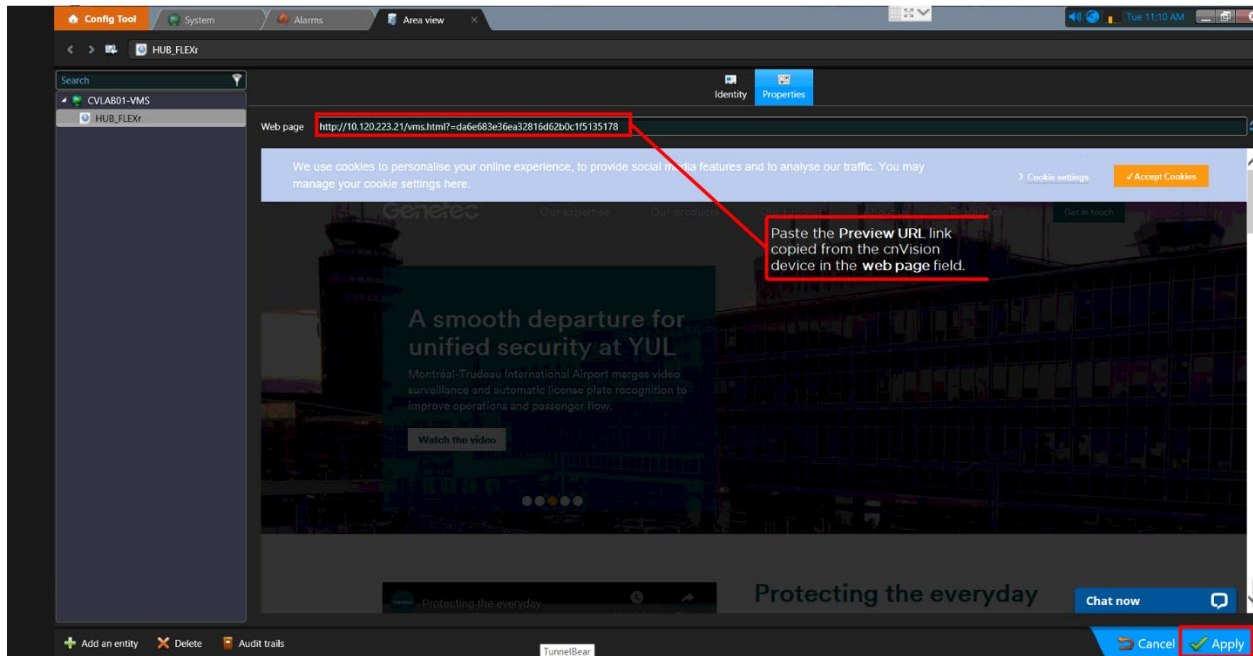


8. Click the **Properties** button to view the device statistics tile.

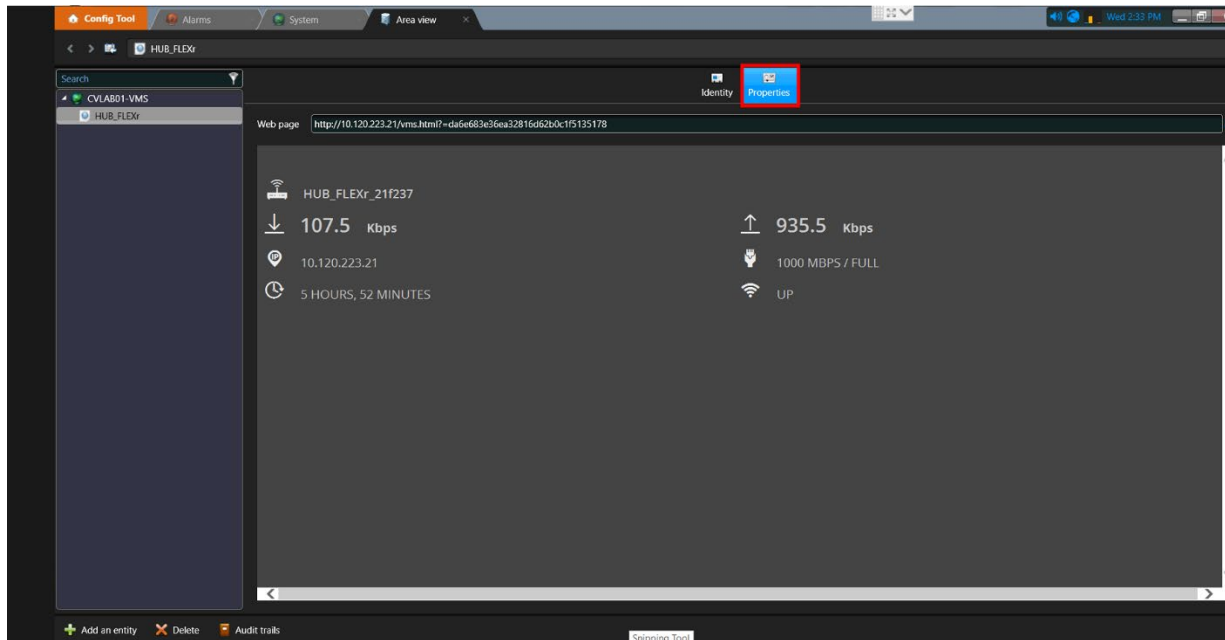


Configuring Device Statistics Tile in Security Desk


1. Launch the **Genetec Security Desk** application and log in to the system. Click the **Monitoring** icon to open the Monitoring page.

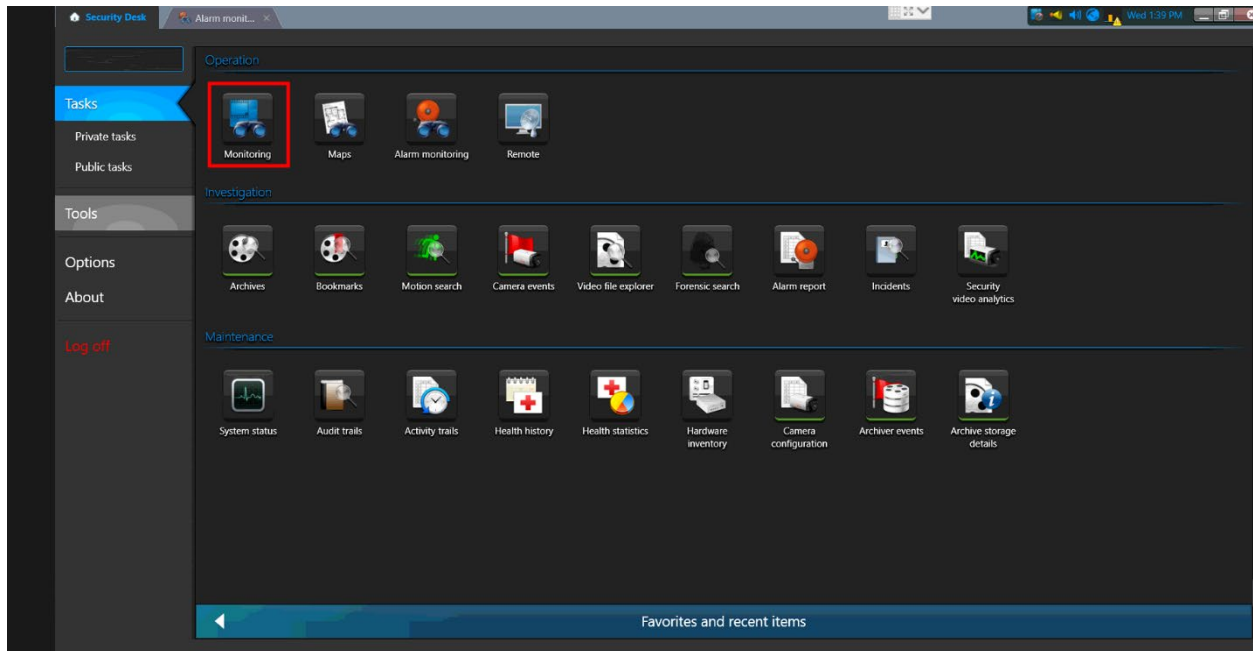

2. The cnVision devices configured in this system will be displayed in the left pane. Drag and drop the device from the list on to the tiles screen.

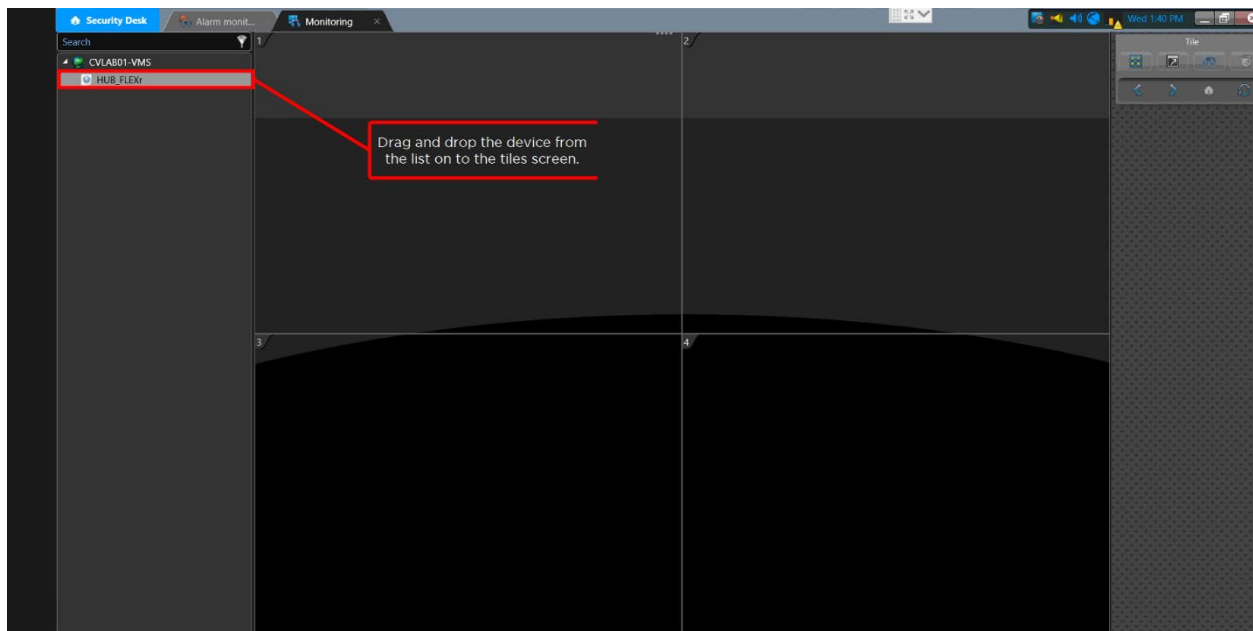


The tile displays key device statistics in the VMS such as the device's status, the uplink and downlink speeds, the IP address, etc.

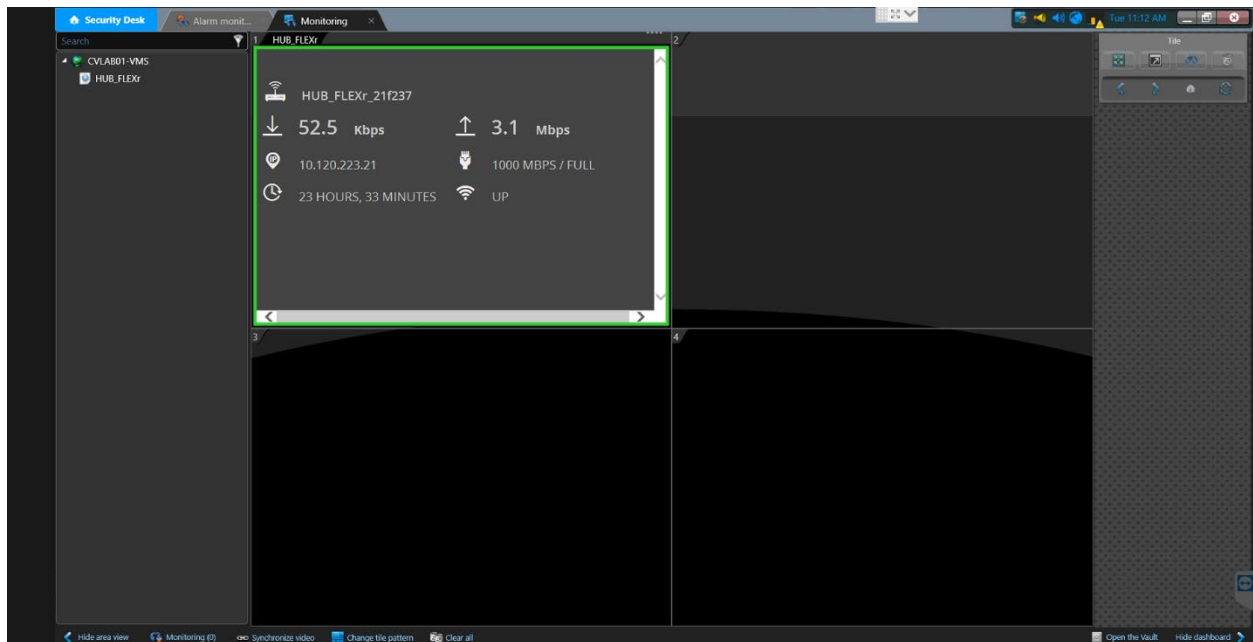


Configuring Device Statistics Tile in Wisenet Wave VMS


1. From the VMS Integration screen, copy the URL from the **VMS Preview Link** field.

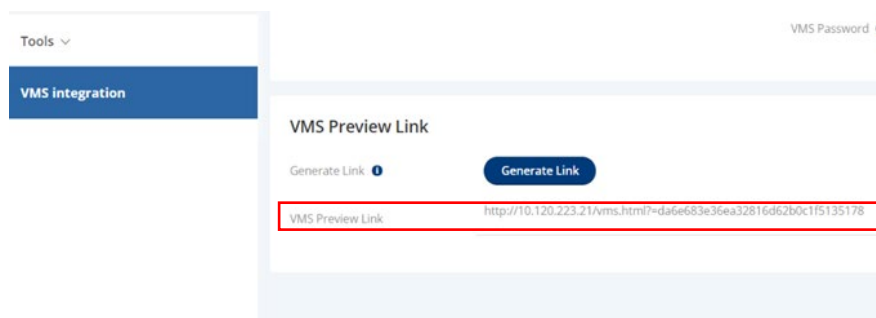


2. Log in to the Wisenet Wave VMS client. Right-click on the **Web Pages** option on the left navigation pane and click the New Web Page button.

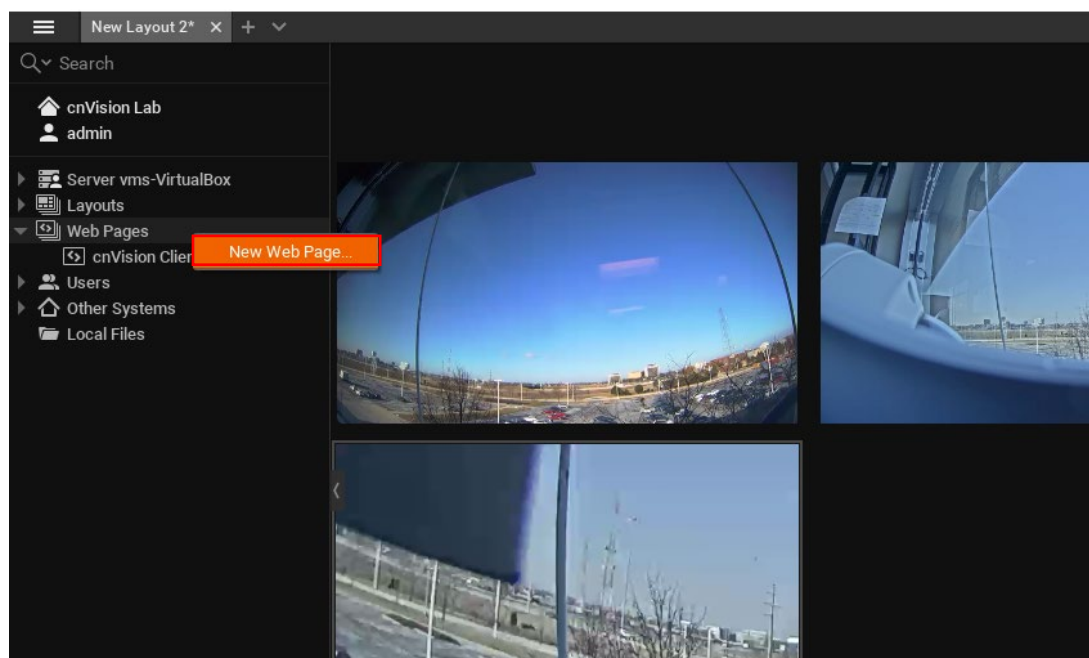


3. Enter a descriptive name in the **Name** field for the device. Next, paste the link in the URL field. Click the **OK** button to save the settings.

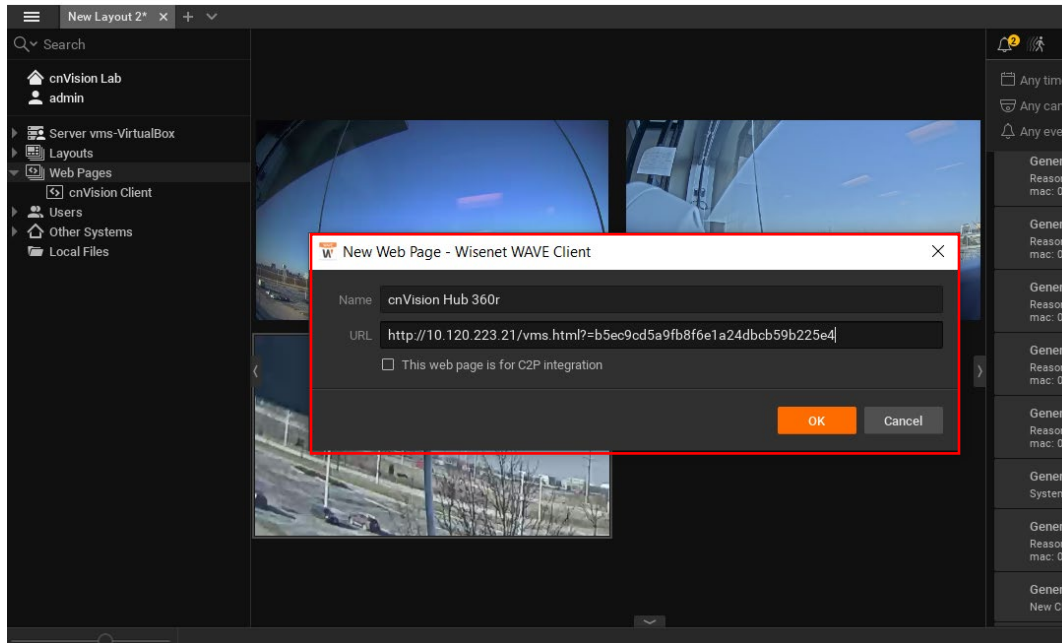

4. The new device should be listed under the Web Pages menu.

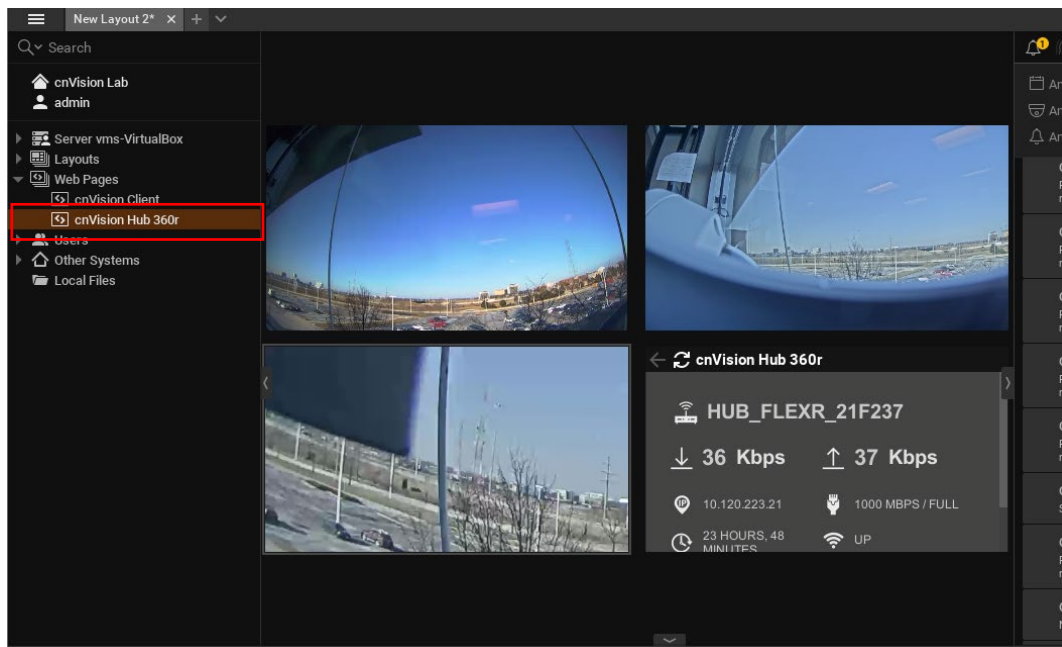


5. Double-click the device name to launch the statistics tile.

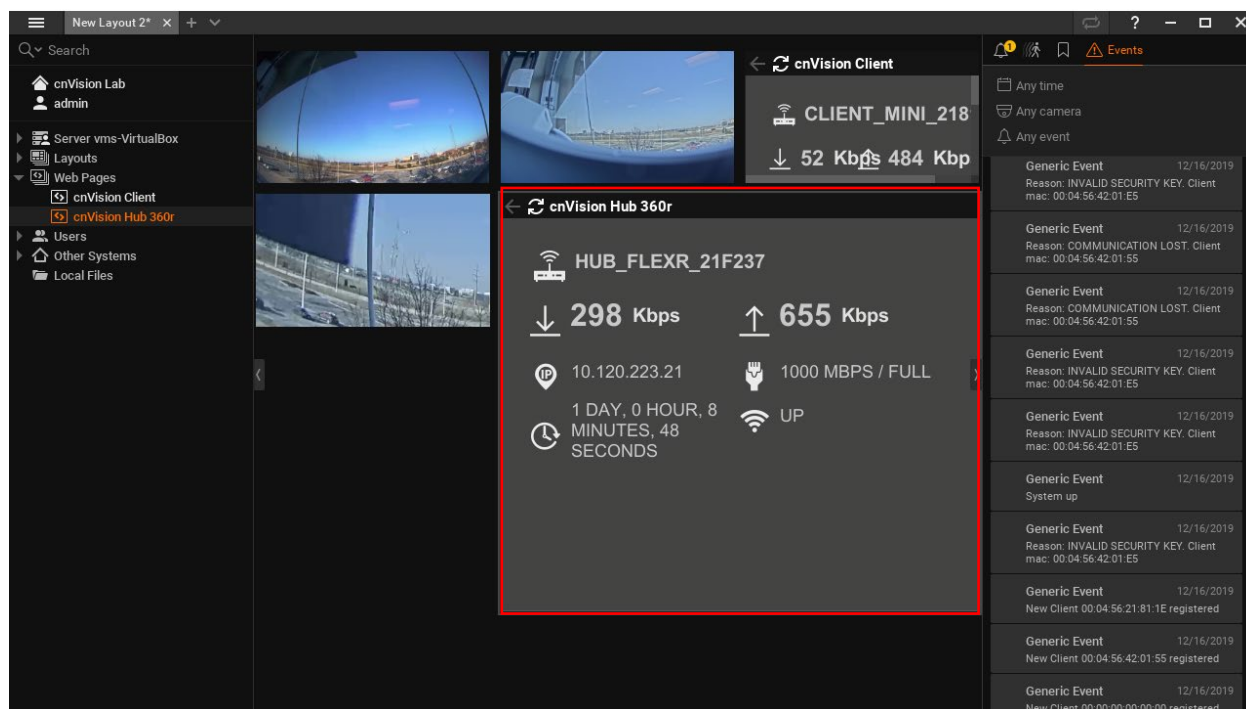


Configuring cnVision Device in Milestone XProtect VMS

cnVision devices are manually configured in the Milestone XProtect Management Client. To configure devices, you will require the device username and password credentials.


1. Log in to the Management Client. Navigate to the **Servers** option and select **Recording Servers**.

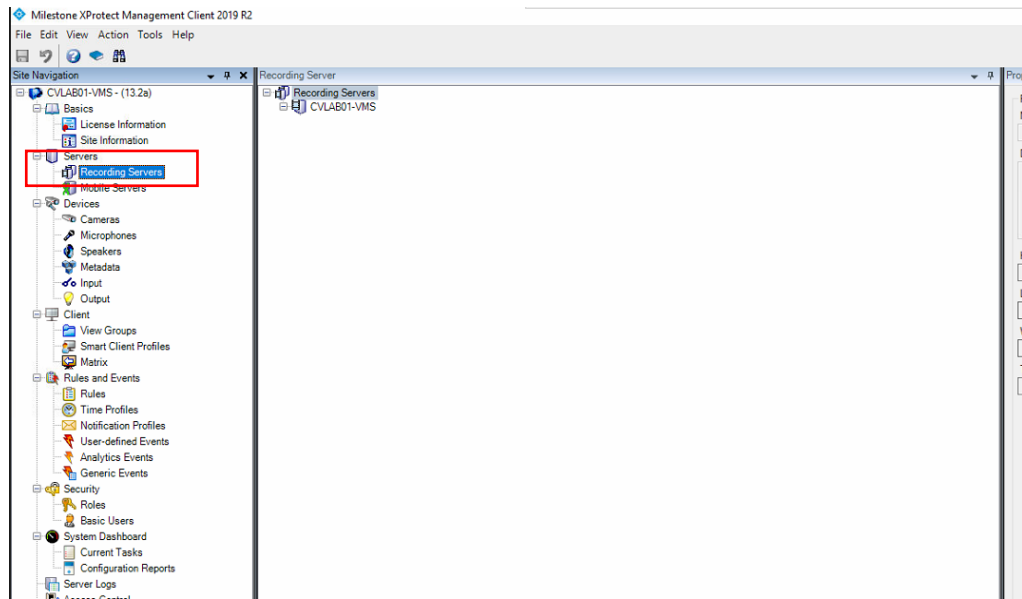


2. Right-click on the Recording Server option to open the context menu. Click the **Add Hardware** option from the list.

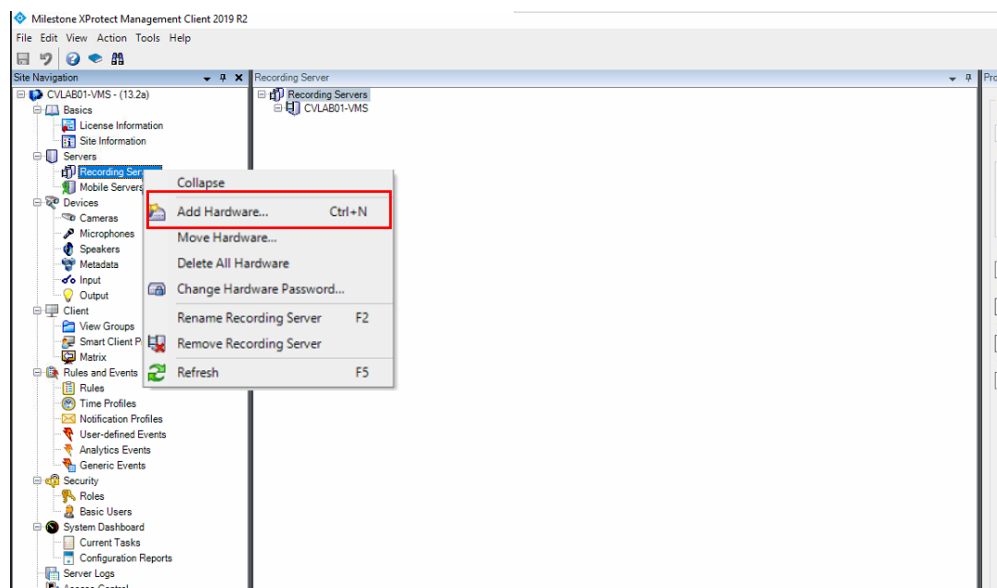


3. The Add Hardware dialog box opens. Select from one of the available options. In this example, we will use the **Manual** option. Click the **Next** button to Continue.

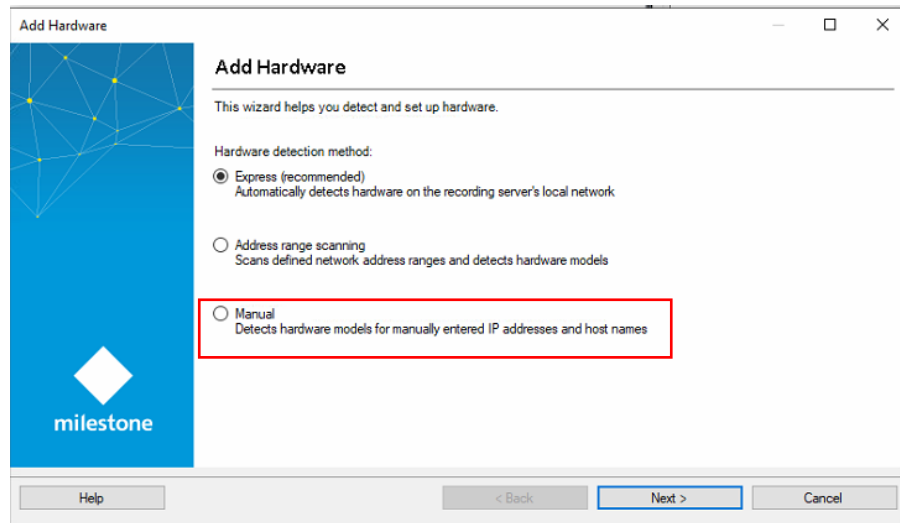


4. Click the **Add** button to specify the user name and password for the device. These are credentials you have configured to log in to the cnVision device's Web User Interface (eg. admin, admin). Click the **Next** button to continue.

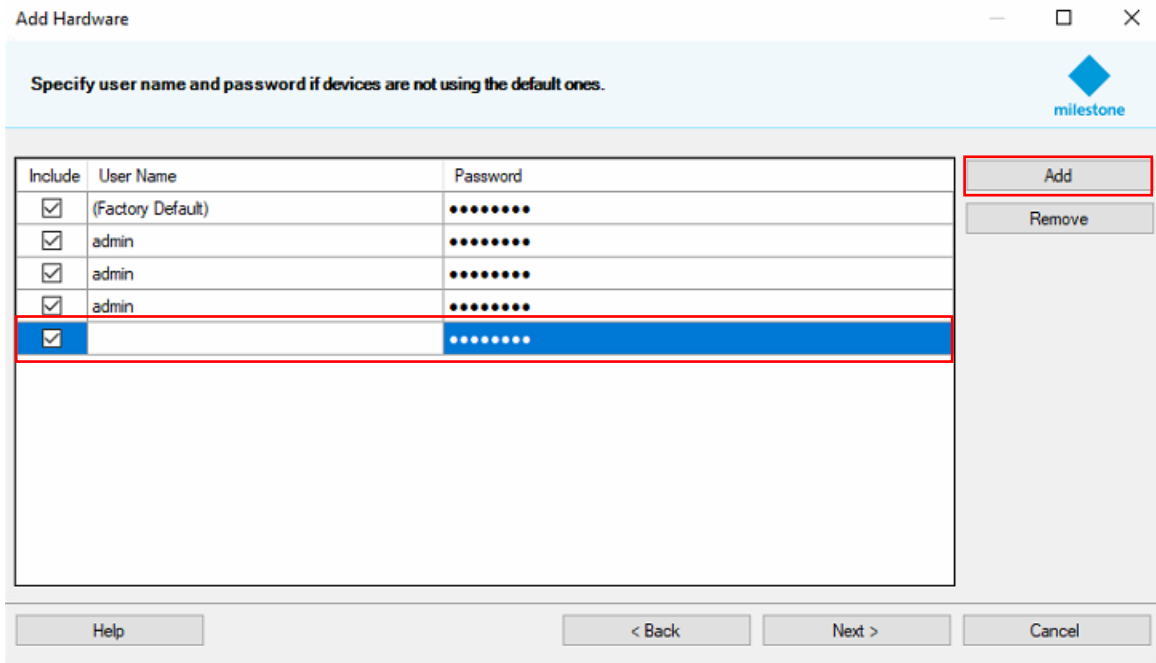

5. Next, select the hardware devices by checking the respective boxes. The cnVision devices are ONVIF compliant. Click the **ONVIF** checkbox and click the **Next** button to continue.

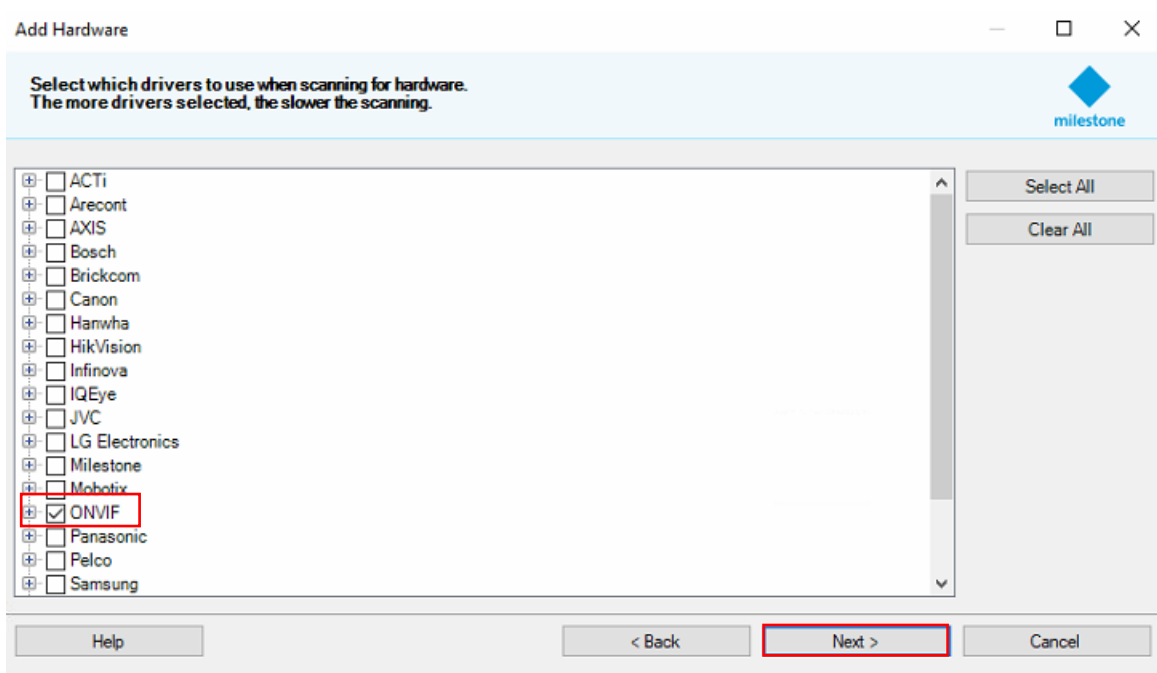

6. The system will scan the network to detect the device.

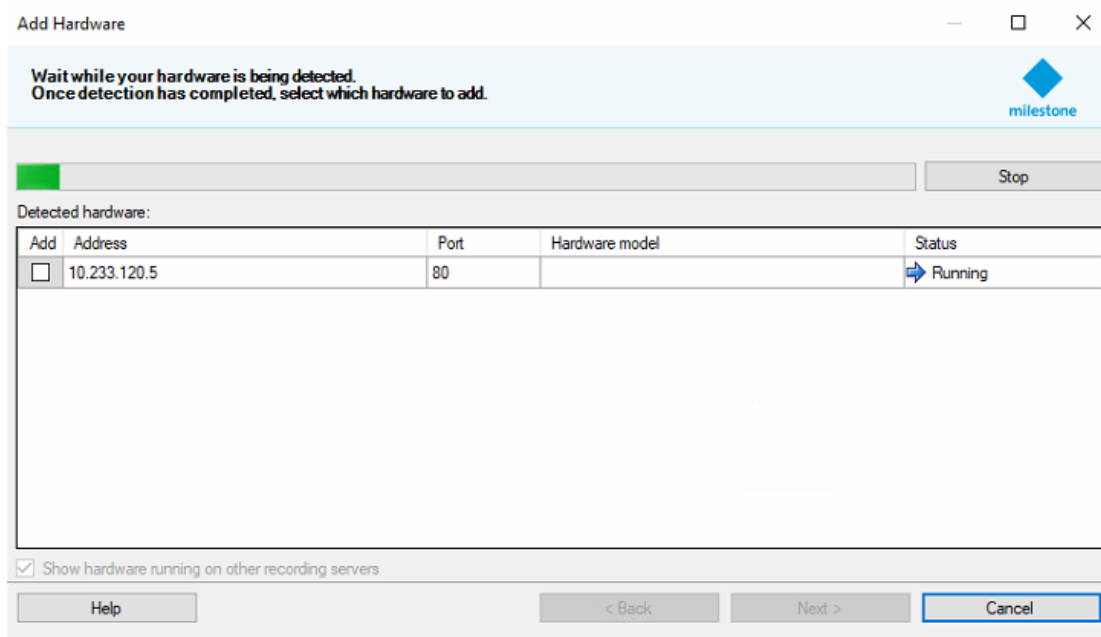

7. The status message will display the results. In case of failure, check and confirm the IP address and the port number is entered correctly. Click the **Next** button to continue.

The screenshot shows the 'Add Hardware' dialog box. At the top, it says 'Wait while your hardware is being detected. Once detection has completed, select which hardware to add.' Below this is a green progress bar. Under 'Detected hardware:', there is a table with the following data:

Add	Address	Port	Hardware model	Status
<input checked="" type="checkbox"/>	10.120.223.21	80	Camium Networks (ONVIF)	✓ Success

At the bottom, there are buttons for 'Help', '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red box.


8. The system detects cnVision devices as Cameras. Click the box next to the Camera item to **enable** the device.

The screenshot shows the 'Add Hardware' dialog box. It has a title bar 'Add Hardware' and a close button. Below the title bar, it says 'Hardware and cameras are enabled per default. Manually enable additional devices to be used. The hardware and its devices will be assigned auto-generated names. Alternatively, enter names manually.' There are two dropdown menus for 'Hardware name template:' and 'Device name template:', both set to 'Default'. Below these are checkboxes for 'Hardware', 'Camera', 'Microphone', 'Speaker', 'Metadata', 'Input', and 'Output'. The 'Camera' checkbox is checked. Below these are two tables. The first table is 'Hardware to Add' with columns 'Enabled' and 'Name'. The second table is a list of devices with columns 'Enabled' and 'Name'. The 'Camera port 1:' row is highlighted with a red box.


Hardware to Add	Enabled	Name
Camium Networks - 10.120.223.21	<input type="checkbox"/>	
Hardware:	<input checked="" type="checkbox"/>	Camium Networks (10.120.223.21)
Camera port 1:	<input checked="" type="checkbox"/>	Camium Networks (10.120.223.21) - Camera 1
Input port 1:	<input type="checkbox"/>	Camium Networks (10.120.223.21) - Input 1
Input port 2:	<input type="checkbox"/>	Camium Networks (10.120.223.21) - Input 2
Input port 3:	<input type="checkbox"/>	Camium Networks (10.120.223.21) - Input 3
Input port 4:	<input type="checkbox"/>	Camium Networks (10.120.223.21) - Input 4
Input port 5:	<input type="checkbox"/>	Camium Networks (10.120.223.21) - Input 5

At the bottom, there are buttons for 'Help', '< Back', 'Next >', and 'Cancel'. The 'Next >' button is highlighted with a red box.

9. The device is added to the **Default camera group**. Click the **Finish** button to continue.

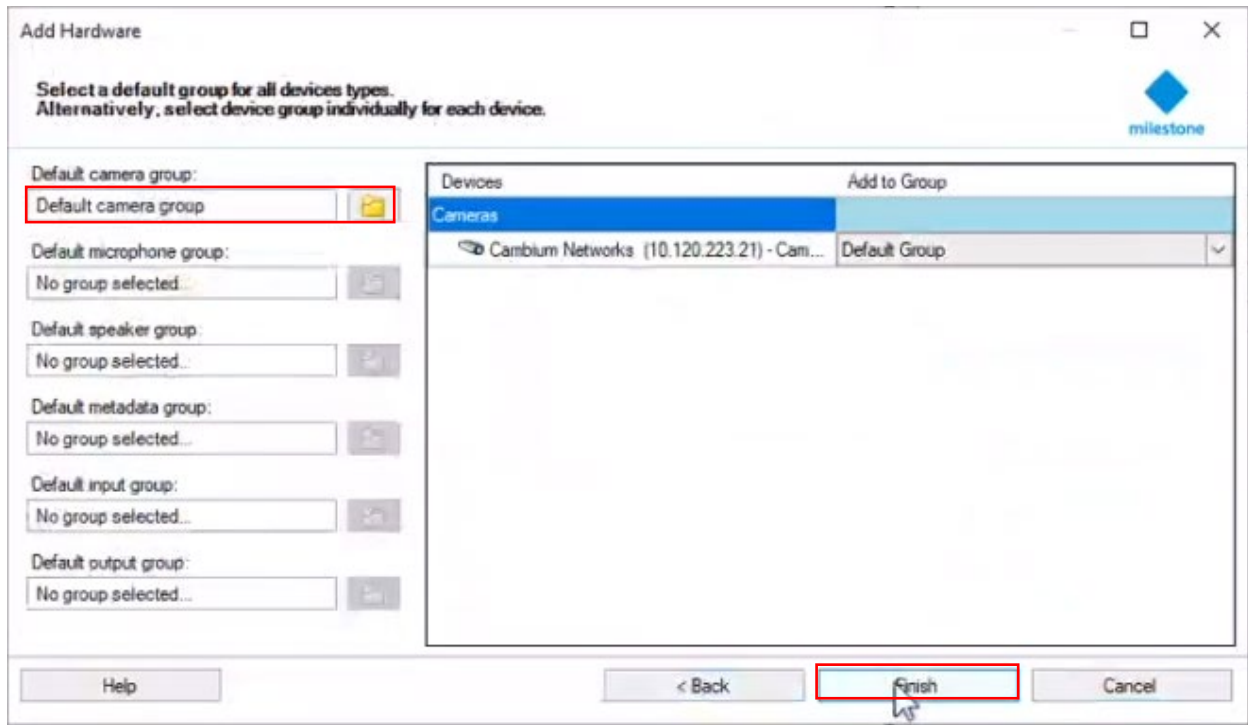


10. The device has been added and is now displayed in the **Recording Server** pane.

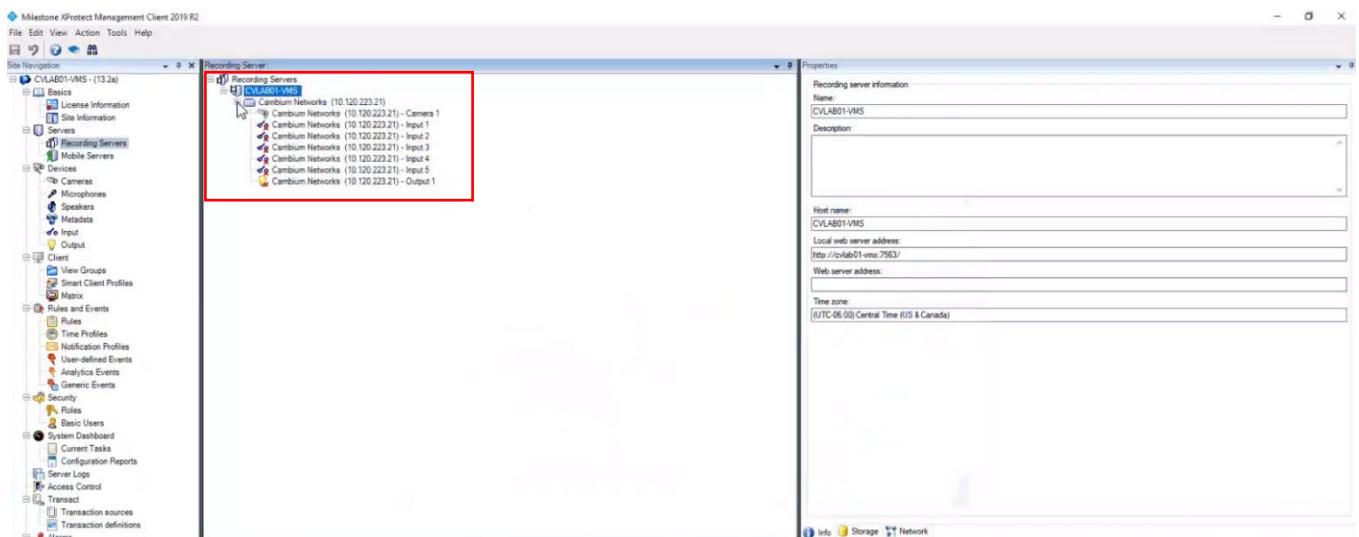


Configuring Event Messages in Milestone XProtect VMS

Configuring Event Messages


1. Log in to the Milestone XProtect Management Client. Navigate to the **Analytics Events** option under the **Rules and Events** section in the left navigation pane.

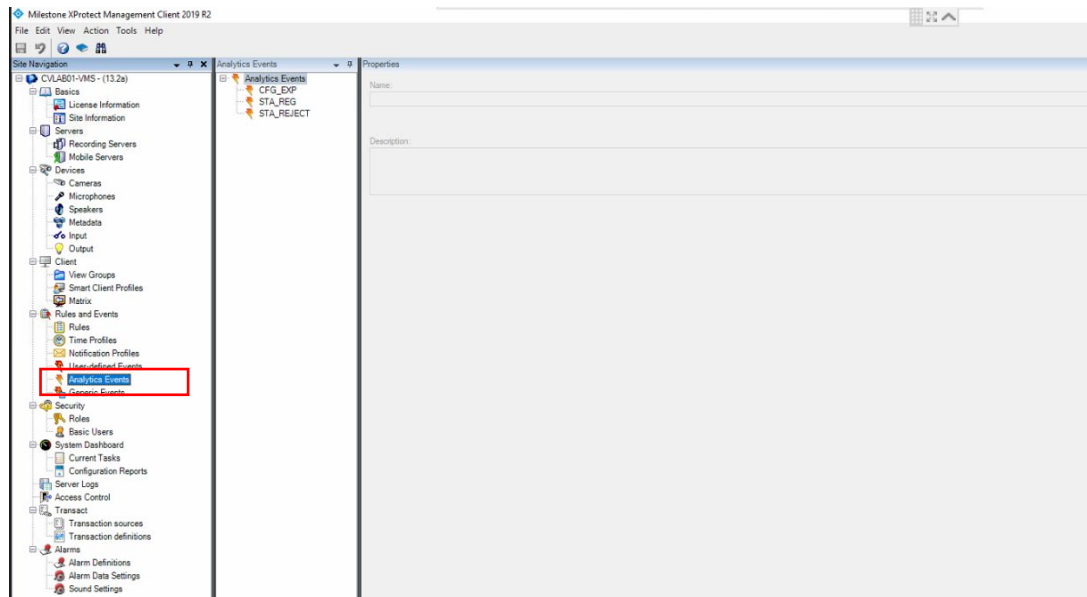

2. Right-Click on the **Analytics Events** item to open the context menu. Click the **Add New** menu item to add a new Event Message.

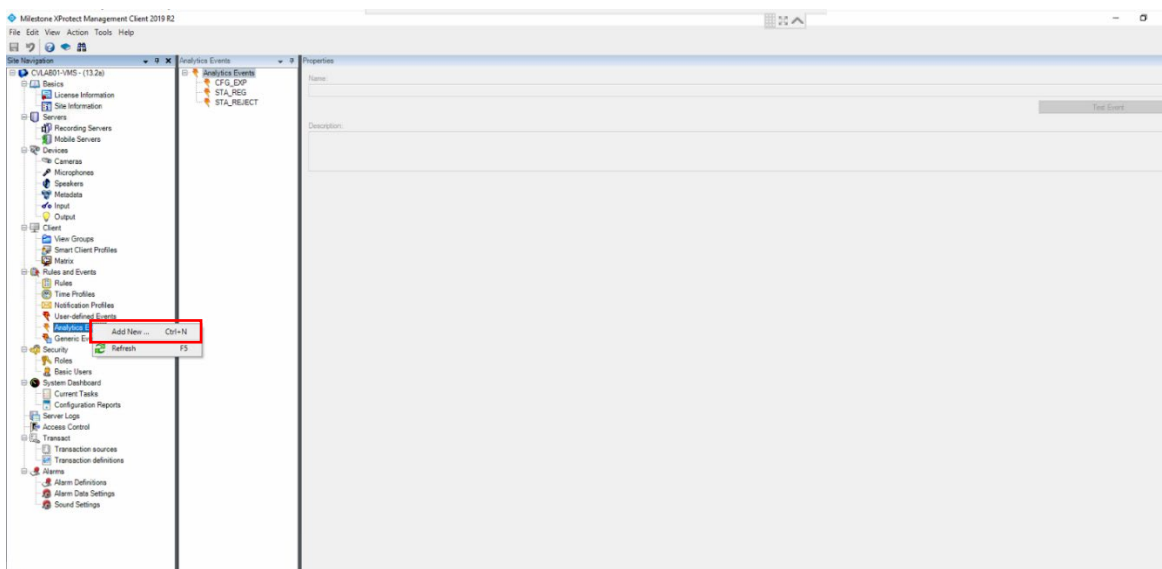


1. Enter the **name** and **description** for the new Event in the Properties pane. **Note:** The event name text must be entered as shown in the [Events and Alarms](#) (for ex. LINK_ST). Next the Event messages have to be linked to Alarms.

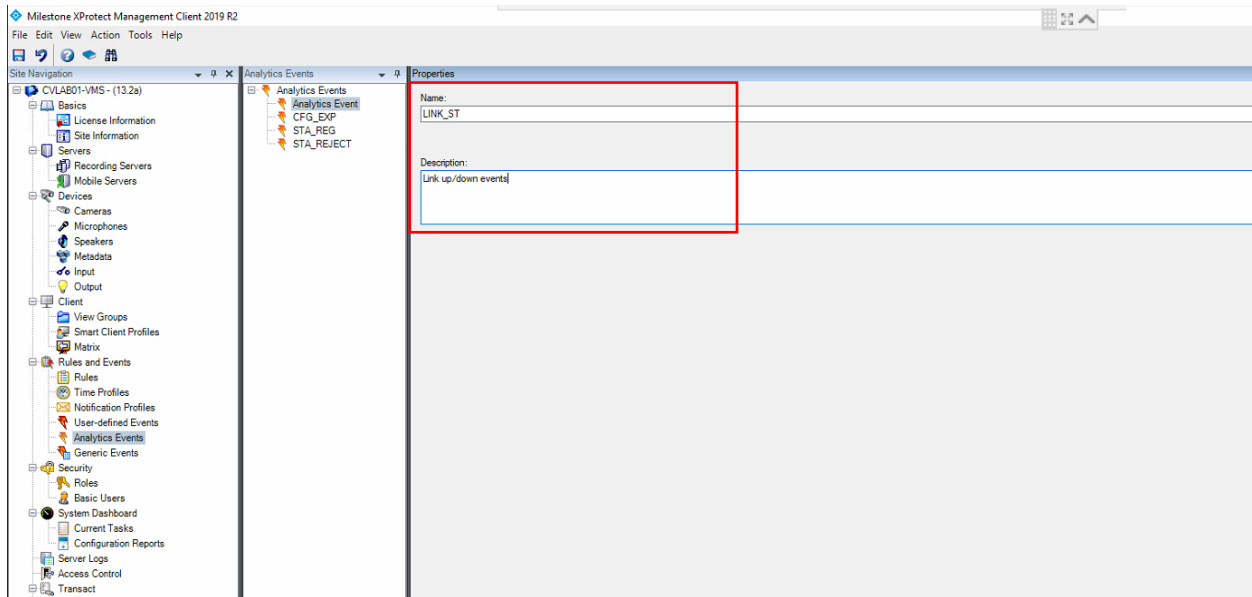


Linking Event Messages to Alarms


1. Navigate to the **Alarm Definitions** option under the Alarms section.

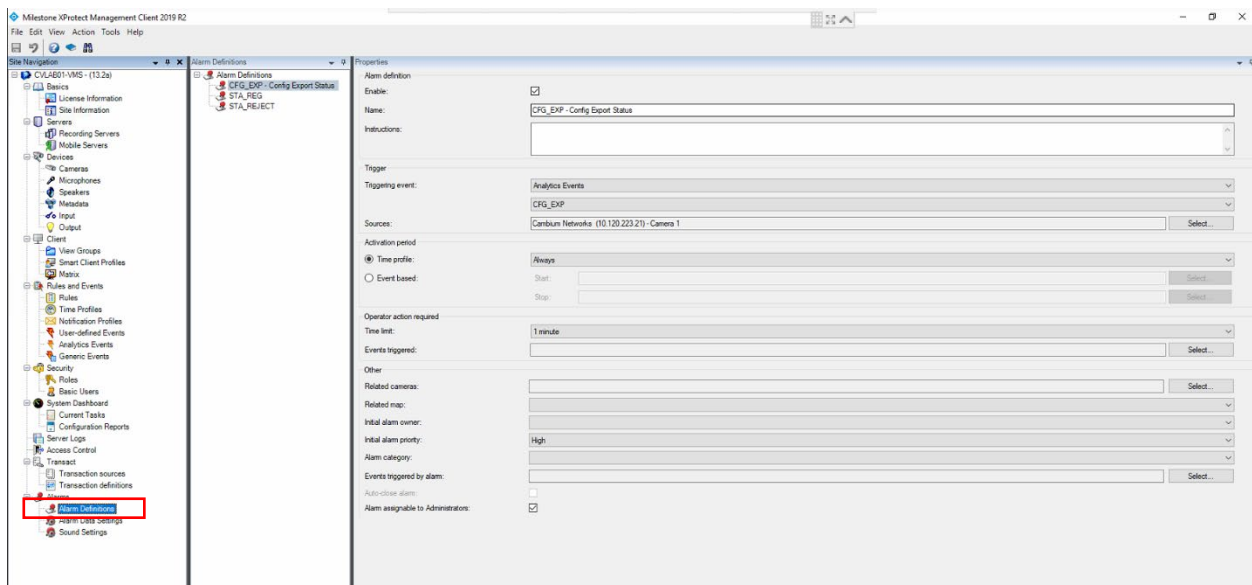


2. Right-click on the Alarms Definitions to open the context menu. Click the Add New menu item.

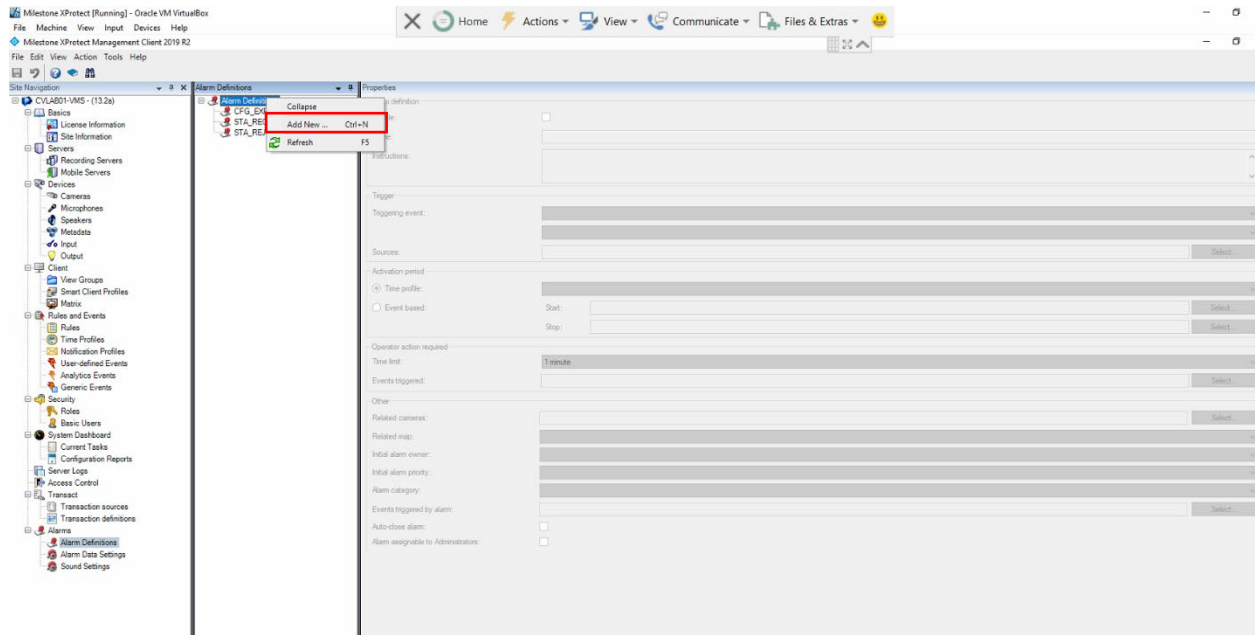


3. Configure the parameters in the Properties pane for the new Alarm. Enter a **name** for the Alarm.

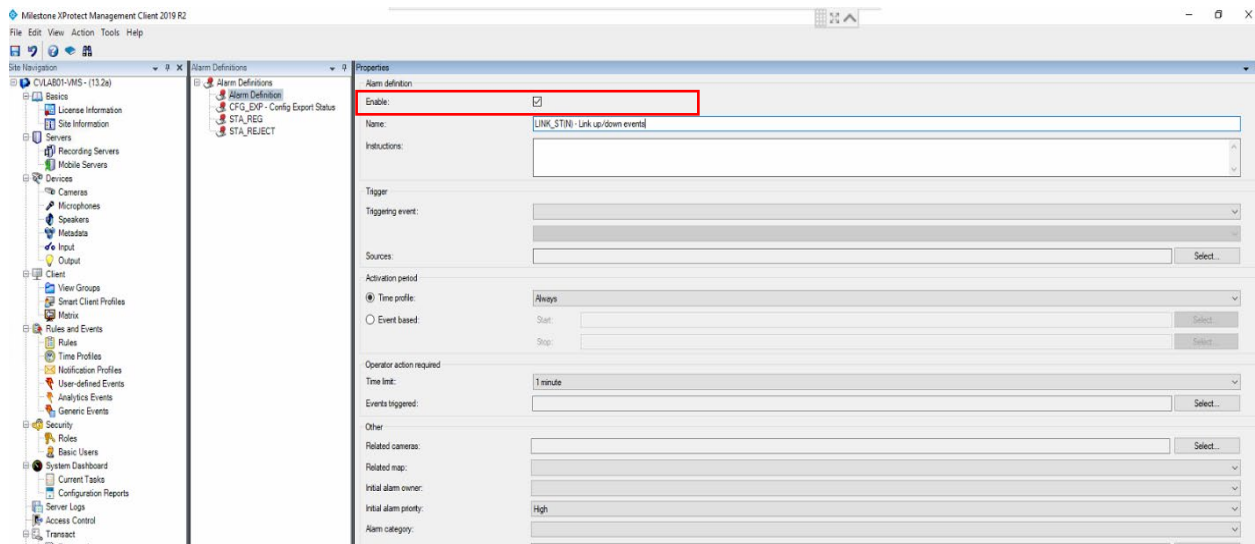


4. Select the tagging event from the list (Analytics Events).

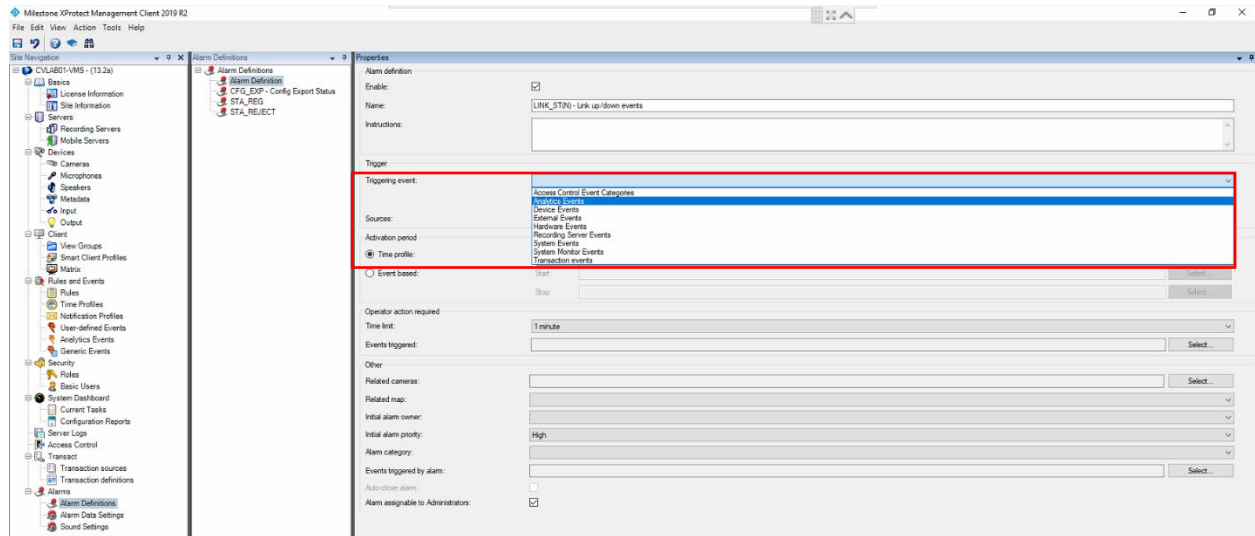


5. Next, select the trigger event from the list (the new Event created earlier).

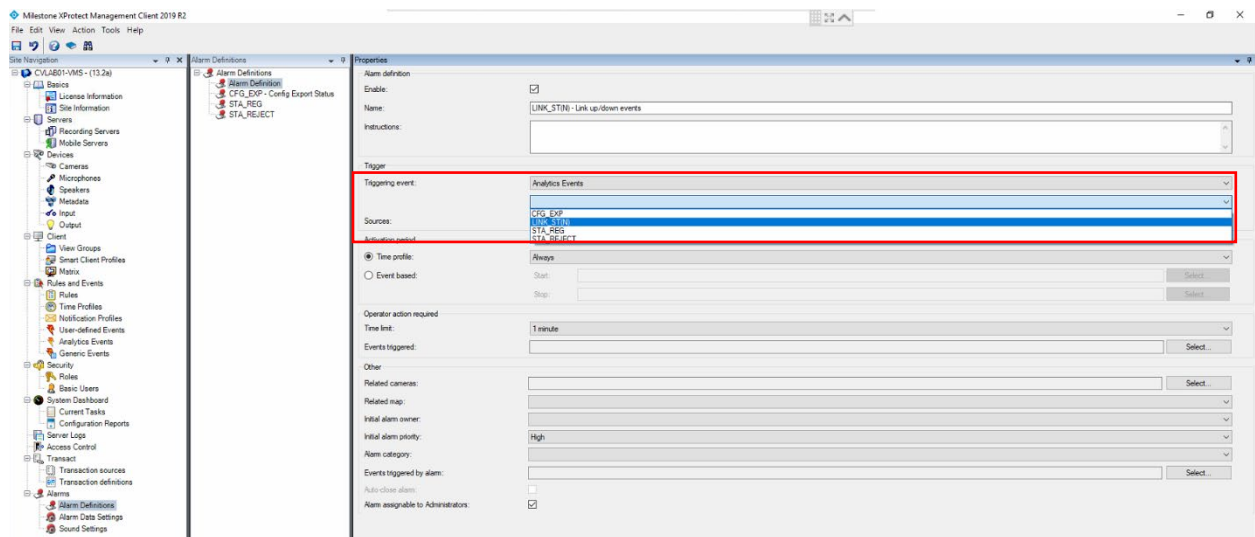


- Next, click the **Select** button to choose the source that is going to send this Event trigger (cnVision device).

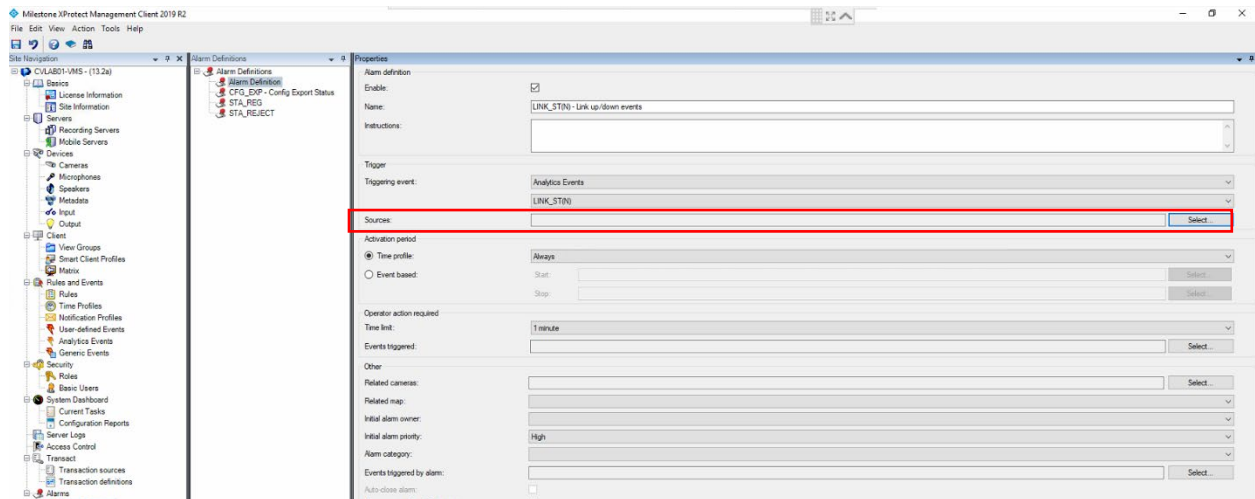


- Expand the list and select the device from the list. Click the **Add** button and then the **OK** button to continue.

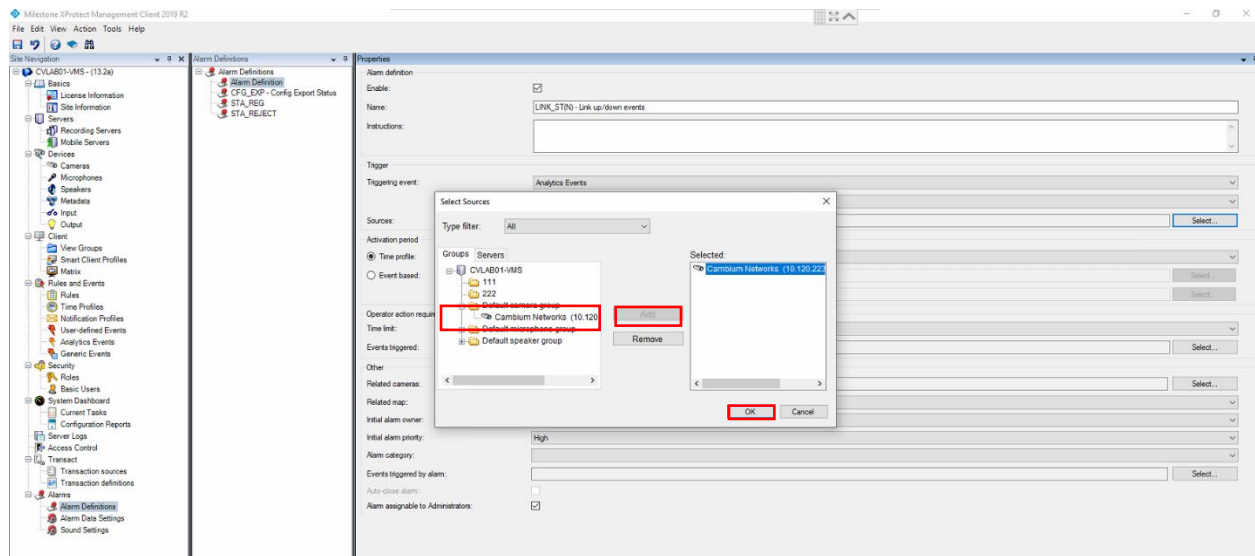

- Click the **Save** button to save the settings. Repeat these steps to create Events and link them to Alarms.

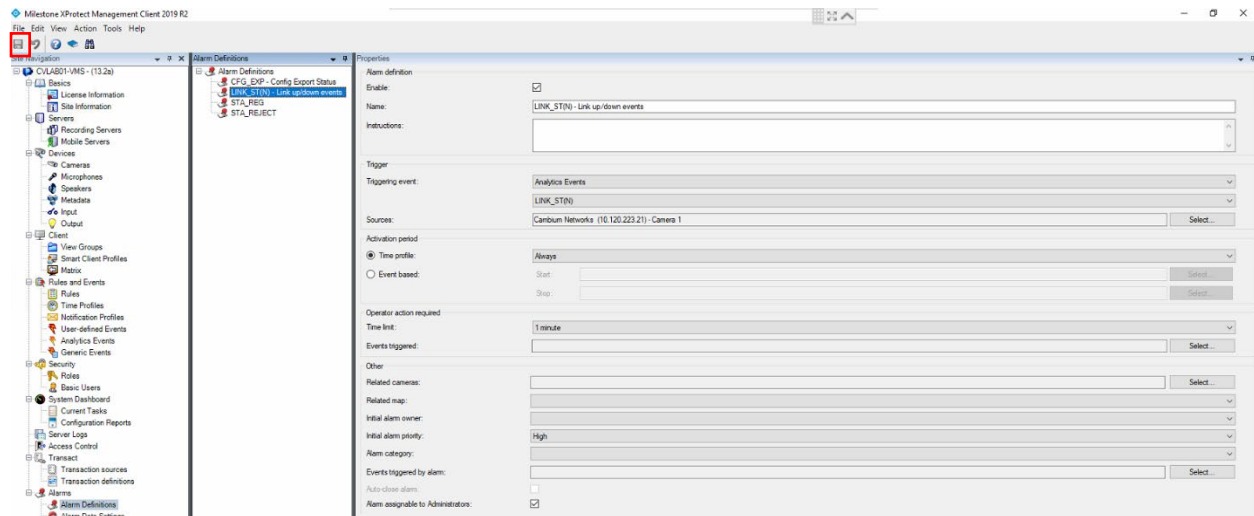


The new Alarm should display in the VMS when triggered by the device.

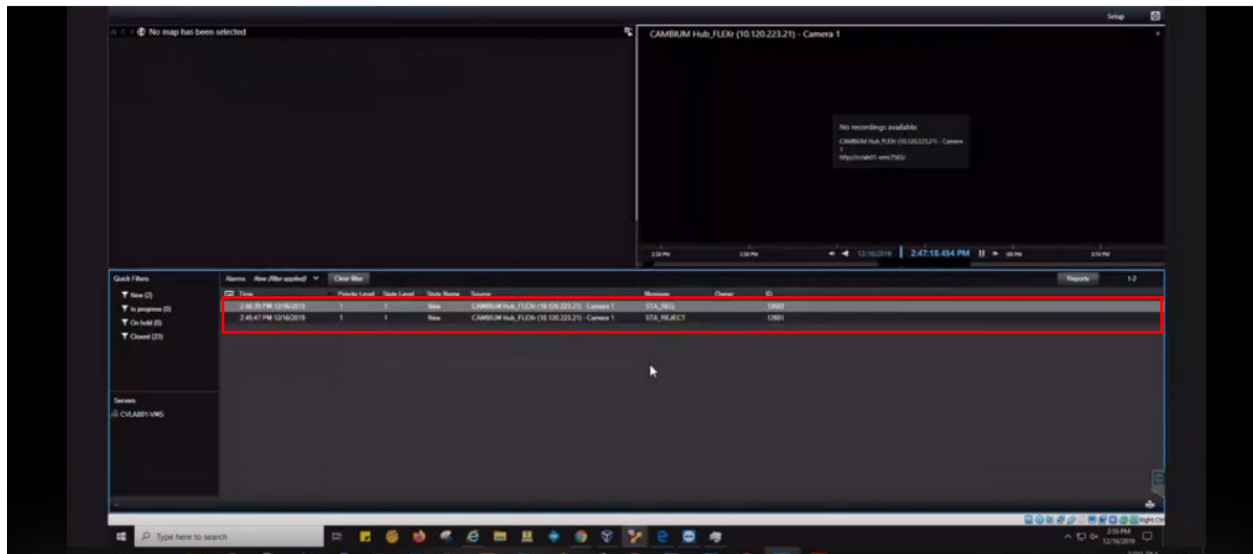


Configuring Device Statistics Tile in Milestone XProtect VMS


1. From the VMS Integration screen, copy the URL from the **VMS Preview Link** field.

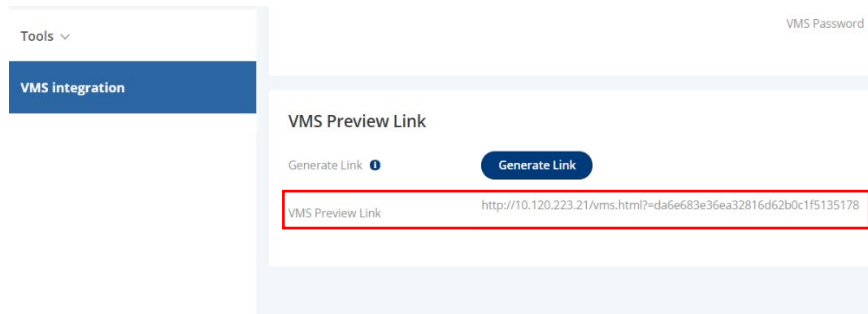


2. Log in to the Milestone XProtect Smart Client application. Navigate to the **HTML Page**.

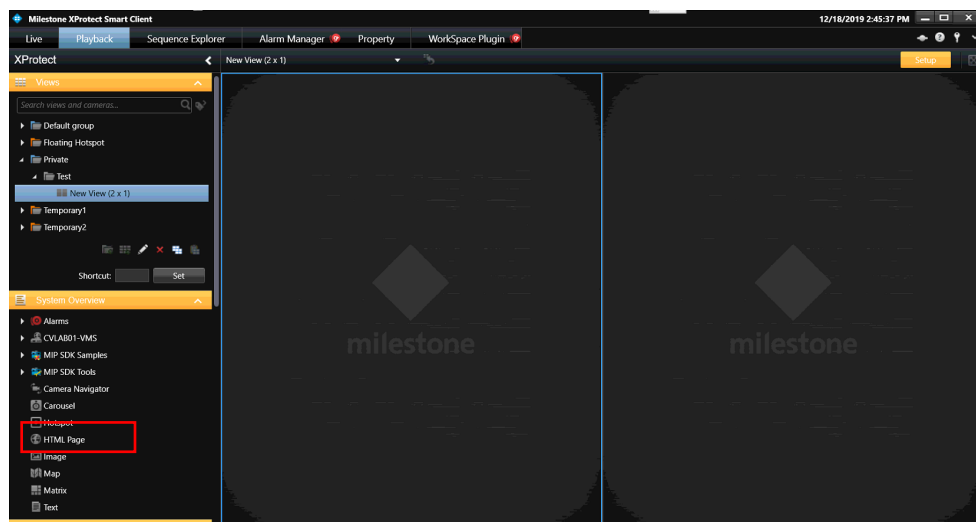

3. The Open URL dialog box opens. Paste the device's URL link copied earlier.

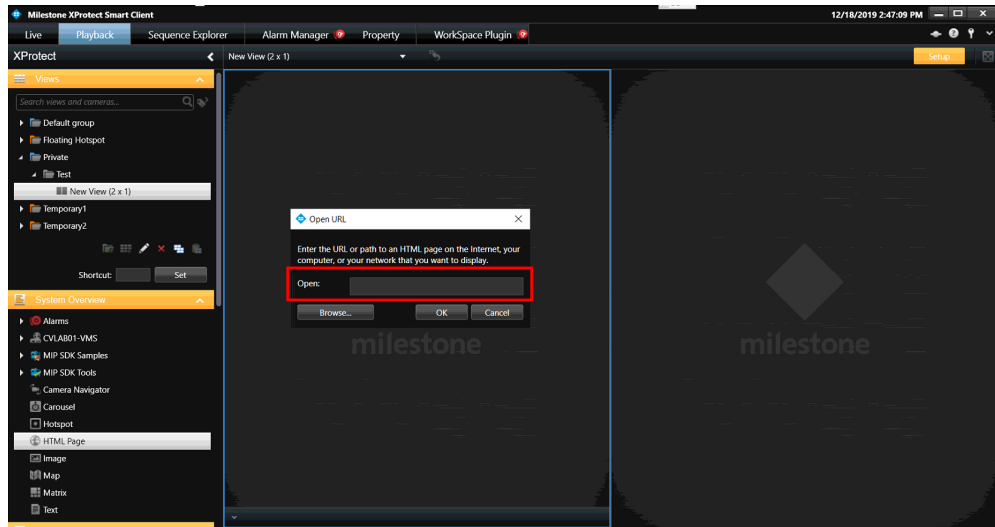


4. Click the **OK** button to save the settings.

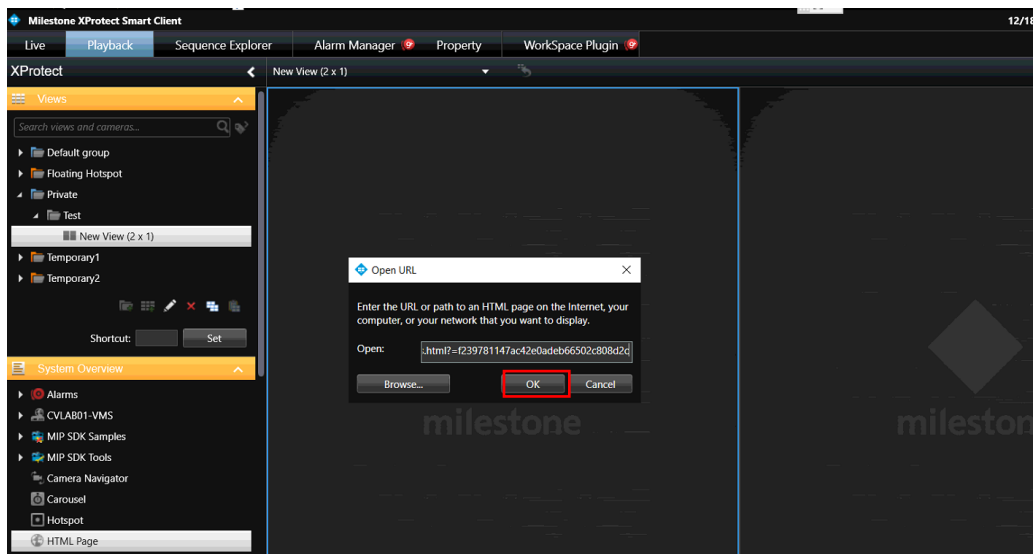


The new cnVision device should be available under the HTML Page option. Double-click to launch the device tile.

Configuring Device Statistics Tile in NX Witness VMS


1. From the VMS Integration screen, copy the URL from the **VMS Preview Link** field.

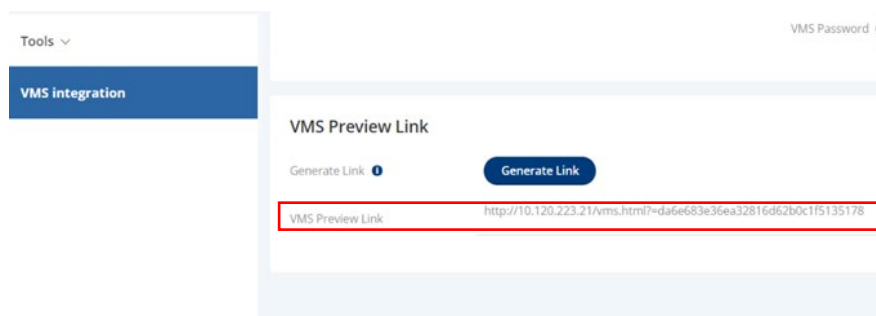


2. Log in to the NX Witness VMS client. Right-click on the **Web Pages** option on the left navigation pane and click the New Web Page button.

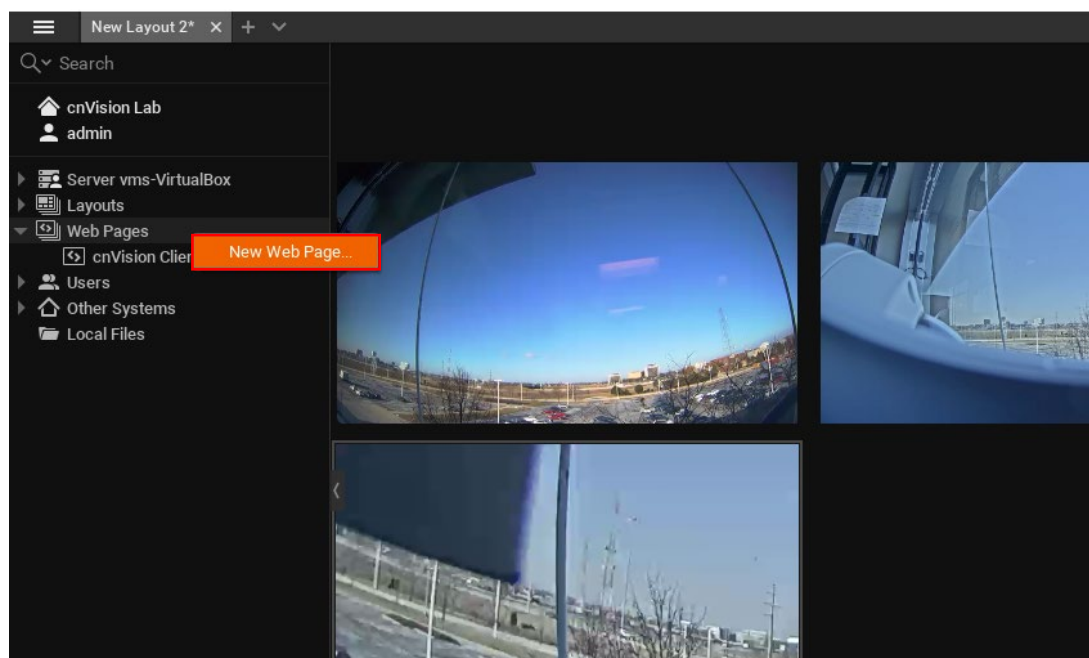


3. Enter a descriptive name in the **Name** field for the device. Next, paste the link in the URL field. Click the **OK** button to save the settings.

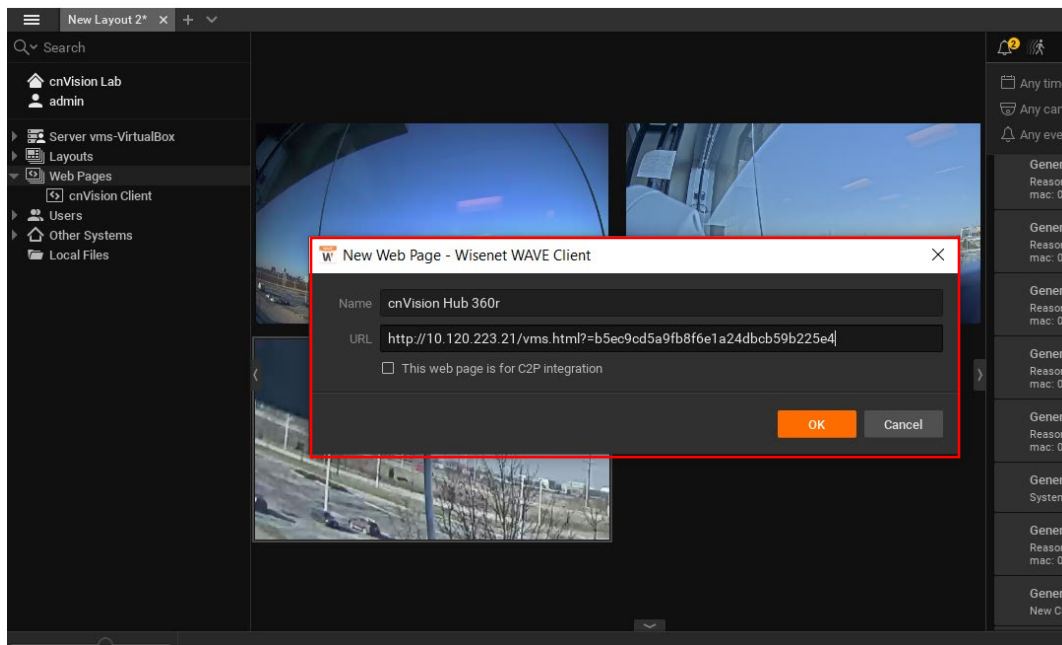

4. The new device should be listed under the Web Pages menu.

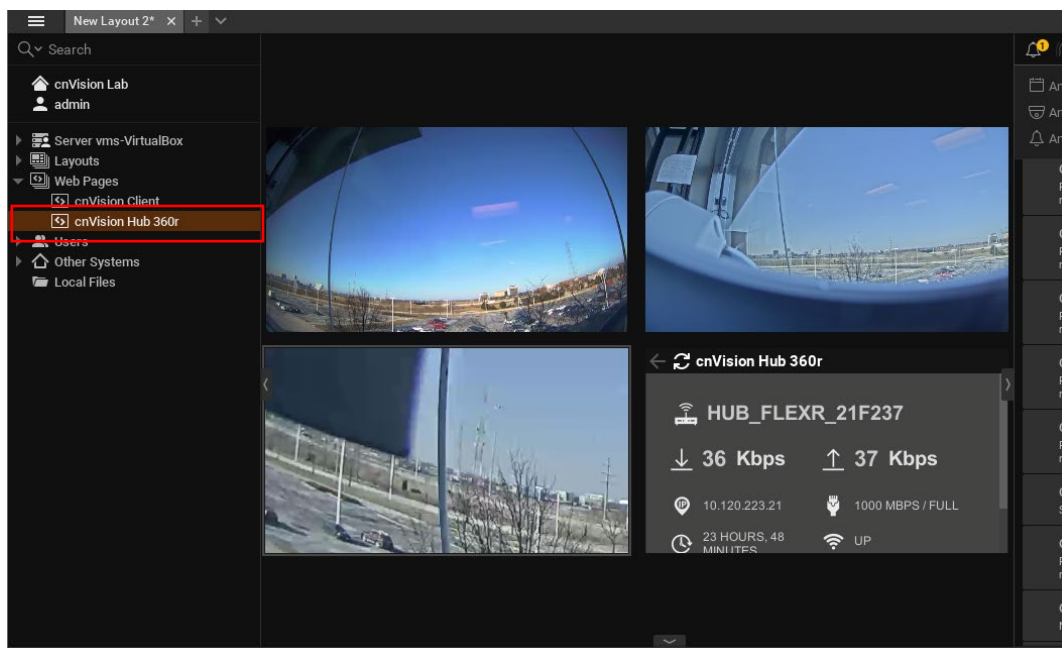

5. Double-click the device name to launch the statistics tile.

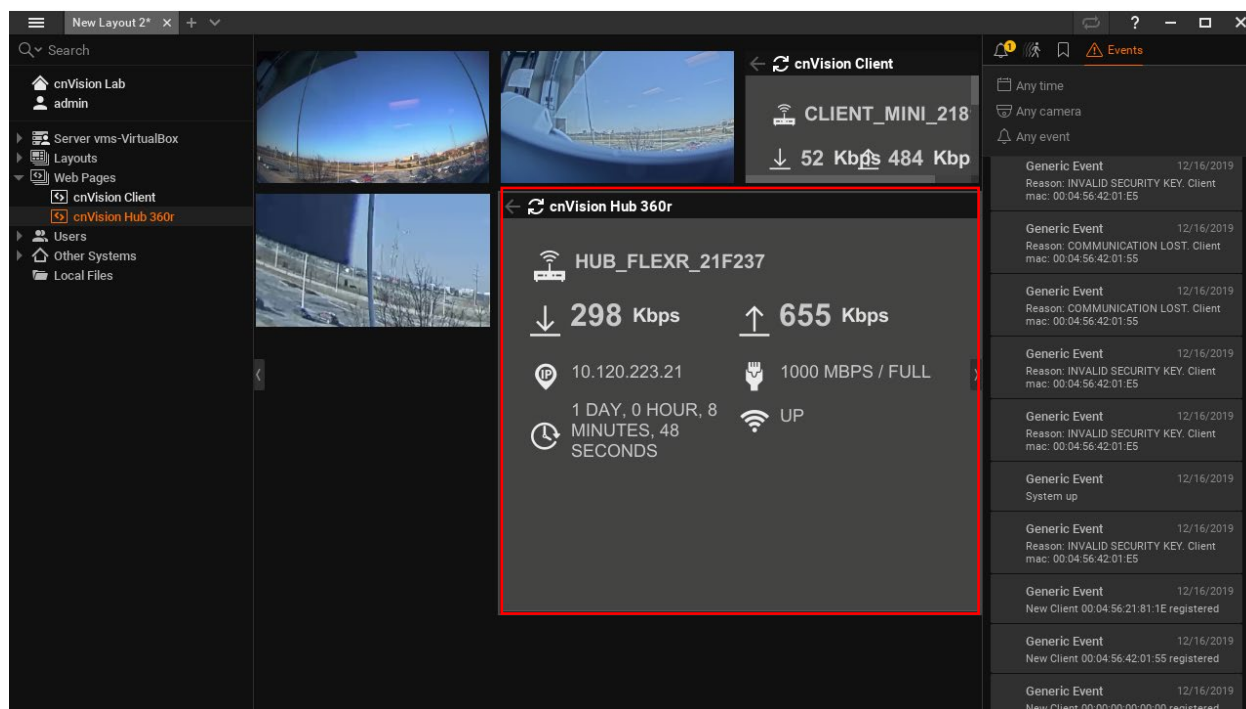

Chapter 7: General Maintenance and Troubleshooting

This chapter provides instructions for operators of cnVision networks. The following topics are described:

- [General Planning for Troubleshooting](#)
- [Upgrading device software](#)
- [Testing hardware](#)
- [Troubleshooting the radio link](#)
- [Using the Ping and Traceroute utilities](#)
- [Resetting cnVision to factory defaults by power cycling](#)

General Planning for Troubleshooting

Effective troubleshooting depends in part on measures that you take before you experience trouble in your network. Cambium recommends the following measures for each site:

Procedure:

1. Refer to the installation documents and logs for the site, including:
 - Operating procedures
 - Site-specific configuration records
 - Network topology
 - Software releases
 - Types of hardware deployed
 - Site-specific troubleshooting process
 - Escalation procedures
 - GPS latitude/longitude of each network element
2. Use the tools available within the device's interface that can be used for troubleshooting connectivity and data throughput issues.
 - Ping
 - Taceroute
 - System
 - Wireless
 - Throughput data
 - eAlign (Client)
 - Wireless Link Test
 - System logs
3. Keep the cnVision devices updated with the latest software.
4. Perform visual site inspections as part of routine maintenance.

Upgrading the Hub/Client software

The key to ensuring cnVision devices are working at an optimum level and taking advantage of the latest features is by updating the software to the latest version. Monitor the Cambium Networks software website for updates: https://support.cambiumnetworks.com/files/cnVision_cnVision


To upgrade the device software, follow this procedure:

Procedure:

- 1 Log in to the device Web UI.
- 2 Navigate to page **Tools > Software Upgrade**.
- 3 Under the Main Software section, set the Upgrade Option to URL to pull the software file from a network software server or select Local File and browse to the file location, or drag and drop the file in the Upload a file box. If **URL** is selected, enter the server IP address, Server Port, and File path.
- 4 If **Local File** is selected, click **Browse** to launch the file selection dialogue.
- 5 Click **Upgrade**.

Do not power off the unit in the middle of an upgrade process.

- 6 Once the software upgrade is complete, click the **Reset** icon.

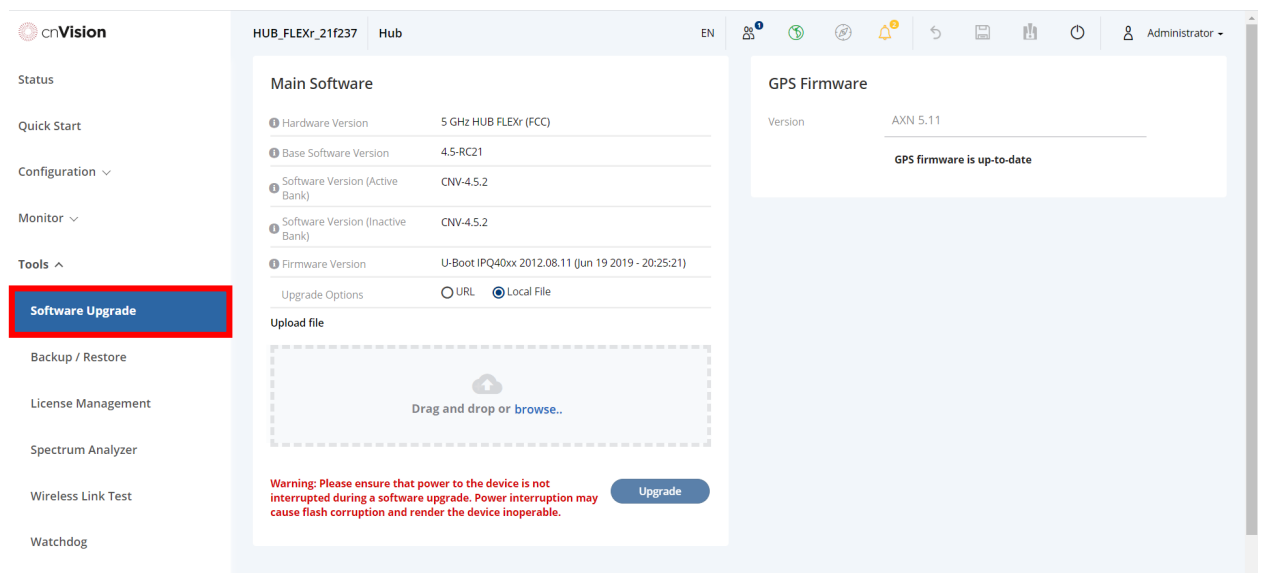


Video Issues

This section focuses on video-related issues.

Camera feed is missing in the VMS


If a camera feed is missing in the Video Management System, try the following:

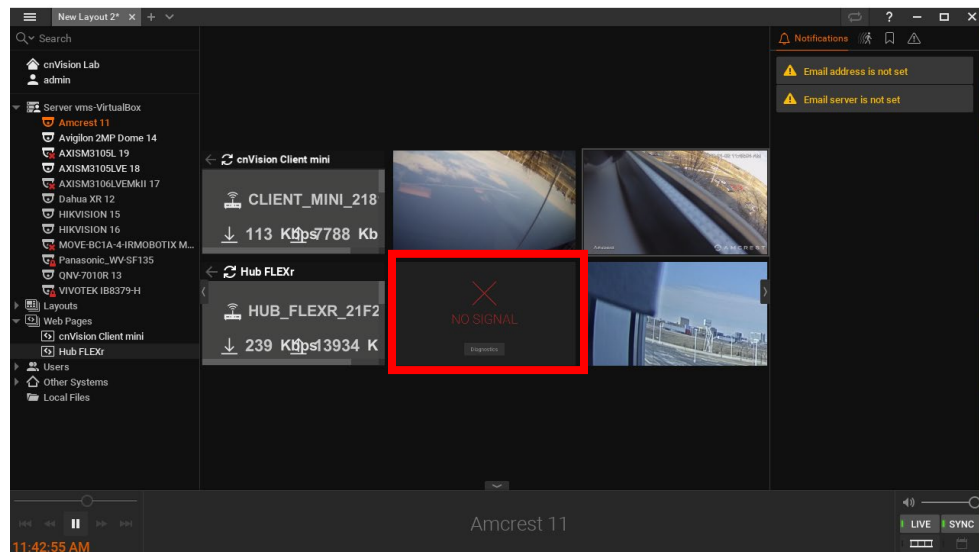


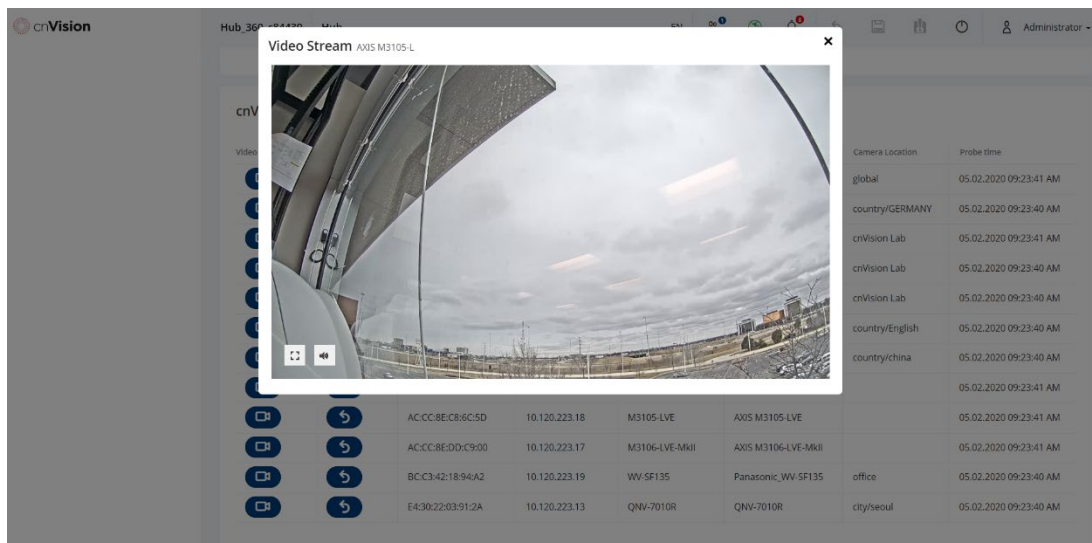
Solutions:

Open the Video Stream

1. Log in to the cnVision client or hub. The **Status** screen displays all ONVIF compliant cameras and lists them on this screen. Ensure the camera is displayed in the list if it's not displayed, the problem may be with the camera itself.

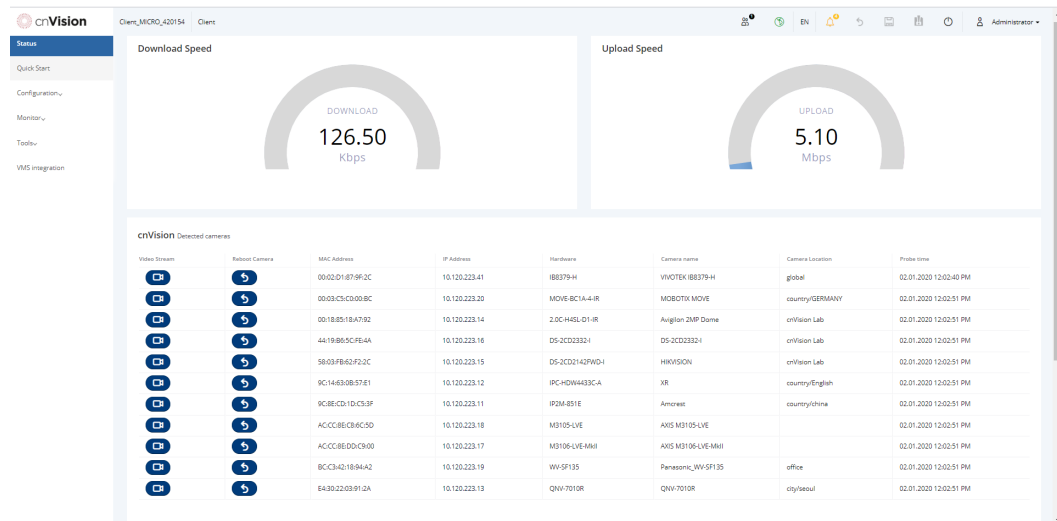


- Click the video stream  button to log directly into the camera. Enter the login credentials for the camera. A dialog box will be displayed streaming the video if the camera is functioning.




- If the video stream is not displayed, make sure you are entering the correct login credentials for the camera.

Reboot the Camera

4. Click the reboot  button to restart the camera and try to open the video stream again.


Ping the Camera

1. Locate the camera's IP address from the list and ping the camera to see if it's connectable. You can ping cameras and other network devices from **Tools > Ping**.

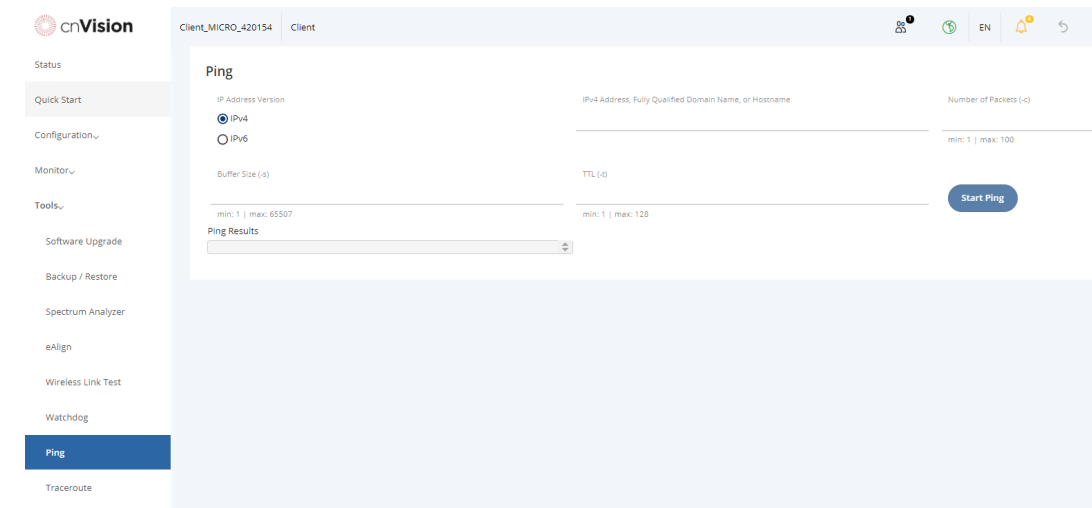

The screenshot shows the CNVision web interface with the 'Ping' tool selected in the left sidebar. The main area displays the 'Ping' configuration page. It includes fields for 'IP Address Version' (IPv4 selected), 'IPv4 Address, Fully Qualified Domain Name, or Hostname', 'Number of Packets (-c)', 'Buffer Size (-s)', and 'TTL (-t)'. A 'Start Ping' button is visible. The 'Ping Results' section is currently empty.

2. Enter the camera's IP address. Click the **Start Ping** button. The ping results will be displayed after the test is complete. If you see replies from the camera such as "Destination Host Unreachable" or "Request Timed Out", the camera may be unavailable for various reasons.

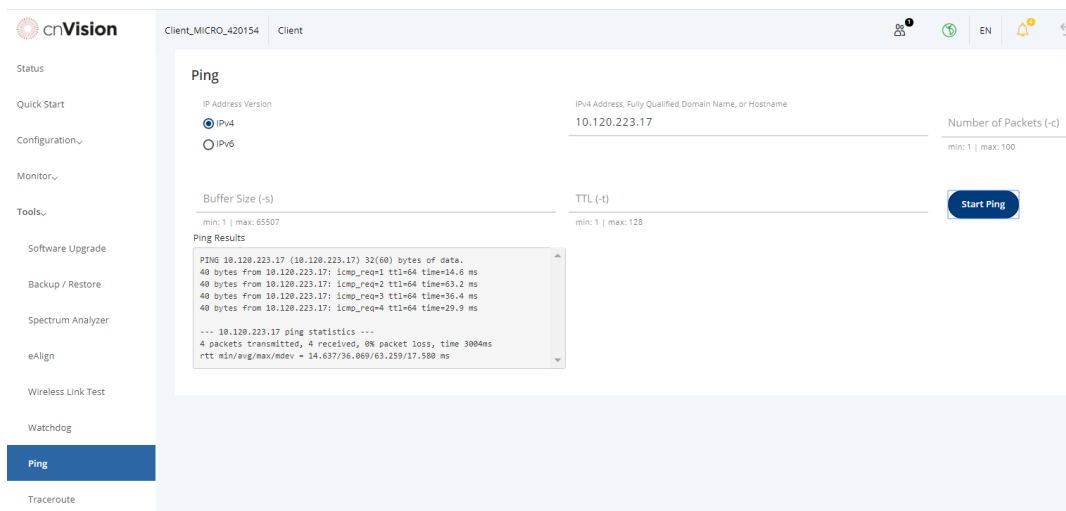


The screenshot shows the CNVision web interface with the 'Ping' tool selected. The 'IPv4 Address' field is now populated with '10.120.223.17'. The 'Start Ping' button is highlighted. The 'Ping Results' section displays the following output:

```
PING 10.120.223.17 (10.120.223.17) 32(60) bytes of data:
40 bytes from 10.120.223.17: icmp_seq=1 ttl=64 time=14.6 ms
40 bytes from 10.120.223.17: icmp_seq=2 ttl=64 time=63.2 ms
40 bytes from 10.120.223.17: icmp_seq=3 ttl=64 time=36.4 ms
40 bytes from 10.120.223.17: icmp_seq=4 ttl=64 time=29.9 ms

--- 10.120.223.17 ping statistics ---
4 packets transmitted, 4 received, 0% packet loss, time 3004ms
rtt min/avg/max/ndev = 14.637/36.069/63.259/17.500 ms
```


Check Hub and Client Status

1. Check that the hub and client are working correctly. Go to **Monitor > Wireless** to check the status. Ping the hub and the client to make sure they are working correctly from **Tools > Ping**.

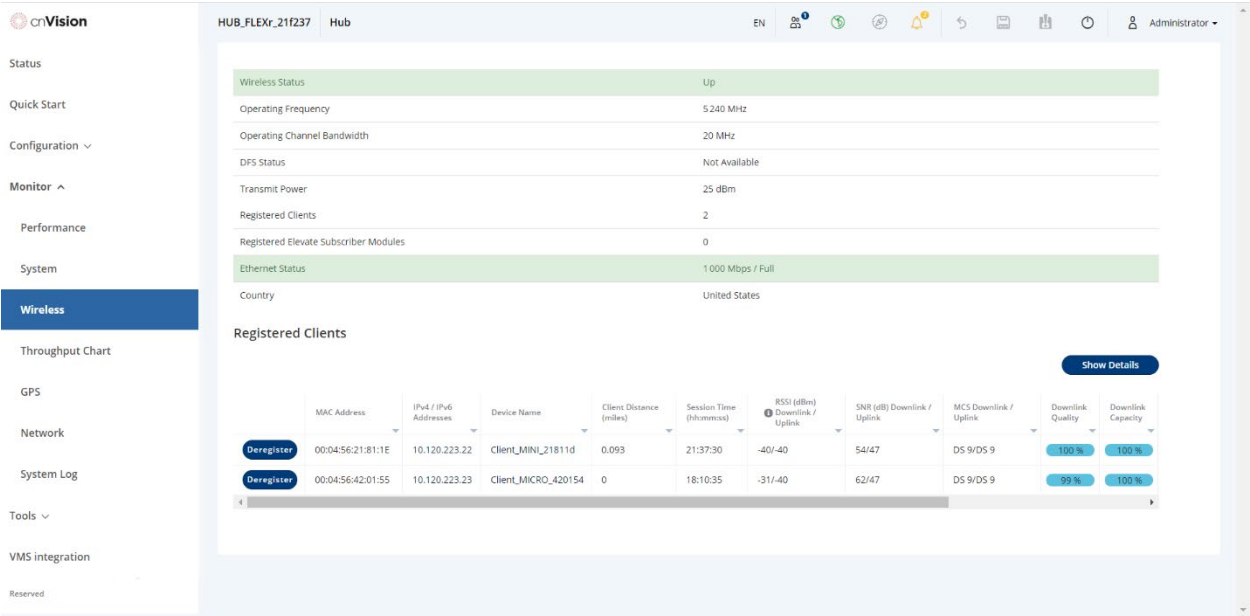


Link quality has degraded

There may be instances where the image quality has degraded but the hub and client are still operating.

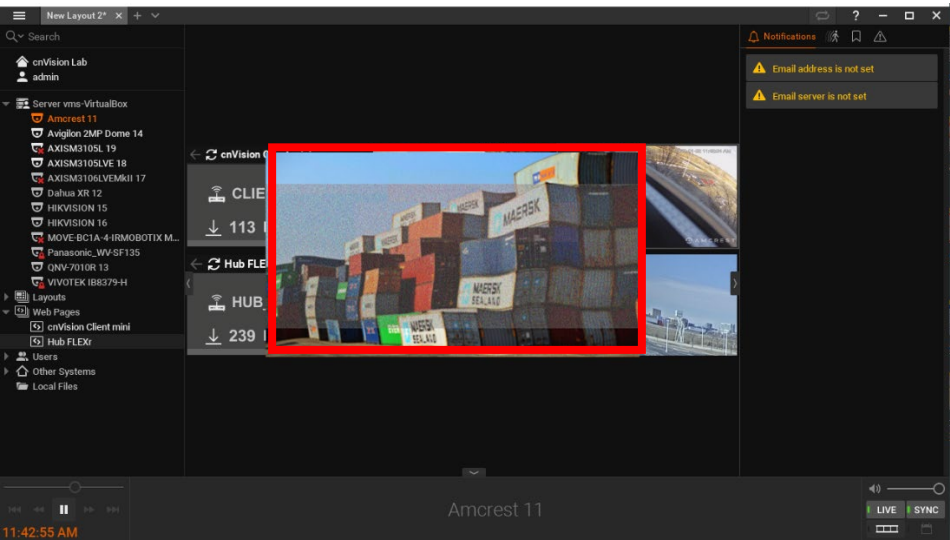


Solutions:


1. Check if there are high numbers of packet errors or packet drops on the client or the hub. These statistics can be found under the Ethernet Statistics - Transmitted and Ethernet Statistics - Received tiles from **Monitor > Performance**.

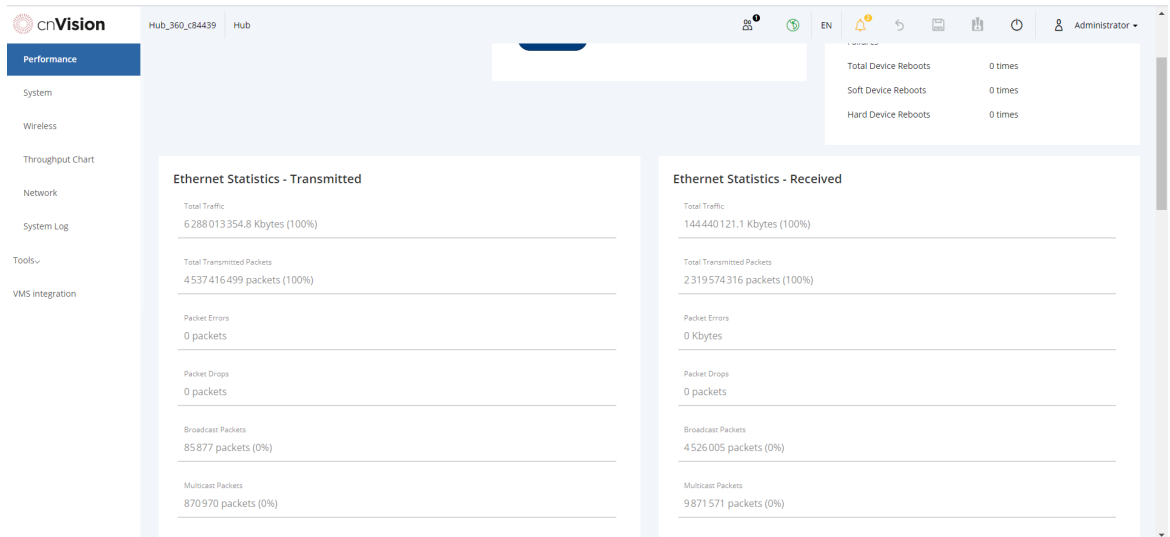

2. Check the wireless link with the client or hub from **Tools > Wireless Link Test**. The test will check the uplink and downlink speed. A high number of errors or drops may indicate a line of sight issues due to an obstacle or the radio antennas may have become misaligned.

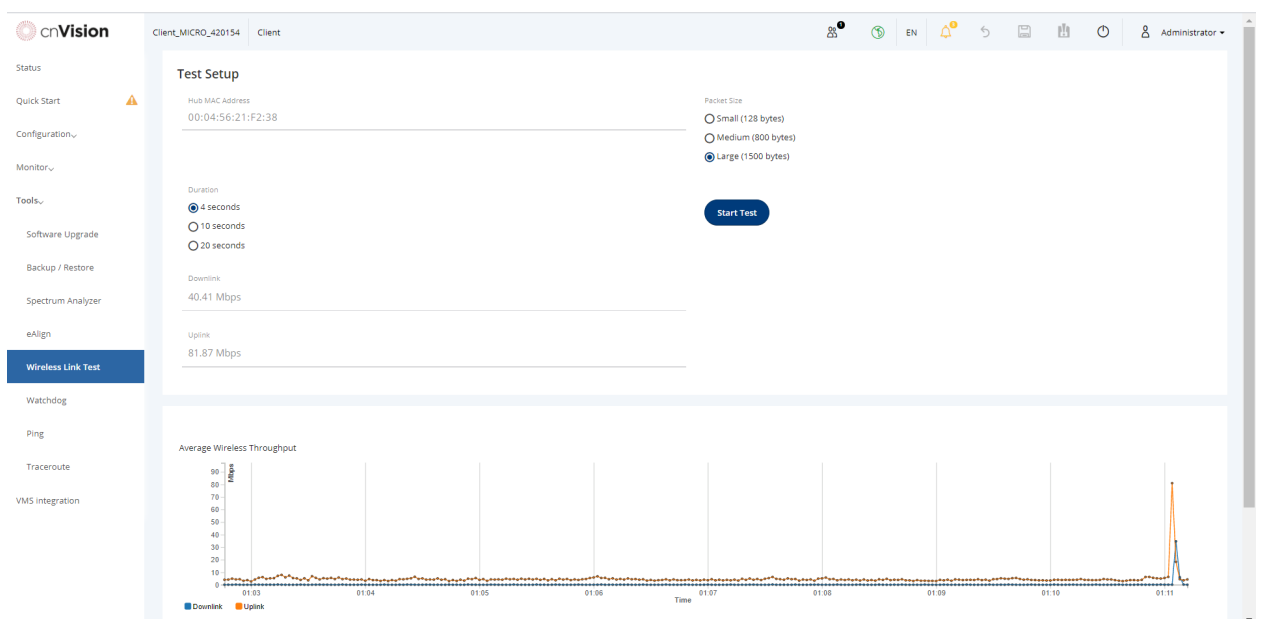


3. Use the eAlign tool to help align the antennas for optimal signal.

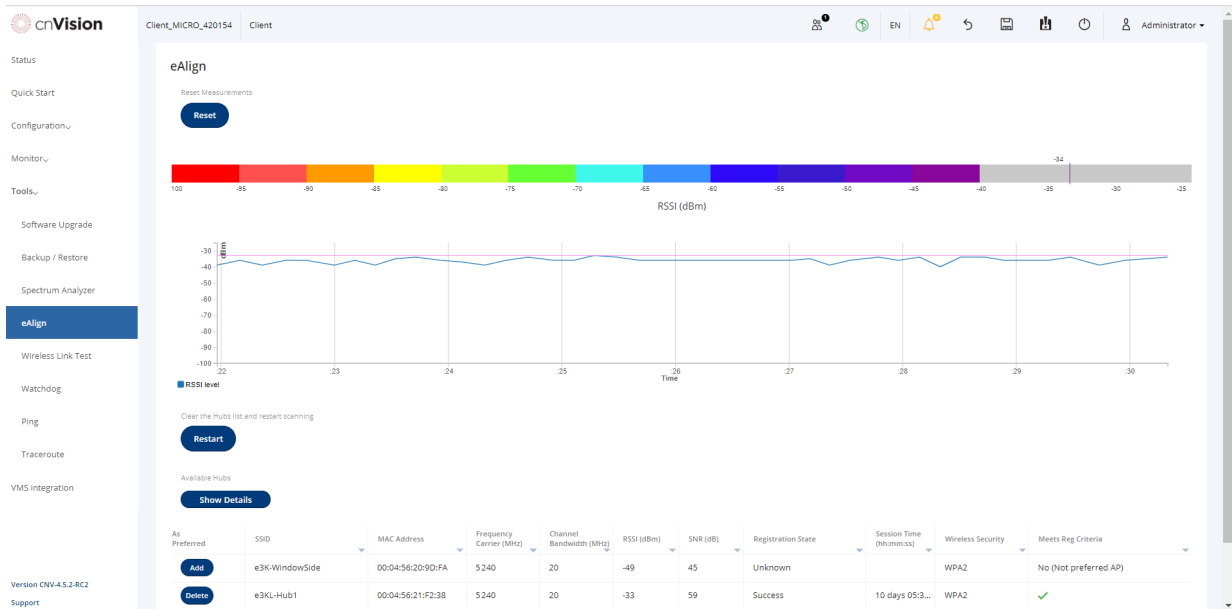

4. Try lowering the camera's resolution to see if that fixes the issues.


Video is pixelated or skipping frames in VMS

Choppy video or frames being dropped in the Video Management System could be related to various issues. Increased activity in a scene can suddenly cause an increase in data output data the camera.

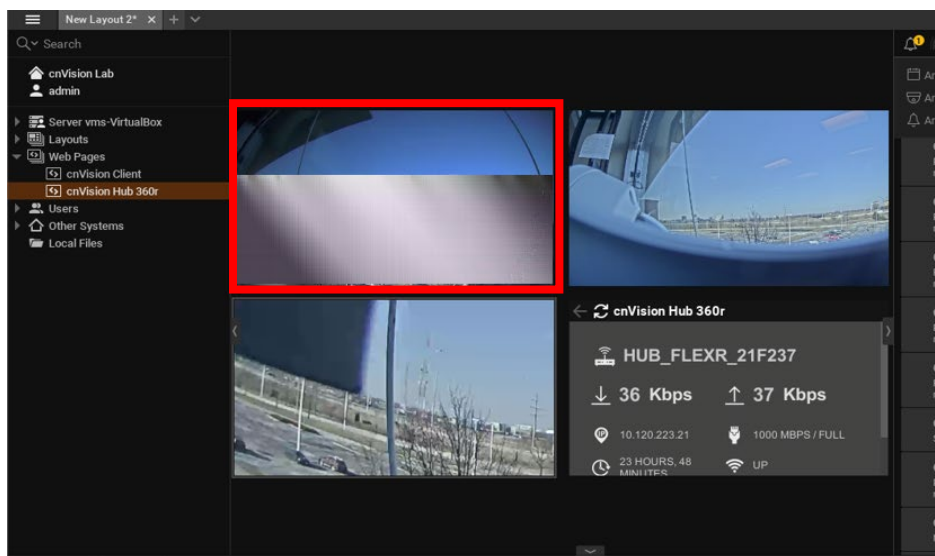

Solutions:

1. Check the camera's video stream from the device's Web UI > **Status** > **Detected cameras** section. If the video is streaming without any issues, the problem may be related to other network devices (switch, NVR, etc.).

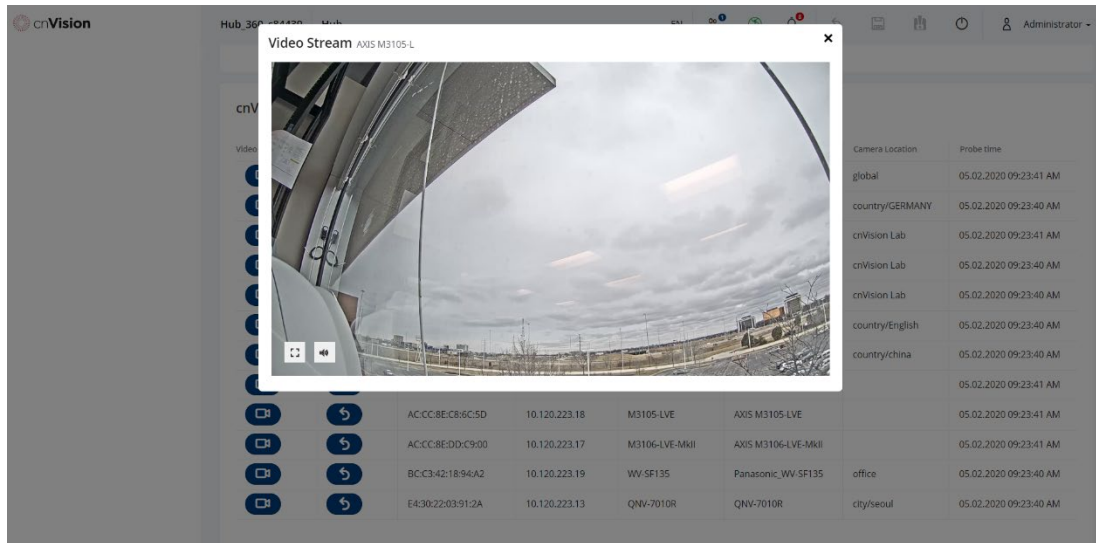

2. If the video stream is choppy from the Web UI, perform the wireless link test from **Tools** > **Wireless Link Test** to determine the uplink and downlink speed.
3. Use the eAlign utility to check the received signal strength to ensure the device has a strong signal. Obstacles blocking the device's line of sight can cause Interference and signal to degrade. Antennas can become misaligned if not mounted properly. Check the hub and client and correct any issues.























Camera is connected but not detected in cnVision

A camera is powered and connected to the cnVision system, however, the camera is not displayed in the VMS or listed in the **Detected Cameras** section in the Hub/Client Web User Interface.

Hub_360_c84439 Hub

Administrator

cnVision Detected cameras

Video Stream	Reboot Camera	MAC Address	IP Address	Hardware	Camera name	Camera Location	Probe time
		00:03:C5:C0:00:BC	10.120.223.20	MOVE-BC1A-4-IR	MOBOTIX MOVE	country/GERMANY	05.02.2020 11:47:06 AM
		00:18:85:18:A7:92	10.120.223.14	2.0C-H4SL-D1-IR	Avigilon 2MP Dome	cnVision Lab	05.02.2020 11:47:07 AM
		44:19:B6:5C:FE:4A	10.120.223.16	DS-2CD2332-I	DS-2CD2332-I	cnVision Lab	05.02.2020 11:47:06 AM
		58:03:FB:62:F2:2C	10.120.223.15	DS-2CD2142FWD-I	HIKVISION	cnVision Lab	05.02.2020 11:47:06 AM
		9C:14:63:0B:57:E1	10.120.223.12	IPC-HDW4433C-A	XR	country/English	05.02.2020 11:47:06 AM
		9C:8E:CD:1D:C5:3F	10.120.223.11	IP2M-851E	Amcrest	country/china	05.02.2020 11:47:06 AM
		AC:CC:8E:BB:19:11	10.120.223.42	M3105-L	AXIS M3105-L		05.02.2020 11:47:06 AM
		AC:CC:8E:C8:6C:5D	10.120.223.18	M3105-LVE	AXIS M3105-LVE		05.02.2020 11:47:06 AM
		AC:CC:8E:DD:C9:00	10.120.223.17	M3106-LVE-MkII	AXIS M3106-LVE-MkII		05.02.2020 11:47:06 AM
		BC:C3:42:18:94:A2	10.120.223.19	WW-SF135	Panasonic_WW-SF135	office	05.02.2020 11:47:06 AM
		E4:30:22:03:91:2A	10.120.223.13	QNV-7010R	QNV-7010R	city/seoul	05.02.2020 11:47:06 AM

Solutions:

Some camera manufacturers disable the “ONVIF” settings by default. Navigate to the camera’s configuration page and [enable the “ONVIF” settings](#).

Camera is detected in cnVision but can’t open a video stream

A camera is detected in the cnVision system, however, the video stream pop-up box doesn’t open.

Solutions:

Check the “ONVIF” settings on the camera. Navigate to the camera’s configuration page and [enable the “ONVIF” settings](#).

Testing hardware

Before testing hardware, confirm that all outdoor cables, that is those that connect the device to equipment inside the building, are of the supported type.

Device has stopped transmitting or receiving.

Checking the power supply LED

When the power supply is connected to the main power supply, the expected LED behavior is:

- The Power (green) LED illuminates steadily.

If the expected LED operation does not occur, or if a fault is suspected in the hardware, check the LED states and choose the correct test procedure:

Power LED is off

Meaning: Either the power supply is not receiving power from the AC/DC outlet, or there is a wiring fault in the unit.

Action: Remove the device cable from the PSU and observe the effect on the Power LED. If the Power LED does not illuminate, confirm that the mains power supply is working, for example, check the plug. If the power supply is working, report a suspected power supply fault to Cambium Networks.

Ethernet LED is off


Meaning: There is no Ethernet traffic between the device and the power supply.

Action: The fault may be in the LAN or device cable:

- Remove the LAN cable from the power supply, examine it and confirm it is not faulty.
- If the PC connection is working, remove the Hub/Client cable from the power supply, examine it, and check that the wiring to pins 1,2 and 3,6 is correct and not crossed.

Test Ethernet packet errors reported by the device

Log in to the device and click **Monitor > Performance**. Check if there are packet errors in the Ethernet Statistics -Transmitted, Ethernet Statistic – Received tiles. The test has passed if the **Packet error counter** is less than 10 in one million **Total packet counter**

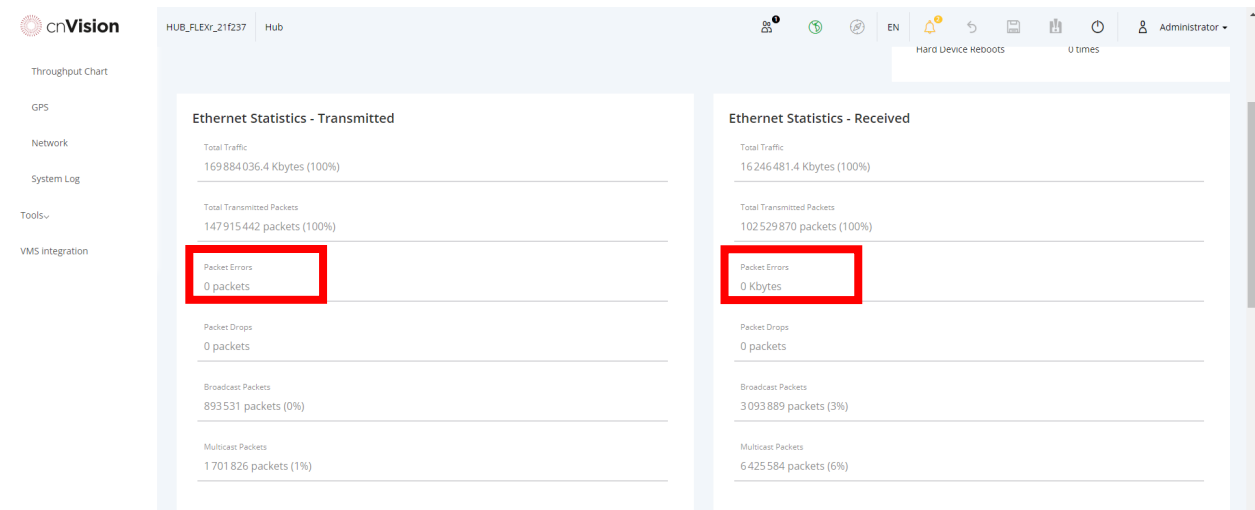

Test Ethernet packet errors reported by managed switch or router

If the device is connected to a managed Ethernet switch or router, it may be possible to monitor the error rate of Ethernet packets. Please refer to the user guide of the managed network equipment. The test has passed if the rate of packet errors reported by the managed Ethernet switch or router is less than 10 in 1 million packets.

The device has lost or does not establish radio connectivity

If there is no wireless activity, follow this:

Procedure:

- 1 Check that the devices are configured with the same **Frequency Carrier**.
- 2 Verify the authentication settings on the devices. If **Authentication Type** is set to **WPA2**, verify that the **Pre-shared Key** matches between the Hub and the Client **Preferred Hubs List**.
- 3 Check that the software at each end of the link is the same version.
- 4 Check that the desired Hub SSID is configured in the Client **Preferred Hubs List**.

- 5 Check Tx Power on the devices.
- 6 Check that the link is not obstructed or misaligned.
- 7 If there are no faults found in the configuration and there is absolutely no wireless signal, retry the installation procedure.

Using Ping and Traceroute Utilities

Test ping for packet loss

The ping utility uses ICMP packets to check the link quality and packet loss between two network devices. You can ping devices on the network directly from the cnVision device's Web UI > **Tools** > **Ping**.

The screenshot shows the cnVision Web UI for a device named HUB_FLEXr_21f237. The 'Tools' menu is expanded, and the 'Ping' option is selected. The 'Ping' configuration page is displayed with the following fields and values:


- IP Address Version: ☒ IPv4 ☐ IPv6
- IPv4 Address: 192.168.1.10
- Number of Packets: 4
- Buffer Size: 100
- TTL: 64

The 'Start Ping' button is located at the bottom of the configuration section. The 'Ping Results' section is currently empty.



Attention This procedure disrupts network traffic carried by the device under test.

Procedure:

1. Enter the remote device's IPv4 Address, Fully Qualified Domain Name, or Hostname.
2. Enter the number of packets to send for the ping test (up to 100).
3. Enter the packet buffer size in the Buffer size field (for example, 64).
4. Enter the Time-to-Live value in the TTL field. This value tells the router whether the packet has been in the network too long and should be discarded.
5. Click the  button to start the test.


The results are displayed after the test is complete. The test has passed if the number of lost packets is less than 2.

Ping Results


```
PING 10.120.223.31 (10.120.223.31) 64(92) bytes of data.  
72 bytes from 10.120.223.31: icmp_req=1 ttl=64 time=0.605 ms  
72 bytes from 10.120.223.31: icmp_req=2 ttl=64 time=0.428 ms  
72 bytes from 10.120.223.31: icmp_req=3 ttl=64 time=0.484 ms  
72 bytes from 10.120.223.31: icmp_req=4 ttl=64 time=0.481 ms  
  
--- 10.120.223.31 ping statistics ---  
4 packets transmitted, 4 received, 0% packet loss, time 2997ms  
rtt min/avg/max/mdev = 0.428/0.499/0.605/0.068 ms
```

Using Traceroute Utility

The Traceroute utility shows the path the ICMP packets take from the device to the destination device you specify. It will list all the routers the packets pass through to reach its destination and any that have failed or been discarded, and how long each hop took.

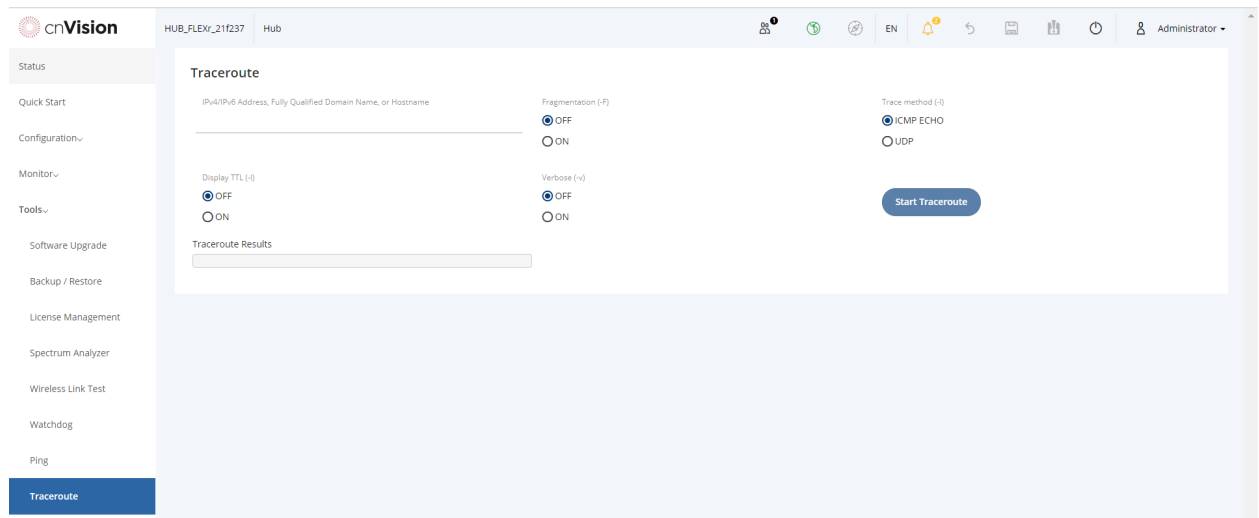


Procedure:

1. Enter the destination IP Address, Fully Qualified Name, or the hostname in the **IPv4/IPv6 Address, Fully Qualified Domain Name, or Hostname** field.
2. Enable the other options if needed.
3. Click the  button to start the test.
4. The results are displayed after the test is complete.

Traceroute Results

```
traceroute to 10.120.223.22 (10.120.223.22), 30 hops max, 38 byte packets
 1  10.120.223.22  3.503 ms  3.495 ms  4.134 ms
```




Resetting cnVision Devices to factory defaults

Operators may reset a cnVision radio to the default factory configuration by a sequence of power cycling (removing and re-applying power to the device). This procedure allows operators to perform a factory default reset without a tower climb or additional tools.

Procedure:

- 1 Remove the Ethernet cable from PoE jack of the power supply for at least 10 seconds.
- 2 Reconnect the Ethernet cable to re-supply power to the cnVision device for **3-5 seconds** and disconnect cable to power off the cnVision device for **3-5 seconds**. (1st power cycle)
- 3 Reconnect the Ethernet cable to re-supply power to the cnVision device for **3-5 seconds** and disconnect cable to power off the cnVision device for **3-5 seconds**. (2nd power cycle)
- 4 Reconnect the Ethernet cable to re-supply power to the cnVision device for **3-5 seconds** and disconnect cable to power off the cnVision device for **3-5 seconds**. (3rd power cycle)
- 5 Reconnect the Ethernet cable to re-supply power to the cnVision device for **3-5 seconds** and disconnect cable to power off the cnVision device for **3-5 seconds**. (4th power cycle)
- 6 Reconnect the Ethernet cable to re-supply power to the cnVision device for at least **30 seconds** and allow it to go through the boot-up procedure (Note: Device will go through an additional reset automatically). This will reset the current configuration files to factory default configuration (e.g. IP addresses, Device mode, RF configuration etc.). The device can be pinged from a PC to check if boot up is complete (Successful ping replies indicates boot-up is complete).
- 7 Access the cnVision device using the default IP address of 192.168.0.1 (Hub) or 192.168.0.2 (Client).

Power cycle timings

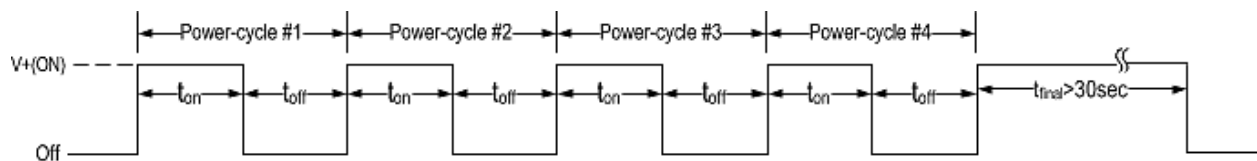

Where:**Is:**

V+(ON)

Power through PoE has been applied to the device

Off

Power through PoE has been removed from the device

t_{on}

Time duration for which the device has been powered on. This should be 3-5 seconds.

t_{off}

Time duration for which the device has been powered off. This should be 3-5 seconds.

Chapter 8: Legal and reference information

This chapter provides legal notices including software license agreements.



Attention Intentional or unintentional changes or modifications to the equipment must not be made unless under the express consent of the party responsible for compliance. Any such modifications could void the user's authority to operate the equipment and will void the manufacturer's warranty.

The following topics are described in this chapter:

- [Cambium Networks end user license agreement](#)
- [Hardware warranty](#)
- [Limit of liability](#)
- [Compliance with safety standards](#) lists the safety specifications against which the cnVision products have been tested and certified. It also describes how to keep RF exposure within safe limits.
- [Compliance with radio regulations](#) describes how the cnVision products comply with the radio regulations that are cnVision products in various countries.
- [Notifications](#) on contains notes made to regulatory bodies for the cnVision products.

Cambium Networks end user license agreement

Acceptance of this agreement

In connection with Cambium Networks' delivery of certain proprietary software or products containing embedded or pre-loaded proprietary software, or both, Cambium Networks is willing to license this certain proprietary software and the accompanying documentation to you only on the condition that you accept all the terms in this End User License Agreement ("Agreement").

IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT USE THE PRODUCT OR INSTALL THE SOFTWARE. INSTEAD, YOU MAY, FOR A FULL REFUND, RETURN THIS PRODUCT TO THE LOCATION WHERE YOU ACQUIRED IT OR PROVIDE WRITTEN VERIFICATION OF DELETION OF ALL COPIES OF THE SOFTWARE. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE PRODUCT, WILL CONSTITUTE YOUR ACCEPTANCE TO THE TERMS OF THIS AGREEMENT.

Definitions

In this Agreement, the word "Software" refers to the set of instructions for computers, in executable form and in any media, (which may include diskette, CD-ROM, downloadable internet, hardware, or firmware) licensed to you. The word "Documentation" refers to electronic or printed manuals and accompanying instructional aids licensed to you. The word "Product" refers to Cambium Networks' fixed wireless broadband devices for which the Software and Documentation is licensed for use.

Grant of license

Cambium Networks Limited ("Cambium") grants you ("Licensee" or "you") a personal, nonexclusive, non-transferable license to use the Software and Documentation subject to the Conditions of Use set forth in "**Conditions of use**" and the terms and conditions of this Agreement. Any terms or conditions relating to the Software and Documentation appearing on the face or reverse side of any purchase order, purchase order acknowledgment or other order document that are different from, or in addition to, the terms of this Agreement will not be binding on the parties, even if payment is accepted.

Conditions of use

Any use of the Software and Documentation outside of the conditions set forth in this Agreement is strictly prohibited and will be deemed a breach of this Agreement.

1. Only you, your employees or agents may use the Software and Documentation. You will take all necessary steps to insure that your employees and agents abide by the terms of this Agreement.
2. You will use the Software and Documentation (i) only for your internal business purposes; (ii) only as described in the Software and Documentation; and (iii) in strict accordance with this Agreement.
3. You may use the Software and Documentation, provided that the use is in conformance with the terms set forth in this Agreement.

4. Portions of the Software and Documentation are protected by United States copyright laws, international treaty provisions, and other applicable laws. Therefore, you must treat the Software like any other copyrighted material (for example, a book or musical recording) except that you may either: (i) make 1 copy of the transportable part of the Software (which typically is supplied on diskette, CD-ROM, or downloadable internet), solely for back-up purposes; or (ii) copy the transportable part of the Software to a PC hard disk, provided you keep the original solely for back-up purposes. If the Documentation is in printed form, it may not be copied. If the Documentation is in electronic form, you may print out 1 copy, which then may not be copied. With regard to the copy made for backup or archival purposes, you agree to reproduce any Cambium Networks copyright notice, and other proprietary legends appearing thereon. Such copyright notice(s) may appear in any of several forms, including machine-readable form, and you agree to reproduce such notice in each form in which it appears, to the extent it is physically possible to do so. Unauthorized duplication of the Software or Documentation constitutes copyright infringement, and in the United States is punishable in federal court by fine and imprisonment.

5. You will not transfer, directly or indirectly, any product, technical data or software to any country for which the United States Government requires an export license or other governmental approval without first obtaining such license or approval.

Title and restrictions

If you transfer possession of any copy of the Software and Documentation to another party outside of the terms of this agreement, your license is automatically terminated. Title and copyrights to the Software and Documentation and any copies made by you remain with Cambium Networks and its licensors. You will not, and will not permit others to: (i) modify, translate, decompile, bootleg, reverse engineer, disassemble, or extract the inner workings of the Software or Documentation, (ii) copy the look-and-feel or functionality of the Software or Documentation; (iii) remove any proprietary notices, marks, labels, or logos from the Software or Documentation; (iv) rent or transfer all or some of the Software or Documentation to any other party without Cambium's prior written consent; or (v) utilize any computer software or hardware which is designed to defeat any copy protection device, should the Software and Documentation be equipped with such a protection device. If the Software and Documentation is provided on multiple types of media (such as diskette, CD-ROM, downloadable internet), then you will only use the medium which best meets your specific needs, and will not loan, rent, lease, or transfer the other media contained in the package without Cambium's written consent. Unauthorized copying of the Software or Documentation, or failure to comply with any of the provisions of this Agreement, will result in automatic termination of this license.

Confidentiality

You acknowledge that all Software and Documentation contain valuable proprietary information and trade secrets and that unauthorized or improper use of the Software and Documentation will result in irreparable harm to Cambium Networks for which monetary damages would be inadequate and for which Cambium Networks will be entitled to immediate injunctive relief. If applicable, you will limit access to the Software and Documentation to those of your employees and agents who need to use the Software and Documentation for your internal business purposes, and you will take appropriate action with those employees and agents to preserve the confidentiality of the Software and Documentation, using the same degree of care to avoid unauthorized or improper disclosure as you use for the protection of your own proprietary software, but in no event less than reasonable care.

You have no obligation to preserve the confidentiality of any proprietary information that: (i) was in the public domain at the time of disclosure; (ii) entered the public domain through no fault of yours; (iii) was given to you free of any obligation to keep it confidential; (iv) is independently developed by you; or (v) is disclosed as required by law provided that you notify Cambium Networks prior to such disclosure and provide Cambium Networks with a reasonable opportunity to respond.

Right to use Cambium's name

Except as required in “**Conditions of use**”, you will not, during the term of this Agreement or thereafter, use any trademark of Cambium Networks, or any word or symbol likely to be confused with any Cambium Networks trademark, either alone or in any combination with another word or words.

Transfer

The Software and Documentation may not be transferred to another party without the express written consent of Cambium Networks, regardless of whether or not such transfer is accomplished by physical or electronic means. Cambium's consent may be withheld at its discretion and may be conditioned upon transferee paying all applicable license fees and agreeing to be bound by this Agreement.

Updates

During the first 12 months after purchase of a Product, or during the term of any executed Maintenance and Support Agreement for the Product, you are entitled to receive Updates. An “Update” means any code in any form which is a bug fix, patch, error correction, or minor enhancement, but excludes any major feature added to the Software. Updates are available for download at the support website.

Major features may be available from time to time for an additional license fee. If Cambium Networks makes available to you major features and no other end user license agreement is provided, then the terms of this Agreement will apply.

Maintenance

Except as provided above, Cambium Networks is not responsible for maintenance or field service of the Software under this Agreement.

Disclaimer

CAMBIUM NETWORKS DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS, IMPLIED, STATUTORY, OR IN ANY COMMUNICATION WITH YOU. CAMBIUM NETWORKS SPECIFICALLY DISCLAIMS ANY WARRANTY INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY, NONINFRINGEMENT, OR FITNESS FOR A PARTICULAR PURPOSE. THE SOFTWARE AND DOCUMENTATION ARE PROVIDED “AS IS.” CAMBIUM NETWORKS DOES NOT WARRANT THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS, OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. CAMBIUM NETWORKS MAKES NO WARRANTY WITH RESPECT TO THE CORRECTNESS, ACCURACY, OR RELIABILITY OF THE SOFTWARE AND DOCUMENTATION. Some jurisdictions do not allow the exclusion of implied warranties, so the above exclusion may not apply to you.

Limitation of liability

IN NO EVENT SHALL CAMBIUM NETWORKS BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGE ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION OR ANY OTHER PECUNIARY LOSS, OR FROM ANY BREACH OF WARRANTY, EVEN IF CAMBIUM NETWORKS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.) IN NO CASE SHALL CAMBIUM’S LIABILITY EXCEED THE AMOUNT YOU PAID FOR THE PRODUCT.

U.S. government

If you are acquiring the Product on behalf of any unit or agency of the U.S. Government, the following applies. Use, duplication, or disclosure of the Software and Documentation is subject to the restrictions set forth in subparagraphs (c) (1) and (2) of the Commercial Computer Software – Restricted Rights clause at FAR 52.227-19 (JUNE 1987), if applicable, unless being provided to the Department of Defense. If being provided to the Department of Defense, use, duplication, or disclosure of the Products is subject to the restricted rights set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 (OCT 1988), if applicable. Software and Documentation may or may not include a Restricted Rights notice, or other notice referring specifically to the terms and conditions of this Agreement. The terms and conditions of this Agreement will each continue to apply, but only to the extent that such terms and conditions are not inconsistent with the rights provided to you under the aforementioned provisions of the FAR and DFARS, as applicable to the particular procuring agency and procurement transaction.

Term of license

Your right to use the Software will continue in perpetuity unless terminated as follows. Your right to use the Software will terminate immediately without notice upon a breach of this Agreement by you. Within 30 days after termination of this Agreement, you will certify to Cambium Networks in writing that through your best efforts, and to the best of your knowledge, the original and all copies, in whole or in part, in any form, of the Software and all related material and Documentation, have been destroyed, except that, with prior written consent from Cambium Networks, you may retain one copy for archival or backup purposes. You may not sublicense, assign or transfer the license or the Product, except as expressly provided in this Agreement. Any attempt to otherwise sublicense, assign or transfer any of the rights, duties or obligations hereunder is null and void.

Governing law

This Agreement is governed by the laws of the United States of America to the extent that they apply and otherwise by the laws of the State of Illinois.

Assignment

This agreement may not be assigned by you without Cambium's prior written consent.

Survival of provisions

The parties agree that where the context of any provision indicates an intent that it survives the term of this Agreement, then it will survive.

Entire agreement

This agreement contains the parties' entire agreement regarding your use of the Software and may be amended only in writing signed by both parties, except that Cambium Networks may modify this Agreement as necessary to comply with applicable laws.

Third party software

The software may contain one or more items of Third-Party Software supplied by other third-party suppliers. The terms of this Agreement govern your use of any Third-Party Software UNLESS A SEPARATE THIRD-PARTY SOFTWARE LICENSE IS INCLUDED, IN WHICH CASE YOUR USE OF THE THIRD-PARTY SOFTWARE WILL THEN BE GOVERNED BY THE SEPARATE THIRD-PARTY LICENSE.

Source Code Requests

Where required under the terms of the open source software license applicable to Cambium's use of each of the following open source software packages, for at least three (3) years from the date of your receipt of the copy of such open source software, Cambium will provide to any party who contacts us at the contact information provided below a copy of the source code for the version of the requested open source software used in this Cambium product.

Cambium Networks

Atrium, 3800 Golf Rd #360

Rolling Meadows, IL 60008

QCA

Tensilica

Linux Kernel

OpenWRT

" GNU GENERAL PUBLIC LICENSE Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
59 Temple Place, Suite 330, Boston, MA 02111-1307 USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether

gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The `""Program""`, below, refers to any such program or work, and a `""work based on the Program""` means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term `""modification""`.) Each licensee is addressed as `""you""`.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the

Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the

entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author

	<p>to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promo"</p>
u-boot	<pre>"# (C) Copyright 2000 - 2005 # Wolfgang Denk, DENX Software Engineering, wd@denx.de. # # See file CREDITS for list of people who contributed to this # project. # # This program is free software; you can redistribute it and/or # modify it under the terms of the GNU General Public License as # published by the Free Software Foundation; either version 2 of # the License, or (at your option) any later version. # # This program is distributed in the hope that it will be useful, # but WITHOUT ANY WARRANTY; without even the implied warranty of # MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the # GNU General Public License for more details. # # You should have received a copy of the GNU General Public License # along with this program; if not, write to the Free Software # Foundation, Inc., 59 Temple Place, Suite 330, Boston, # MA 02111-1307 USA "</pre>
firewall	<pre>/* * firewall3 - 3rd OpenWrt UCI firewall implementation * * Copyright (C) 2013-2014 Jo-Philipp Wich <jow@openwrt.org> * * Permission to use, copy, modify, and/or distribute this software for any * purpose with or without fee is hereby granted, provided that the above * copyright notice and this permission notice appear in all copies. * * THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES * WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF * MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE</pre>

	<p>AUTHOR BE LIABLE FOR</p> <ul style="list-style-type: none"> * ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES * WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN * ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF * OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE. <p>*/</p>
fstools	<p>/*</p> <ul style="list-style-type: none"> * Copyright (C) 2014 John Crispin <blogic@openwrt.org> * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU Lesser General Public License version 2.1 * as published by the Free Software Foundation * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU General Public License for more details. <p>*/</p>
iputils	<p>/*</p> <ul style="list-style-type: none"> * Copyright (c) 1989 The Regents of the University of California. * All rights reserved. * * This code is derived from software contributed to Berkeley by * Mike Muuss. * * Redistribution and use in source and binary forms, with or without * modification, are permitted provided that the following conditions * are met: * 1. Redistributions of source code must retain the above copyright * notice, this list of conditions and the following disclaimer. * 2. Redistributions in binary form must reproduce the above copyright * notice, this list of conditions and the following disclaimer in the * documentation and/or other materials provided with the distribution. * 3. All advertising materials mentioning features or use of this software * must display the following acknowledgement: * This product includes software developed by the University of * California, Berkeley and its contributors. * 4. Neither the name of the University nor the names of its contributors

```

*   may be used to endorse or promote products derived from this
software
*   without specific prior written permission.
*
* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND
CONTRIBUTORS ``AS IS" AND
* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT
NOT LIMITED TO, THE
* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS
FOR A PARTICULAR PURPOSE
* ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR
CONTRIBUTORS BE LIABLE
* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
EXEMPLARY, OR CONSEQUENTIAL
* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT
OF SUBSTITUTE GOODS
* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR
BUSINESS INTERRUPTION)
* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
WHETHER IN CONTRACT, STRICT
* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR
OTHERWISE) ARISING IN ANY WAY
* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF
THE POSSIBILITY OF
* SUCH DAMAGE.
*/
/*
*
*   Modified for AF_INET6 by Pedro Roque
*
*   <roque@di.fc.ul.pt>
*
*   Original copyright notice included bellow
*/

/*
* Copyright (c) 1989 The Regents of the University of California.
* All rights reserved.
*
* This code is derived from software contributed to Berkeley by
* Mike Muuss.
*
* Redistribution and use in source and binary forms, with or without
* modification, are permitted provided that the following conditions
* are met:
* 1. Redistributions of source code must retain the above copyright

```

- * notice, this list of conditions and the following disclaimer.
- * 2. Redistributions in binary form must reproduce the above copyright
- * notice, this list of conditions and the following disclaimer in the
- * documentation and/or other materials provided with the distribution.
- * 3. All advertising materials mentioning features or use of this software
- * must display the following acknowledgement:
- * This product includes software developed by the University of
- * California, Berkeley and its contributors.
- * 4. Neither the name of the University nor the names of its contributors
- * may be used to endorse or promote products derived from this
- software
- * without specific prior written permission.
- *
- * THIS SOFTWARE IS PROVIDED BY THE REGENTS AND
- CONTRIBUTORS ``AS IS" AND
- * ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT
- NOT LIMITED TO, THE
- * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS
- FOR A PARTICULAR PURPOSE
- * ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR
- CONTRIBUTORS BE LIABLE
- * FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
- EXEMPLARY, OR CONSEQUENTIAL
- * DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT
- OF SUBSTITUTE GOODS
- * OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR
- BUSINESS INTERRUPTION)
- * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
- WHETHER IN CONTRACT, STRICT
- * LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR
- OTHERWISE) ARISING IN ANY WAY
- * OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF
- THE POSSIBILITY OF
- * SUCH DAMAGE.
- */

jsonfilter

```
/*
 * Copyright (C) 2013-2014 Jo-Philipp Wich <jow@openwrt.org>
 *
 * Permission to use, copy, modify, and/or distribute this software for
 * any
 * purpose with or without fee is hereby granted, provided that the
 * above
 * copyright notice and this permission notice appear in all copies.
 *
 * THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR
 * DISCLAIMS ALL WARRANTIES
```

* WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF
 * MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR
 * ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES
 * WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN
 * ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF
 * OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.
 */

klish

Overview

This package contains code which is copyrighted to multiple sources.

=====
 =====

3Com Corporation

The initial public release of this software was developed by Graeme McKerrell
 whilst in the employment of 3Com Europe Ltd.

Copyright (c) 2005, 3Com Corporation
 All rights reserved.

Redistribution and use in source and binary forms, with or without
 modification,
 are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright
 notice,
 this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright
 notice,
 this list of conditions and the following disclaimer in the
 documentation
 and/or other materials provided with the distribution.
- * Neither the name of 3Com Corporation nor the names of its
 contributors may
 be used to endorse or promote products derived from this software
 without
 specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS

AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

Newport Networks Ltd.
The 0.6-0.7 releases of this software was developed by Graeme McKerrell whilst in the employment of Newport Networks Ltd.
As well as enhancing the existing code the new modules were developed.

Copyright (c) 2005,2006, Newport Networks Ltd
All rights reserved.

Redistribution and use in source and binary forms, with or without modification,
are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice,
this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice,
this list of conditions and the following disclaimer in the documentation
and/or other materials provided with the distribution.
- * Neither the name of Newport Networks Ltd nor the names of its contributors may

be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

Serj Kalichev
The klish is a fork of original clish.

Copyright (c) 2010 Serj Kalichev.
All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

librpc

/*

* Sun RPC is a product of Sun Microsystems, Inc. and is provided for
* unrestricted use provided that this legend is included on all tape
* media and as a part of the software program in whole or part. Users
* may copy or modify Sun RPC without charge, but are not authorized
* to license or distribute it to anyone else except as part of a product or
* program developed by the user.

*

* SUN RPC IS PROVIDED AS IS WITH NO WARRANTIES OF ANY
KIND INCLUDING THE
* WARRANTIES OF DESIGN, MERCHANTABILITY AND FITNESS
FOR A PARTICULAR
* PURPOSE, OR ARISING FROM A COURSE OF DEALING, USAGE
OR TRADE PRACTICE.

*

* Sun RPC is provided with no support and without any obligation on
the
* part of Sun Microsystems, Inc. to assist in its use, correction,
* modification or enhancement.

*

	<p>* SUN MICROSYSTEMS, INC. SHALL HAVE NO LIABILITY WITH RESPECT TO THE</p> <p>* INFRINGEMENT OF COPYRIGHTS, TRADE SECRETS OR ANY PATENTS BY SUN RPC</p> <p>* OR ANY PART THEREOF.</p> <p>*</p> <p>* In no event will Sun Microsystems, Inc. be liable for any lost revenue</p> <p>* or profits or other special, indirect and consequential damages, even if</p> <p>* Sun has been advised of the possibility of such damages.</p> <p>*</p> <p>* Sun Microsystems, Inc.</p> <p>* 2550 Garcia Avenue</p> <p>* Mountain View, California 94043</p> <p>*/</p> <p>/*</p> <p>* Copyright (C) 1984, Sun Microsystems, Inc.</p> <p>*/</p>
libubox	<p>/*</p> <p>* Copyright (C) 2010-2012 Felix Fietkau <nbd@openwrt.org></p> <p>*</p> <p>* Permission to use, copy, modify, and/or distribute this software for any</p> <p>* purpose with or without fee is hereby granted, provided that the above</p> <p>* copyright notice and this permission notice appear in all copies.</p> <p>*</p> <p>* THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES</p> <p>* WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF</p> <p>* MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR</p> <p>* ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES</p> <p>* WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN</p> <p>* ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF</p> <p>* OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.</p> <p>*/</p>
lua	<p>Lua License</p> <p>-----</p>

Lua is licensed under the terms of the MIT license reproduced below.
This means that Lua is free software and can be used for both
academic
and commercial purposes at absolutely no cost.

For details and rationale, see <http://www.lua.org/license.html> .

=====
=====

Copyright (C) 1994-2012 Lua.org, PUC-Rio.

Permission is hereby granted, free of charge, to any person obtaining a
copy
of this software and associated documentation files (the "Software"), to
deal
in the Software without restriction, including without limitation the rights
to use, copy, modify, merge, publish, distribute, sublicense, and/or sell
copies of the Software, and to permit persons to whom the Software is
furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included
in
all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF
ANY KIND, EXPRESS OR
IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF
MERCHANTABILITY,
FITNESS FOR A PARTICULAR PURPOSE AND
NONINFRINGEMENT. IN NO EVENT SHALL THE
AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM,
DAMAGES OR OTHER
LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR
OTHERWISE, ARISING FROM,
OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE
OR OTHER DEALINGS IN
THE SOFTWARE.

=====
=====

(end of COPYRIGHT)

LuaSrcDiet

LuaSrcDiet License

LuaSrcDiet is licensed under the terms of the MIT license reproduced below. This means that LuaSrcDiet is free software and can be used for both academic and commercial purposes at absolutely no cost.

Think of LuaSrcDiet as a compiler or a text filter; whatever that is processed by LuaSrcDiet is not affected by its license. It does not add anything new into your source code; it only transforms code that already exist.

Hence, there is no need to tag this license onto Lua programs that are only processed. Given the liberal terms of this kind of license, the primary purpose is just to claim authorship of LuaSrcDiet.

Parts of LuaSrcDiet is based on Lua 5 code. See the file
COPYRIGHT_Lua51
(Lua 5.1.4) for Lua 5's license.

=====
=====

Copyright (C) 2005-2008,2011 Kein-Hong Man <keinhong@gmail.com>
Lua 5.1.4 Copyright (C) 1994-2008 Lua.org, PUC-Rio.

Permission is hereby granted, free of charge, to any person obtaining a copy
of this software and associated documentation files (the "Software"), to deal
in the Software without restriction, including without limitation the rights
to use, copy, modify, merge, publish, distribute, sublicense, and/or sell
copies of the Software, and to permit persons to whom the Software is
furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included
in
all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF
ANY KIND, EXPRESS OR
IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF
MERCHANTABILITY,
FITNESS FOR A PARTICULAR PURPOSE AND
NONINFRINGEMENT. IN NO EVENT SHALL THE
AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM,
DAMAGES OR OTHER
LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR

OTHERWISE, ARISING FROM,
OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE
OR OTHER DEALINGS IN
THE SOFTWARE.

=====
=====

(end of COPYRIGHT)

lzma

LZMA SDK 4.65

LZMA SDK provides the documentation, samples, header files,
libraries,
and tools you need to develop applications that use LZMA
compression.

LZMA is default and general compression method of 7z format
in 7-Zip compression program (www.7-zip.org). LZMA provides high
compression ratio and very fast decompression.

LZMA is an improved version of famous LZ77 compression algorithm.
It was improved in way of maximum increasing of compression ratio,
keeping high decompression speed and low memory requirements for
decompressing.

LICENSE

LZMA SDK is written and placed in the public domain by Igor Pavlov.

LZMA SDK Contents

LZMA SDK includes:

- ANSI-C/C++/C#/Java source code for LZMA compressing and
decompressing
- Compiled file->file LZMA compressing/decompressing program for
Windows system

nat46	<pre> * Copyright (c) 2013-2014 Andrew Yourtchenko <ayourtch@gmail.com> * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU General Public License version 2 * as published by the Free Software Foundation * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU General Public License for more details. </pre>
netifd	<pre> /* * netifd - network interface daemon * Copyright (C) 2012 Felix Fietkau <nbd@openwrt.org> * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU General Public License version 2 * as published by the Free Software Foundation * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU General Public License for more details. */ </pre>
procd	<pre> /* * Copyright (C) 2013 Felix Fietkau <nbd@openwrt.org> * Copyright (C) 2013 John Crispin <blogic@openwrt.org> * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU Lesser General Public License version 2.1 * as published by the Free Software Foundation * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU General Public License for more details. */ </pre>

rpcd

```
/*
 * rpcd - UBUS RPC server
 *
 * Copyright (C) 2013 Felix Fietkau <nbd@openwrt.org>
 * Copyright (C) 2013-2014 Jo-Philipp Wich <jow@openwrt.org>
 *
 * Permission to use, copy, modify, and/or distribute this software for
any
 * purpose with or without fee is hereby granted, provided that the
above
 * copyright notice and this permission notice appear in all copies.
 *
 * THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR
DISCLAIMS ALL WARRANTIES
 * WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED
WARRANTIES OF
 * MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE
AUTHOR BE LIABLE FOR
 * ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL
DAMAGES OR ANY DAMAGES
 * WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR
PROFITS, WHETHER IN AN
 * ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS
ACTION, ARISING OUT OF
 * OR IN CONNECTION WITH THE USE OR PERFORMANCE OF
THIS SOFTWARE.
 */
```

ubox

```
/*
 * Copyright (C) 2013 Felix Fietkau <nbd@openwrt.org>
 * Copyright (C) 2013 John Crispin <blogic@openwrt.org>
 *
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU Lesser General Public License version
2.1
 * as published by the Free Software Foundation
 *
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied warranty
of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.
See the
 * GNU General Public License for more details.
 */
```

ubus	<pre> /* * Copyright (C) 2011-2014 Felix Fietkau <nbd@openwrt.org> * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU Lesser General Public License version 2.1 * as published by the Free Software Foundation * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU General Public License for more details. */ </pre>
uci	<pre> /* * libuci - Library for the Unified Configuration Interface * Copyright (C) 2008 Felix Fietkau <nbd@openwrt.org> * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU Lesser General Public License version 2.1 * as published by the Free Software Foundation * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU Lesser General Public License for more details. */ </pre>
uClibc++	<pre> /* Copyright (C) 2004 Garrett A. Kajmowicz This file is part of the uClibc++ Library. This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version. This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details. </pre>

	<p>You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA</p> <p>*/</p>
uhttpd	<p>/*</p> <p>* uhttpd - Tiny single-threaded httpd</p> <p>*</p> <p>* Copyright (C) 2010-2013 Jo-Philipp Wich <xm@subsignal.org></p> <p>* Copyright (C) 2013 Felix Fietkau <nbd@openwrt.org></p> <p>*</p> <p>* Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.</p> <p>*</p> <p>* THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.</p> <p>*/</p>
usign	<p>/*</p> <p>* usign - tiny signify replacement</p> <p>*</p> <p>* Copyright (C) 2015 Felix Fietkau <nbd@openwrt.org></p> <p>*</p> <p>* Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.</p>

	<ul style="list-style-type: none"> * <ul style="list-style-type: none"> * THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES * WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF * MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR * ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES * WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN * ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF * OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE. */
attr	<pre>/* * Copyright (c) 2001-2003,2005 Silicon Graphics, Inc. * All Rights Reserved. * * This program is free software: you can redistribute it and/or modify it * under the terms of the GNU Lesser General Public License as published * by the Free Software Foundation, either version 2.1 of the License, or * (at your option) any later version. * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU Lesser General Public License for more details. * * You should have received a copy of the GNU Lesser General Public License * along with this program. If not, see <http://www.gnu.org/licenses/>. */</pre>
bc	<pre>/* A Bison parser, made by GNU Bison 2.1. */ /* Skeleton parser for Yacc-like parsing with Bison, Copyright (C) 1984, 1989, 1990, 2000, 2001, 2002, 2003, 2004, 2005 Free Software Foundation, Inc. This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by</pre>

	<p>the Free Software Foundation; either version 2, or (at your option) any later version.</p> <p>This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.</p> <p>You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA. */</p> <p>/* As a special exception, when this file is copied by Bison into a Bison output file, you may use that output file without restriction. This special exception was added by the Free Software Foundation in version 1.24 of Bison. */</p> <p>/* Written by Richard Stallman by simplifying the original so called ``semantic" parser. */</p> <p>/* All symbols defined below should begin with yy or YY, to avoid infringing on user name space. This should be done even for local variables, as they might otherwise be expanded by user macros. There are some unavoidable exceptions within include files to define necessary library symbols; they are noted "INFRINGES ON USER NAME SPACE" below. */</p>
bridge-utils	<p>/*</p> <p>* Copyright (C) 2000 Lennert Buytenhek</p> <p>*</p> <p>* This program is free software; you can redistribute it and/or</p> <p>* modify it under the terms of the GNU General Public License as</p> <p>* published by the Free Software Foundation; either version 2 of the</p> <p>* License, or (at your option) any later version.</p> <p>*</p> <p>* This program is distributed in the hope that it will be useful, but</p> <p>* WITHOUT ANY WARRANTY; without even the implied warranty of</p> <p>* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.</p> <p>See the GNU</p> <p>* General Public License for more details.</p> <p>*</p> <p>* You should have received a copy of the GNU General Public License</p> <p>* along with this program; if not, write to the Free Software</p>

	<p>* Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA. */</p>
busybox	<p>BusyBox is distributed under version 2 of the General Public License (included in its entirety, below). Version 2 is the only version of this license which this version of BusyBox (or modified versions derived from this one) may be distributed under.</p> <hr/> <p style="text-align: center;">GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
bzip2	<p>This program, "bzip2", the associated library "libbzip2", and all documentation, are copyright (C) 1996-2010 Julian R Seward. All rights reserved.</p> <p>Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:</p> <ol style="list-style-type: none"> 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required. 3. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software. 4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission. <p>THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A</p>

	<p>PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.</p> <p>Julian Seward, jseward@bzip.org bzip2/libbzip2 version 1.0.6 of 6 September 2010</p>
conntrack-tools	<pre>/* * (C) 2006-2012 by Pablo Neira Ayuso <pablo@netfilter.org> * (C) 2011-2012 by Vyatta Inc <http://www.vyatta.com> * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU General Public License as published by * the Free Software Foundation; either version 2 of the License, or * (at your option) any later version. * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty * of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. * See the * GNU General Public License for more details. * * You should have received a copy of the GNU General Public License * along with this program; if not, write to the Free Software * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA. */</pre>
curl	<p>COPYRIGHT AND PERMISSION NOTICE</p> <p>Copyright (c) 1996 - 2015, Daniel Stenberg, <daniel@haxx.se>.</p> <p>All rights reserved.</p>

	<p>Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.</p> <p>THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.</p> <p>Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.</p>
device-agent	<pre> /* ===== ===== Name : common.c Author : Subi S S Version : Copyright : Copyright (C) 2013 Cambium Networks, Ltd. All Rights Reserved CAMBIUM NETWORKS CONFIDENTIAL PROPRIETARY Description : Functions which are useful for all platforms. ===== ===== */ </pre>
dnsmasq	<pre> /* dnsmasq is Copyright (c) 2000-2015 Simon Kelley This program is free software; you can redistribute it and/or modify </pre>

	<p>it under the terms of the GNU General Public License as published by the Free Software Foundation; version 2 dated June, 1991, or (at your option) version 3 dated 29 June, 2007.</p> <p>This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.</p> <p>You should have received a copy of the GNU General Public License along with this program. If not, see <http://www.gnu.org/licenses/>.</p> <p>*/</p>
dropbear	<p>Dropbear contains a number of components from different sources, hence there are a few licenses and authors involved. All licenses are fairly non-restrictive.</p> <p>The majority of code is written by Matt Johnston, under the license below.</p> <p>Portions of the client-mode work are (c) 2004 Mihnea Stoenescu, under the same license:</p> <p>Copyright (c) 2002-2014 Matt Johnston Portions copyright (c) 2004 Mihnea Stoenescu All rights reserved.</p> <p>Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:</p> <p>The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.</p> <p>THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR</p>

IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

=====

LibTomCrypt and LibTomMath are written by Tom St Denis, and are Public Domain.

=====

sshpty.c is taken from OpenSSH 3.5p1,
Copyright (c) 1995 Tatu Ylonen <ylo@cs.hut.fi>, Espoo, Finland
All rights reserved

"As far as I am concerned, the code I have written for this software can be used freely for any purpose. Any derived versions of this software must be clearly marked as such, and if the derived work is incompatible with the protocol description in the RFC file, it must be called by a name other than "ssh" or "Secure Shell". "

=====

=====

loginrec.c
loginrec.h
atomicio.h
atomicio.c
and strlcat() (included in util.c) are from OpenSSH 3.6.1p2, and are licensed under the 2 point BSD license.

loginrec is written primarily by Andre Lucas, atomicio.c by Theo de Raadt.

strlcat() is (c) Todd C. Miller

=====

Import code in keyimport.c is modified from PuTTY's import.c, licensed as follows:

PuTTY is copyright 1997-2003 Simon Tatham.

Portions copyright Robert de Bath, Joris van Rantwijk, Delian Delchev, Andreas Schultz, Jeroen Massar, Wez Furlong, Nicolas Barry, Justin Bradford, and CORE SDI S.A.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

=====

curve25519-donna:

/* Copyright 2008, Google Inc.

* All rights reserved.

*

* Redistribution and use in source and binary forms, with or without
* modification, are permitted provided that the following conditions are
* met:

- *
 - * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
 - * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
 - * Neither the name of Google Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
- *

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
- *

curve25519-donna: Curve25519 elliptic curve, public key function
- *

<http://code.google.com/p/curve25519-donna/>
- *

Adam Langley <agl@imperialviolet.org>
- *

Derived from public domain C code by Daniel J. Bernstein <djb@cr.yp.to>
- *

More information about curve25519 can be found here <http://cr.yp.to/ecdh.html>

	<pre> * * djb's sample implementation of curve25519 is written in a special assembly * language called qasm and uses the floating point registers. * * This is, almost, a clean room reimplementation from the curve25519 paper. It * uses many of the tricks described therein. Only the crecip function is taken * from the sample implementation. */ </pre>
ebtables	<pre> /* * ebtables.c, v2.0 July 2002 * * Author: Bart De Schuymer * * This code was stongly inspired on the iptables code which is * Copyright (C) 1999 Paul 'Rusty' Russell & Michael J. Neuling * * This program is free software; you can redistribute it and/or * modify it under the terms of the GNU General Public License as * published by the Free Software Foundation; either version 2 of the * License, or (at your option) any later version. * * This program is distributed in the hope that it will be useful, but * WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU * General Public License for more details. * * You should have received a copy of the GNU General Public License * along with this program; if not, write to the Free Software * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA. */ </pre>
ethtool	<p>ethtool is available under the terms of the GNU Public License version 2.</p> <p>See COPYING for details.</p>
eventlog	<p>Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:</p> <ol style="list-style-type: none"> 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.
3. Neither the name of BalaBit nor the names of its contributors
may be used to endorse or promote products derived from this
software
without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY BALABIT AND
CONTRIBUTORS ``AS IS" AND
ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
LIMITED TO, THE
IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS
FOR A PARTICULAR PURPOSE
ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR
CONTRIBUTORS BE LIABLE
FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
EXEMPLARY, OR CONSEQUENTIAL
DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT
OF SUBSTITUTE GOODS
OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS
INTERRUPTION)
HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
WHETHER IN CONTRACT, STRICT
LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
ARISING IN ANY WAY
OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF
THE POSSIBILITY OF
SUCH DAMAGE.

expat

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd
and Clark Cooper
Copyright (c) 2001, 2002, 2003, 2004, 2005, 2006 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining
a copy of this software and associated documentation files (the
"Software"), to deal in the Software without restriction, including
without limitation the rights to use, copy, modify, merge, publish,
distribute, sublicense, and/or sell copies of the Software, and to
permit persons to whom the Software is furnished to do so, subject to
the following conditions:

The above copyright notice and this permission notice shall be included
in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF
ANY KIND,
EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
WARRANTIES OF

	<p>MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.</p> <p>IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.</p>
file	<p>\$File: COPYING,v 1.1 2008/02/05 19:08:11 christos Exp \$</p> <p>Copyright (c) Ian F. Darwin 1986, 1987, 1989, 1990, 1991, 1992, 1994, 1995.</p> <p>Software written by Ian F. Darwin and others; maintained 1994- Christos Zoulas.</p> <p>This software is not subject to any export provision of the United States Department of Commerce, and may be exported to any country or planet.</p> <p>Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:</p> <ol style="list-style-type: none"> 1. Redistributions of source code must retain the above copyright notice immediately at the beginning of the file, without modification, this list of conditions, and the following disclaimer. 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. <p>THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT</p>

	<p>LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.</p>
glib/glib2	<p>GNU LIBRARY GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA</p> <p>Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p> <p>[This is the first released version of the library GPL. It is numbered 2 because it goes with version 2 of the ordinary GPL.]</p>
haproxy	<p>HAPROXY's license - 2006/06/15</p> <p>Historically, haproxy has been covered by GPL version 2. However, an issue appeared in GPL which will prevent external non-GPL code from being built using the headers provided with haproxy. My long-term goal is to build a core system able to load external modules to support specific application protocols.</p> <p>Since some protocols are found in rare environments (finance, industry, ...), some of them might be accessible only after signing an NDA. Enforcing GPL on such modules would only prevent them from ever being implemented, while not providing anything useful to ordinary users.</p> <p>For this reason, I <i>*want*</i> to be able to support binary only external modules when needed, with a GPL core and GPL modules for standard protocols, so that people fixing bugs don't keep them secretly to try to stay over competition.</p> <p>The solution was then to apply the LGPL license to the exportable include files, while keeping the GPL for all the rest. This way, it still is</p>

mandatory
to redistribute modified code under customer request, but at the same
time, it
is expressly permitted to write, compile, link and load non-GPL code
using the
LGPL header files and not to distribute them if it causes a legal
problem.

Of course, users are strongly encouraged to continue the work under
GPL as long
as possible, since this license has allowed useful enhancements,
contributions
and fixes from talented people around the world.

Due to the incompatibility between the GPL and the OpenSSL licence,
you must
apply the GPL/LGPL licence with the following exception:
This program is released under the GPL with the additional exemption
that
compiling, linking, and/or using OpenSSL is allowed.

The text of the licenses lies in the "doc" directory. All the files provided
in
this package are covered by the GPL unless expressly stated otherwise
in them.
Every patch or contribution provided by external people will by default
comply
with the license of the files it affects, or be rejected.

Willy Tarreau - w@1wt.eu

i2c-tools

GNU GENERAL PUBLIC LICENSE Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

/*

i2cset.c - A user-space program to write an I2C register.
Copyright (C) 2001-2003 Frodo Looijaard <frodo@dds.nl>, and
Mark D. Studebaker <mdsxyz123@yahoo.com>
Copyright (C) 2004-2012 Jean Delvare <jdelvare@suse.de>

This program is free software; you can redistribute it and/or modify
it under the terms of the GNU General Public License as published
by

	<p>the Free Software Foundation; either version 2 of the License, or (at your option) any later version.</p> <p>This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.</p> <p>You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.</p> <p>*/</p>
iperf	<p>Copyright (c) 1999-2007, The Board of Trustees of the University of Illinois All Rights Reserved.</p> <p>Iperf performance test Mark Gates Ajay Tirumala Jim Ferguson Jon Dugan Feng Qin Kevin Gibbs John Estabrook National Laboratory for Applied Network Research National Center for Supercomputing Applications University of Illinois at Urbana-Champaign http://www.ncsa.uiuc.edu</p> <p>Permission is hereby granted, free of charge, to any person obtaining a copy of this software (Iperf) and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:</p> <p>Redistributions of source code must retain the above copyright notice,</p>

this
list of conditions and the following disclaimers.

Redistributions in binary form must reproduce the above copyright
notice, this
list of conditions and the following disclaimers in the documentation
and/or
other materials provided with the distribution.

Neither the names of the University of Illinois, NCSA, nor the names of
its
contributors may be used to endorse or promote products derived from
this
Software without specific prior written permission. THE SOFTWARE IS
PROVIDED
"AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR
IMPLIED, INCLUDING BUT NOT
LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS
FOR A PARTICULAR PURPOSE
AND NONINFRINGEMENT. IN NO EVENT SHALL THE
CONTRIBUTORS OR COPYRIGHT HOLDERS BE
LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY,
WHETHER IN AN ACTION OF
CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR
IN CONNECTION WITH THE
SOFTWARE OR THE USE OR OTHER DEALINGS IN THE
SOFTWARE.

iproute2

GNU GENERAL PUBLIC LICENSE
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
51 Franklin St, Fifth Floor, Boston, MA 02110-1301

USA

Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

/*

* ip.c "ip" utility frontend.

*

* This program is free software; you can redistribute it and/or
* modify it under the terms of the GNU General Public License
* as published by the Free Software Foundation; either version
* 2 of the License, or (at your option) any later version.
*

* Authors: Alexey Kuznetsov, <kuznet@ms2.inr.ac.ru>

*/

iptables

```
/*
 * Author: Paul.Russell@rustcorp.com.au and
 * mneuling@radlogic.com.au
 *
 * (C) 2000-2002 by the netfilter coreteam <coreteam@netfilter.org>:
 *     Paul 'Rusty' Russell <rusty@rustcorp.com.au>
 *     Marc Boucher <marc+nf@mbsi.ca>
 *     James Morris <jmorris@intercode.com.au>
 *     Harald Welte <laforge@gnumonks.org>
 *     Jozsef Kadlecsek <kadlec@blackhole.kfki.hu>
 *
 * Based on the ipchains code by Paul Russell and Michael Neuling
 *
 * iptables -- IP firewall administration for kernels with
 * firewall table (aimed for the 2.3 kernels)
 *
 * See the accompanying manual page iptables(8) for information
 * about proper usage of this program.
 *
 * This program is free software; you can redistribute it and/or modify
 * it under the terms of the GNU General Public License as
 * published by
 * the Free Software Foundation; either version 2 of the License, or
 * (at your option) any later version.
 *
 * This program is distributed in the hope that it will be useful,
 * but WITHOUT ANY WARRANTY; without even the implied
 * warranty of
 * MERCHANTABILITY or FITNESS FOR A PARTICULAR
 * PURPOSE. See the
 * GNU General Public License for more details.
 *
 * You should have received a copy of the GNU General Public
 * License
 * along with this program; if not, write to the Free Software
 * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.
 */
```

iw

Copyright (c) 2007, 2008 Johannes Berg
Copyright (c) 2007 Andy Lutomirski
Copyright (c) 2007 Mike Kershaw
Copyright (c) 2008-2009 Luis R. Rodriguez

Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

	<p>THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.</p>
jansson	<p>Copyright (c) 2009-2014 Petri Lehtinen <petri@digip.org></p> <p>Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:</p> <p>The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.</p> <p>THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.</p>
json-c	<p>Copyright (c) 2009-2012 Eric Haszlakiewicz</p> <p>Permission is hereby granted, free of charge, to any person obtaining a</p>

copy of this software and associated documentation files (the "Software"),
to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Copyright (c) 2004, 2005 Metaparadigm Pte Ltd

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"),
to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM,

	<p>DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.</p>
libelf	<pre> /* * elf_repl.h - public header file for systems that lack it. * Copyright (C) 1995 - 2006 Michael Riepe * * This library is free software; you can redistribute it and/or * modify it under the terms of the GNU Library General Public * License as published by the Free Software Foundation; either * version 2 of the License, or (at your option) any later version. * * This library is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU * Library General Public License for more details. * * You should have received a copy of the GNU Library General Public * License along with this library; if not, write to the Free Software * Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110- 1301, USA */ </pre>
libevent	<p>Libevent is available for use under the following license, commonly known as the 3-clause (or "modified") BSD license:</p> <pre> ===== Copyright (c) 2000-2007 Niels Provos <provos@citi.umich.edu> Copyright (c) 2007-2012 Niels Provos and Nick Mathewson Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met: 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. 3. The name of the author may not be used to endorse or promote products </pre>

derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====

Portions of Libevent are based on works by others, also made available by them under the three-clause BSD license above. The copyright notices are available in the corresponding source files; the license is as above. Here's a list:

log.c:

Copyright (c) 2000 Dug Song <dugsong@monkey.org>
Copyright (c) 1993 The Regents of the University of California.

strlcpy.c:

Copyright (c) 1998 Todd C. Miller <Todd.Miller@courtesan.com>

win32select.c:

Copyright (c) 2003 Michael A. Davis <mike@datanerds.net>

evport.c:

Copyright (c) 2007 Sun Microsystems

ht-internal.h:

Copyright (c) 2002 Christopher Clark

minheap-internal.h:

Copyright (c) 2006 Maxim Yegorushkin

<maxim.yegorushkin@gmail.com>

=====

The arc4module is available under the following, sometimes called the "OpenBSD" license:

Copyright (c) 1996, David Mazieres <dm@uun.org>

Copyright (c) 2008, Damien Miller <djm@openbsd.org>

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR
DISCLAIMS ALL WARRANTIES

WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED
WARRANTIES OF

MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE
AUTHOR BE LIABLE FOR

ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL
DAMAGES OR ANY DAMAGES

WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR
PROFITS, WHETHER IN AN

ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS
ACTION, ARISING OUT OF

OR IN CONNECTION WITH THE USE OR PERFORMANCE OF
THIS SOFTWARE.

libffi

libffi - Copyright (c) 1996-2012 Anthony Green, Red Hat, Inc and
others.

See source files for details.

Permission is hereby granted, free of charge, to any person obtaining
a copy of this software and associated documentation files (the
"Software"), to deal in the Software without restriction, including
without limitation the rights to use, copy, modify, merge, publish,
distribute, sublicense, and/or sell copies of the Software, and to
permit persons to whom the Software is furnished to do so, subject to
the following conditions:

The above copyright notice and this permission notice shall be

included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED ``AS IS'', WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

/* -----
ffi.c - Copyright (c) 1996, 1998, 1999, 2001, 2007, 2008 Red Hat, Inc.
Copyright (c) 2002 Ranjit Mathew
Copyright (c) 2002 Bo Thorsen
Copyright (c) 2002 Roger Sayle
Copyright (C) 2008, 2010 Free Software Foundation, Inc.

x86 Foreign Function Interface

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the ``Software''), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED ``AS IS'', WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT

	<p>HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.</p>
libiwinfo	<pre> * * iwinfo - Wireless Information Library - Broadcom wl.o Backend * * Copyright (C) 2009 Jo-Philipp Wich <xm@subsignal.org> * * The iwinfo library is free software: you can redistribute it and/or * modify it under the terms of the GNU General Public License version 2 * as published by the Free Software Foundation. * * The iwinfo library is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. * See the GNU General Public License for more details. * * You should have received a copy of the GNU General Public License along * with the iwinfo library. If not, see http://www.gnu.org/licenses/. * * This code is based on the wlc.c utility published by OpenWrt.org . */ </pre>
libnetfilter_conntrack	<pre> /* * (C) 2005-2011 by Pablo Neira Ayuso <pablo@netfilter.org> * Harald Welte <laforge@netfilter.org> * * This program is free software; you can redistribute it and/or modify it * under the terms of the GNU General Public License as published by * the Free Software Foundation; either version 2 of the License, or * (at your option) any later version. */ </pre>
libnetfilter_cthelper	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 675 Mass Ave, Cambridge, MA 02139, USA</p>

	<p>Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
libnetfilter_cttimeout	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 675 Mass Ave, Cambridge, MA 02139, USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
libnetfilter_queue	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 675 Mass Ave, Cambridge, MA 02139, USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
libnfnetlink	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 675 Mass Ave, Cambridge, MA 02139, USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
libnl	<p>GNU LESSER GENERAL PUBLIC LICENSE Version 2.1, February 1999</p> <p>Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p> <p>[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]</p>
libpcap	<p>License: BSD</p> <p>Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:</p> <ol style="list-style-type: none"> 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. 2. Redistributions in binary form must reproduce the above copyright

	<p>notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.</p> <p>3. The names of the authors may not be used to endorse or promote products derived from this software without specific prior written permission.</p> <p>THIS SOFTWARE IS PROVIDED ``AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.</p>
libwebsockets	<pre>/* * libwebsockets - small server side websockets and web server * implementation * * Copyright (C) 2010-2014 Andy Green <andy@warmcat.com> * * This library is free software; you can redistribute it and/or * modify it under the terms of the GNU Lesser General Public * License as published by the Free Software Foundation: * version 2.1 of the License. * * This library is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty * of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. * See the GNU * Lesser General Public License for more details. * * You should have received a copy of the GNU Lesser General Public * License along with this library; if not, write to the Free Software * Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, * MA 02110-1301 USA */</pre>
libxml2	<p>Except where otherwise noted in the source code (e.g. the files hash.c, list.c and the trio files, which are covered by a similar licence but with different Copyright notices) all the files are:</p> <p>Copyright (C) 1998-2012 Daniel Veillard. All Rights Reserved.</p> <p>Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to</p>

	<p>deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:</p> <p>The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.</p> <p>THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.</p>
lighttpd	<p>Copyright (c) 2004, Jan Kneschke, incremental All rights reserved.</p> <p>Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:</p> <ul style="list-style-type: none"> - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. - Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. - Neither the name of the 'incremental' nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

	<p>THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.</p>
Linux-PAM	<p>Unless otherwise *explicitly* stated the following text describes the licensed conditions under which the contents of this Linux-PAM release may be distributed:</p> <p>-----</p> <p>Redistribution and use in source and binary forms of Linux-PAM, with or without modification, are permitted provided that the following conditions are met:</p> <ol style="list-style-type: none"> 1. Redistributions of source code must retain any existing copyright notice, and this entire permission notice in its entirety, including the disclaimer of warranties. 2. Redistributions in binary form must reproduce all prior and current copyright notices, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution. 3. The name of any author may not be used to endorse or promote products derived from this software without their specific prior written permission. <p>ALTERNATIVELY, this product may be distributed under the terms of the GNU General Public License, in which case the provisions of the GNU</p>

GPL are required INSTEAD OF the above restrictions. (This clause is necessary due to a potential conflict between the GNU GPL and the restrictions contained in a BSD-style copyright.)

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR(S) BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

lldpd

License

lldpd is distributed under the ISC license:

- > Permission to use, copy, modify, and/or distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.
- >
- > THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR

PROFITS, WHETHER IN AN
> ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS
ACTION, ARISING OUT OF
> OR IN CONNECTION WITH THE USE OR PERFORMANCE OF
THIS SOFTWARE.

Also, `lldpcli` will be linked to GNU Readline (which is GPL licensed)
if available. To avoid this, use `--without-readline` as a configure
option.

/*

* Copyright (c) 2008 Vincent Bernat <bernat@luffy.cx>

*

* Permission to use, copy, modify, and/or distribute this software for
any

* purpose with or without fee is hereby granted, provided that the
above

* copyright notice and this permission notice appear in all copies.

*

* THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR
DISCLAIMS ALL WARRANTIES

* WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED
WARRANTIES OF

* MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE
AUTHOR BE LIABLE FOR

* ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL
DAMAGES OR ANY DAMAGES

* WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR
PROFITS, WHETHER IN AN

* ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS
ACTION, ARISING OUT OF

* OR IN CONNECTION WITH THE USE OR PERFORMANCE OF
THIS SOFTWARE.

*/

lua-cjson

Copyright (c) 2010-2012 Mark Pulford <mark@kyne.com.au>

Permission is hereby granted, free of charge, to any person obtaining
a copy of this software and associated documentation files (the
"Software"), to deal in the Software without restriction, including
without limitation the rights to use, copy, modify, merge, publish,
distribute, sublicense, and/or sell copies of the Software, and to
permit persons to whom the Software is furnished to do so, subject to
the following conditions:

The above copyright notice and this permission notice shall be
included in all copies or substantial portions of the Software.

	<p>THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.</p>
mcproxy	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
minicom	<p>Minicom is Copyright (C) 1991,1992,1993,1994,1995,1996 Miquel van Smoorenburg.</p> <p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
miniupnpd	<p>MiniUPnPd Copyright (c) 2006-2015, Thomas BERNARD All rights reserved.</p> <p>Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:</p> <ul style="list-style-type: none"> * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. * Redistributions in binary form must reproduce the above copyright notice,

this list of conditions and the following disclaimer in the documentation
and/or other materials provided with the distribution.
* The name of the author may not be used to endorse or promote products
derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

mtd-utils	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
net-snmp	<p>Various copyrights apply to this package, listed in various separate parts below. Please make sure that you read all the parts.</p> <p>---- Part 1: CMU/UCD copyright notice: (BSD like) ----</p> <p>Copyright 1989, 1991, 1992 by Carnegie Mellon University</p>

Derivative Work - 1996, 1998-2000
Copyright 1996, 1998-2000 The Regents of the University of California

All Rights Reserved

Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA
DISCLAIM ALL
WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING
ALL IMPLIED
WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO
EVENT SHALL CMU OR
THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE
FOR ANY SPECIAL,
INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES
WHATSOEVER RESULTING
FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN
ACTION OF
CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION,
ARISING OUT OF OR IN
CONNECTION WITH THE USE OR PERFORMANCE OF THIS
SOFTWARE.

---- Part 2: Networks Associates Technology, Inc copyright notice (BSD)

Copyright (c) 2001-2003, Networks Associates Technology, Inc
All rights reserved.

Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions are
met:

- * Redistributions of source code must retain the above copyright
notice,
this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 3: Cambridge Broadband Ltd. copyright notice (BSD) ----

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice,
this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 4: Sun Microsystems, Inc. copyright notice (BSD) ----

Copyright © 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright

notice,
this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 5: Sparta, Inc copyright notice (BSD) ----

Copyright (c) 2003-2011, Sparta, Inc
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice,
this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 6: Cisco/BUPTNIC copyright notice (BSD) -----

Copyright (c) 2004, Cisco, Inc and Information Network Center of Beijing University of Posts and Telecommunications. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

---- Part 7: Fabasoft R&D Software GmbH & Co KG copyright notice (BSD) ----

Copyright (c) Fabasoft R&D Software GmbH & Co KG, 2003
oss@fabasoft.com
Author: Bernhard Penz <bernhard.penz@fabasoft.com>

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* The name of Fabasoft R&D Software GmbH & Co KG or any of its subsidiaries,
 brand or product names may not be used to endorse or promote products
 derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

odhcp6c	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA</p> <p>Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
odhcpd	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA</p> <p>Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>

LICENSE ISSUES

=====

The OpenSSL toolkit stays under a double license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit.

See below for the actual license texts. Actually both licenses are BSD-style

Open Source licenses. In case of any license issues related to OpenSSL

please contact openssl-core@openssl.org.

OpenSSL License

/*

=====

=====

* Copyright (c) 1998-2017 The OpenSSL Project. All rights reserved.

*

* Redistribution and use in source and binary forms, with or without
* modification, are permitted provided that the following conditions
* are met:

*

* 1. Redistributions of source code must retain the above copyright
* notice, this list of conditions and the following disclaimer.

*

* 2. Redistributions in binary form must reproduce the above copyright
* notice, this list of conditions and the following disclaimer in
* the documentation and/or other materials provided with the
* distribution.

*

* 3. All advertising materials mentioning features or use of this
* software must display the following acknowledgment:

* "This product includes software developed by the OpenSSL Project
* for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"

*

* 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be
used to

* endorse or promote products derived from this software without
* prior written permission. For written permission, please contact
* openssl-core@openssl.org.

*

* 5. Products derived from this software may not be called "OpenSSL"
* nor may "OpenSSL" appear in their names without prior written

```

*   permission of the OpenSSL Project.
*
* 6. Redistributions of any form whatsoever must retain the following
*   acknowledgment:
*   "This product includes software developed by the OpenSSL Project
*   for use in the OpenSSL Toolkit (http://www.openssl.org/)"
*
* THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS
IS" AND ANY
* EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT
LIMITED TO, THE
* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS
FOR A PARTICULAR
* PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE
OpenSSL PROJECT OR
* ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT,
INCIDENTAL,
* SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES
(INCLUDING, BUT
* NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR
SERVICES;
* LOSS OF USE, DATA, OR PROFITS; OR BUSINESS
INTERRUPTION)
* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
WHETHER IN CONTRACT,
* STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR
OTHERWISE)
* ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE,
EVEN IF ADVISED
* OF THE POSSIBILITY OF SUCH DAMAGE.
*
=====
=====
*
* This product includes cryptographic software written by Eric Young
* (eay@cryptsoft.com). This product includes software written by Tim
* Hudson (tjh@cryptsoft.com).
*
*/

Original SSLeay License
-----
/* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)
* All rights reserved.
*
* This package is an SSL implementation written

```

- * by Eric Young (eay@cryptsoft.com).
- * The implementation was written so as to conform with Netscapes SSL.
- *
- * This library is free for commercial and non-commercial use as long as
- * the following conditions are aheared to. The following conditions
- * apply to all code found in this distribution, be it the RC4, RSA,
- * lhash, DES, etc., code; not just the SSL code. The SSL
- documentation
- * included with this distribution is covered by the same copyright terms
- * except that the holder is Tim Hudson (tjh@cryptsoft.com).
- *
- * Copyright remains Eric Young's, and as such any Copyright notices in
- * the code are not to be removed.
- * If this package is used in a product, Eric Young should be given
- attribution
- * as the author of the parts of the library used.
- * This can be in the form of a textual message at program startup or
- * in documentation (online or textual) provided with the package.
- *
- * Redistribution and use in source and binary forms, with or without
- * modification, are permitted provided that the following conditions
- * are met:
- * 1. Redistributions of source code must retain the copyright
- * notice, this list of conditions and the following disclaimer.
- * 2. Redistributions in binary form must reproduce the above copyright
- * notice, this list of conditions and the following disclaimer in the
- * documentation and/or other materials provided with the distribution.
- * 3. All advertising materials mentioning features or use of this software
- * must display the following acknowledgement:
- * "This product includes cryptographic software written by
- * Eric Young (eay@cryptsoft.com)"
- * The word 'cryptographic' can be left out if the rouines from the
- library
- * being used are not cryptographic related :-).
- * 4. If you include any Windows specific code (or a derivative thereof)
- from
- * the apps directory (application code) you must include an
- acknowledgement:
- * "This product includes software written by Tim Hudson
- (tjh@cryptsoft.com)"
- *
- * THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS" AND
- * ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT
- NOT LIMITED TO, THE
- * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS

	<p>FOR A PARTICULAR PURPOSE</p> <ul style="list-style-type: none"> * ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE * FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL * DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS * OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT * LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY * OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF * SUCH DAMAGE. * * The licence and distribution terms for any publically available version or * derivative of this code cannot be changed. i.e. this code cannot simply be * copied and put under another distribution licence * [including the GNU Public Licence.] */
opkg	<p>GNU GENERAL PUBLIC LICENSE</p> <p>Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
pcre	<p>Release 8 of PCRE is distributed under the terms of the "BSD" licence, as specified below. The documentation for PCRE, supplied in the "doc" directory, is distributed under the same terms as the software itself.</p> <p>THE MAIN PCRE LIBRARY</p> <p>-----</p> <p>Written by: Philip Hazel Email local part: ph10 Email domain: cam.ac.uk University of Cambridge Computing Service, Cambridge, England. Copyright (c) 1997-2010 University of Cambridge All rights reserved</p>

	<p>THE C++ WRAPPER LIBRARY</p> <p>-----</p> <p>Written by: Google Inc. Copyright (c) 2007-2010 Google Inc All rights reserved</p>
pm-utils	<p>GNU GENERAL PUBLIC LICENSE</p> <p>Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p> <p>/* * suspend functions for machines with Mac-style pmu * * Copyright 2006 Red Hat, Inc. * * Based on work from: * Peter Jones <pjones@redhat.com> * * This program is free software; you can redistribute it and/or modify * it under the terms of version 2 of the GNU General Public License as * published by the Free Software Foundation. * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the * GNU General Public License for more details. * * You should have received a copy of the GNU General Public License * along with this program; if not, write to the Free Software * Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111- 1307 USA * */</p>
ppp	
rng-tools	<p>GNU GENERAL PUBLIC LICENSE</p> <p>Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Suite 500, Boston, MA 02110-1335 USA</p>

```

Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.
* rngd.c -- Random Number Generator daemon
*
* rngd reads data from a hardware random number generator, verifies
it
* looks like random data, and adds it to /dev/random's entropy store.
*
* In theory, this should allow you to read very quickly from
* /dev/random; rngd also adds bytes to the entropy store periodically
* when it's full, which makes predicting the entropy store's contents
* harder.
*
* Copyright (C) 2001 Philipp Rumpf
*
* This program is free software; you can redistribute it and/or modify
* it under the terms of the GNU General Public License as published by
* the Free Software Foundation; either version 2 of the License, or
* (at your option) any later version.
*
* This program is distributed in the hope that it will be useful,
* but WITHOUT ANY WARRANTY; without even the implied warranty
of
* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.
See the
* GNU General Public License for more details.
*
* You should have received a copy of the GNU General Public License
* along with this program; if not, write to the Free Software
* Foundation, Inc., 51 Franklin Street, Suite 500, Boston, MA 02110-
1335 USA
*/

```

rp-pppoe

GNU GENERAL PUBLIC LICENSE Version 2, June 1991

```

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
        675 Mass Ave, Cambridge, MA 02139, USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.
/*****
*
* pppoe.c
*
* Implementation of user-space PPPoE redirector for Linux.
*
* Copyright (C) 2000-2012 by Roaring Penguin Software Inc.

```

	<p>* * This program may be distributed according to the terms of the GNU * General Public License, version 2 or (at your option) any later version. * * LIC: GPL</p>
rstp	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. /***** Copyright (c) 2006 EMC Corporation.</p> <p>This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.</p> <p>This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.</p> <p>You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.</p> <p>The full GNU General Public License is included in this distribution in the file called LICENSE.</p> <p>Authors: Srinivas Aji <Aji_Srinivas@emc.com></p>
squashfs	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307</p>

	<p>USA</p> <p>Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p> <p>* Squashfs</p> <p>*</p> <p>* Copyright (c) 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009</p> <p>* Phillip Lougher <phillip@lougher.demon.co.uk></p> <p>*</p> <p>* This program is free software; you can redistribute it and/or</p> <p>* modify it under the terms of the GNU General Public License</p> <p>* as published by the Free Software Foundation; either version 2,</p> <p>* or (at your option) any later version.</p> <p>*</p> <p>* This program is distributed in the hope that it will be useful,</p> <p>* but WITHOUT ANY WARRANTY; without even the implied warranty of</p> <p>* MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.</p> <p>See the</p> <p>* GNU General Public License for more details.</p> <p>*</p> <p>* You should have received a copy of the GNU General Public License</p> <p>* along with this program; if not, write to the Free Software</p> <p>* Foundation, 59 Temple Place - Suite 330, Boston, MA 02111-1307,</p> <p>USA.</p>
strace	<p>/*</p> <p>* Copyright (c) 1991, 1992 Paul Kranenburg <pk@cs.few.eur.nl></p> <p>* Copyright (c) 1993 Branko Lankester <branko@hacktic.nl></p> <p>* Copyright (c) 1993, 1994, 1995, 1996 Rick Sladkey</p> <p><jrs@world.std.com></p> <p>* Copyright (c) 1996-1999 Wichert Akkerman <wichert@cistron.nl></p> <p>* All rights reserved.</p> <p>*</p> <p>* Redistribution and use in source and binary forms, with or without</p> <p>* modification, are permitted provided that the following conditions</p> <p>* are met:</p> <p>* 1. Redistributions of source code must retain the above copyright</p> <p>* notice, this list of conditions and the following disclaimer.</p> <p>* 2. Redistributions in binary form must reproduce the above copyright</p> <p>* notice, this list of conditions and the following disclaimer in the</p> <p>* documentation and/or other materials provided with the distribution.</p> <p>* 3. The name of the author may not be used to endorse or promote</p> <p>products</p> <p>* derived from this software without specific prior written permission.</p> <p>*</p> <p>* THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND</p> <p>ANY EXPRESS OR</p>

	<p>* IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES</p> <p>* OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.</p> <p>* IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT,</p> <p>* INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT</p> <p>* NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,</p> <p>* DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY</p> <p>* THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT</p> <p>* (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF</p> <p>* THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.</p> <p>*/</p>
syslog-ng	<p>Copyright (c) 2002-2015 Balabit</p> <p>Copyright (c) 1996-2015 Balázs Scheidler</p> <p>syslog-ng is licensed under the combination of the GPL and LGPL licenses.</p> <p>The syslog-ng core contained in the following subdirectories is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version (please refer to the file LGPL.txt for more details):</p> <p>lib/ libtest/ syslog-ng/ modules/java-common/ modules/java/(native proxies src)/ modules/native/</p> <p>This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.</p> <p>This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.</p>

	<p>See the GNU Lesser General Public License for more details.</p> <p>You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA</p>
sysstat	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 675 Mass Ave, Cambridge, MA 02139, USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. * (C) 1998-2015 by Sebastien GODARD (sysstat <at> orange.fr) * ***** * This program is free software; you can redistribute it and/or modify it * * under the terms of the GNU General Public License as published by the * * Free Software Foundation; either version 2 of the License, or (at your * * option) any later version. * * This program is distributed in the hope that it will be useful, but * * WITHOUT ANY WARRANTY; without the implied warranty of MERCHANTABILITY * * or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License * * for more details. * * You should have received a copy of the GNU General Public License along * * with this program; if not, write to the Free Software Foundation, Inc., * * 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA * */* *****</p>
tcpdump	<p>License: BSD</p> <p>Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:</p> <ol style="list-style-type: none"> 1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The names of the authors may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

/*

* Copyright (c) 1988, 1989, 1990, 1991, 1992, 1993, 1994, 1995, 1996, 1997, 2000

* The Regents of the University of California. All rights reserved.

*

* Redistribution and use in source and binary forms, with or without
* modification, are permitted provided that: (1) source code
distributions

* retain the above copyright notice and this paragraph in its entirety, (2)

* distributions including binary code include the above copyright notice
and

* this paragraph in its entirety in the documentation or other materials

* provided with the distribution, and (3) all advertising materials
mentioning

* features or use of this software display the following
acknowledgement:

* ``This product includes software developed by the University of
California,

* Lawrence Berkeley Laboratory and its contributors." Neither the
name of

* the University nor the names of its contributors may be used to
endorse

* or promote products derived from this software without specific prior
* written permission.

* THIS SOFTWARE IS PROVIDED ``AS IS" AND WITHOUT ANY
EXPRESS OR IMPLIED

* WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED
WARRANTIES OF

* MERCHANTABILITY AND FITNESS FOR A PARTICULAR
PURPOSE.

*

	<p>* Support for splitting captures into multiple files with a maximum * file size: * * Copyright (c) 2001 * Seth Webster <swebster@sst.ll.mit.edu> */</p>
trace-cmd	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. The applications are licensed under the GNU General Public License 2.0 (see COPYING) and the libraries are licensed under the GNU Lesser General Public License 2.1 (See COPYING.LIB).</p>
ubi-utils	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. /* * Copyright (c) International Business Machines Corp., 2006 * * This program is free software; you can redistribute it and/or modify * it under the terms of the GNU General Public License as published by * the Free Software Foundation; either version 2 of the License, or * (at your option) any later version. * * This program is distributed in the hope that it will be useful, * but WITHOUT ANY WARRANTY; without even the implied warranty of * MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See * the GNU General Public License for more details. * * You should have received a copy of the GNU General Public License * along with this program; if not, write to the Free Software * Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA. */</p>

```

/*
 * An utility to create UBI volumes.
 *
 * Authors: Artem Bityutskiy <dedekind@infradead.org>
 *          Frank Haverkamp <haver@vnet.ibm.com>
 */

```

Copyright (c) 2000-2007 by Nicolas Devillard.
MIT License

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

uClibc-ng

GNU LESSER GENERAL PUBLIC LICENSE Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.
51 Franklin St, Fifth Floor, Boston, MA 02110-1301 USA
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

wget

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
51 Franklin St, Fifth Floor, Boston, MA 02110-1301

USA

Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

/* Miscellaneous declarations.

Copyright (C) 1995, 1996, 1997, 1998, 2003 Free Software
Foundation, Inc.

This file is part of GNU Wget.

GNU Wget is free software; you can redistribute it and/or modify
it under the terms of the GNU General Public License as published by
the Free Software Foundation; either version 2 of the License, or
(at your option) any later version.

GNU Wget is distributed in the hope that it will be useful,
but WITHOUT ANY WARRANTY; without even the implied warranty of
MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

See the

GNU General Public License for more details.

You should have received a copy of the GNU General Public License
along with Wget; if not, write to the Free Software
Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA.

In addition, as a special exception, the Free Software Foundation
gives permission to link the code of its release of Wget with the
OpenSSL project's "OpenSSL" library (or with modified versions of it
that use the same license as the "OpenSSL" library), and distribute
the linked executables. You must obey the GNU General Public
License

in all respects for all of the code used other than "OpenSSL". If you
modify this file, you may extend this exception to your version of the
file, but you are not obligated to do so. If you do not wish to do
so, delete this exception statement from your version. */

wireless_tools.29

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

	<p>Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
xtables-addons	<p>GNU GENERAL PUBLIC LICENSE Version 2, June 1991</p> <p>Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.</p>
zlib	<p>/* zlib.h -- interface of the 'zlib' general purpose compression library version 1.2.8, April 28th, 2013</p> <p>Copyright (C) 1995-2013 Jean-loup Gailly and Mark Adler</p> <p>This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.</p> <p>Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:</p> <ol style="list-style-type: none"> 1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required. 2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software. 3. This notice may not be removed or altered from any source distribution. <p>Jean-loup Gailly Mark Adler jloup@gzip.org madler@alumni.caltech.edu</p> <p>The data format used by the zlib library is described by RFCs (Request for Comments) 1950 to 1952 in the files http://tools.ietf.org/html/rfc1950 (zlib format), rfc1951 (deflate format) and rfc1952 (gzip format).</p> <p>*/</p>

Hardware warranty

Cambium's standard hardware warranty is for one (3) years from date of shipment from Cambium Networks or a Cambium Point-To-Multipoint Distributor. Cambium Networks warrants that hardware will conform to the relevant published specifications and will be free from material defects in material and workmanship under normal use and service. Cambium Networks shall within this time, at its own option, either repair or replace the defective product within thirty (30) days of receipt of the defective product. Repaired or replaced product will be subject to the original warranty period but not less than thirty (30) days.

Limit of liability

IN NO EVENT SHALL CAMBIUM NETWORKS BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGE ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION OR ANY OTHER PECUNIARY LOSS, OR FROM ANY BREACH OF WARRANTY, EVEN IF CAMBIUM NETWORKS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.) IN NO CASE SHALL CAMBIUM'S LIABILITY EXCEED THE AMOUNT YOU PAID FOR THE PRODUCT.

System threshold, output power and link loss

For up-to-date data, please refer to:

- [LINKPlanner](#)

Compliance with safety standards

This section lists the safety specifications against which the cnVision has been tested and certified. It also describes how to keep RF exposure within safe limits.

Electrical safety compliance

The cnVision hardware has been tested for compliance to the electrical safety specifications listed in [Table 62](#).

Table 8-1 cnVision safety compliance specifications

Region	Standard
USA	UL 60950-1, 2 nd Edition
Canada	CSA C22.2 No.60950 2 nd Edition
International	International CB certified and certified to IEC 60950-1:2005 (modified) plus EN60950-1:2006 + A1:2010

Electromagnetic compatibility (EMC) compliance

The cnVision complies with European EMC Specification EN301 489-1 with testing carried out to the detailed requirements of EN301 489-4.

The EMC specification type approvals that have been granted for cnVision are listed under [Table 63](#).

Table 8-2 EMC emissions compliance

Region	Specification (Type Approvals)
USA	FCC CFR 47 Part 15 class B
Canada	RSS210, Issue 8 RSS247, Issue 1 (May 2015)
Europe	ETSI EN301 489-4

Human exposure to radio frequency energy

Standards

Relevant standards (USA and EC) applicable when working with RF equipment are:

- ANSI IEEE C95.1-1991, IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- Council recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0 Hz to 300 GHz) (1999/519/EC) and respective national regulations.
- *Directive 2004/40/EC of the European Parliament and of the Council of 29 April 2004 on the minimum health and safety requirements regarding the exposure of workers to the risks arising from physical agents (electromagnetic fields) (18th individual Directive within the meaning of Article 16(1) of Directive 89/391/EEC).*
- US FCC limits for the general population. See the FCC web site <http://www.fcc.gov> and the policies, guidelines, and requirements in Part 1 of Title 47 of the Code of Federal Regulations, as well as the guidelines and suggestions for evaluating compliance in FCC OET Bulletin 65.
- Health Canada limits for the general population. See the Health Canada web site http://www.hc-sc.gc.ca/ewh-semt/pubs/radiation/99ehd-dhm237/limits-limités_e.html and Safety Code 6.
- EN 50383:2016 Basic standard for the calculation and measurement of electromagnetic field strength and SAR related to human exposure from radio base Clients and fixed terminal Clients for wireless telecommunication systems (110 MHz - 40 GHz).
- BS EN 50385:2017 Product standard to demonstrate the compliances of radio base Clients and fixed terminal Clients for wireless telecommunication systems with the basic restrictions or the reference levels related to human exposure to radio frequency electromagnetic fields (110 MHz - 40 GHz) - general public.
- ICNIRP (International Commission on Non-Ionizing Radiation Protection) guidelines for the general public. See the ICNIRP web site <http://www.icnirp.de/> and Guidelines for Limiting Exposure to Time-Varying Electric, Magnetic, and Electromagnetic Fields.

Power density exposure limit

Install the radios for the cnVision family of PMP wireless solutions so as to provide and maintain the minimum separation distances from all persons.

The applicable power density exposure limit from the standards (see [Human exposure to radio frequency energy](#) on page 272) is:

- **10 W/m²** for RF energy in the 5 GHz frequency band.

Calculation of power density

Peak power density in the far field of a radio frequency point source is calculated as follows:



Note The following calculation is based on the ANSI IEEE C95.1-1991 method, as that provides a worst case analysis. Details of the assessment to EN50383:2002 can be provided, if required.

$$S = \frac{P \cdot G}{4\pi d^2}$$

Where:

Is:

S	power density in W/m ²
P	maximum average transmit power capability of the radio, in W
G	total Tx gain as a factor, converted from dB
d	distance from point source, in m

Rearranging terms to solve for distance yields:

$$d = \sqrt{\frac{P \cdot G}{4\pi \cdot S}}$$

Calculated distances and power compliance margins

The calculated minimum separation distances, recommended distances and resulting margins for each frequency band and antenna combination is shown in the tables below. These are conservative distances that include compliance margins. At these and greater separation distances, the power density from the RF field is below generally accepted limits for the general population.

Explanation of terms used:

Tx burst – maximum average transmit power in burst (Watt)

P – maximum average transmit power capability of the radio (Watt)

G – total transmit gain as a factor, converted from dB

S – power density (W/m²)

d – minimum distance from point source (meters)

R – recommended distances (meters)

Table 64 through Table 69 below list the power compliance margins for the following cnVision HUB FLEXr Hub devices:

Part Number	FCC ID	Industry Canada
C058910A102A	Z8H89FT0024	109W-0024
C050910A104A		

Table 8-3 cnVision HUB FLEXr Hub Power compliance margins, 5.1 GHz, FCC

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
AP	20 MHz	Sector, 18 dBi	0.031	63	10	0.12	0.3
AP	80 MHz	Sector, 18 dBi	0.018	63	10	0.09	0.1

Table 8-4 cnVision HUB FLEXr Hub Power compliance margins, 5.8 GHz, FCC

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
AP	20 MHz	Sector, 18 dBi	0.062	63	10	0.18	0.3
AP	80 MHz	Sector, 18 dBi	0.017	63	10	0.09	0.1

Table 8-5 cnVision HUB FLEXr Hub Power compliance margins, 5.8 GHz, ISEDC

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)	S @ 20 cm (W/m ²)
AP	20 MHz	Sector, 18 dBi	0.062	63	9.69	0.18	0.3	7.72
AP	80 MHz	Sector, 18 dBi	0.017	63	9.69	0.10	0.3	2.20



Note Gain of antenna in dBi = $10 \cdot \log(G)$.

The regulations require that the power used for the calculations is the maximum power in the transmit burst subject to allowance for source-based time-averaging.

At EU 5.8 GHz the products are generally limited to a fixed EIRP which can be achieved with the Integrated Antenna. The calculations above assume that the maximum EIRP allowed by the regulations is being transmitted.

Table 8-6 cnVision HUB FLEXr Hub Power compliance margins, 5.8 GHz (EIRP 36 dBm)

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
AP	20 MHz	Sector, 18 dBi	0.063	63	10	0.18	0.3
AP	80 MHz	Sector, 18 dBi	0.063	63	10	0.18	0.3



Note If there are no EIRP limits in the country of installation, use the distance calculations in [Table 68](#) and [Table 69](#).

Table 8-7 cnVision HUB FLEXr Hub Power compliance margins, 5.1 GHz (full Tx power)

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
AP	20 MHz	Sector, 18 dBi	1.585	63	10	1.41	2.0
AP	80 MHz	Sector, 18 dBi	1.585	63	10	1.41	2.0

Table 8-8 cnVision HUB FLEXr Hub Power compliance margins, 5.8 GHz (full Tx power)

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
-----------	-------------------	---------	----------	---	--------------------------	----------	----------

AP	20 MHz	Sector, 18 dBi	1.585	63	10	1.41	2.0
AP	80 MHz	Sector, 18 dBi	1.585	63	10	1.41	2.0

Table 8-9 cnVision Client MINI Power compliance margins, 5.1 GHz, FCC

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
PTP SM	20 MHz	Patch Array, 16 dBi	0.021	40	10	0.08	0.1
PTP SM	80 MHz	Patch Array, 16 dBi	0.013	40	10	0.06	0.1
PTP SM	20 MHz	On-board, 2 dBi	0.678	2	10	0.09	0.1
PTP SM	80 MHz	On-board, 2 dBi	0.089	2	10	0.03	0.1

Table 8-10 cnVision Client MINI Power compliance margins, 5.8 GHz, FCC

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
PTP SM	20 MHz	Patch Array, 16 dBi	0.830	40	10	0.51	0.7
PTP SM	80 MHz	Patch Array, 16 dBi	0.1	40	10	0.18	0.3
PTP SM	20 MHz	On-board, 2 dBi	0.830	2	10	0.11	0.3
PTP SM	80 MHz	On-board, 2 dBi	0.389	2	10	0.07	0.1

Table 8-11 cnVision Client MINI Power compliance margins, 5.1 GHz, ISED

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)	S @ 20 cm (W/m ²)
PTP SM	20 MHz	Patch Array, 16 dBi	0.021	40	9.01	0.09	0.1	1.69
PTP SM	80 MHz	Patch Array, 16 dBi	0.013	40	9.01	0.07	0.1	1.02
PTP SM	20 MHz	On-board, 2 dBi	0.678	2	9.01	0.10	0.3	2.14
PTP SM	80 MHz	On-board, 2 dBi	0.089	2	9.01	0.04	0.1	0.28

Table 8-12 cnVision Client MINI Power compliance margins, 5.8 GHz, ISED

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)	S @ 20 cm (W/m ²)
PTP SM	20 MHz	Patch Array, 16 dBi	0.830	40	9.69	0.18	0.3	65.72
PTP SM	80 MHz	Patch Array, 16 dBi	0.1	40	9.69	0.18	0.3	7.92
PTP SM	20 MHz	On-board, 2 dBi	0.830	2	9.69	0.10	0.2	2.62
PTP SM	80 MHz	On-board, 2 dBi	0.389	2	9.69	0.07	0.1	1.23



Note Gain of antenna in dBi = $10 \cdot \log(G)$.

The regulations require that the power used for the calculations is the maximum power in the transmit burst subject to allowance for source-based time-averaging.

At EU 5.8 GHz the products are generally limited to a fixed EIRP which can be achieved with the Integrated Antenna. The calculations above assume that the maximum EIRP allowed by the regulations is being transmitted.

Table 8-13 cnVision Client MINI Power compliance margins, 5.8 GHz (EIRP 36 dBm)

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
PTP SM	20 MHz	Patch Array, 16 dBi	0.1	40	10	0.18	0.3
PTP SM	80 MHz	Patch Array, 16 dBi	0.1	40	10	0.18	0.3



Note If there are no EIRP limits in the country of installation, use the distance calculations in [Table 82](#) and [Table 83](#).

Table 8-14 cnVision Client MINI Power compliance margins, 5.1 GHz (full Tx power)

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
PTP SM	20 MHz	Patch Array, 16 dBi	0.794	40	10	0.5	1.0
PTP SM	80 MHz	Patch Array, 16 dBi	0.794	40	10	0.5	1.0

Table 8-15 cnVision Client MINI Power compliance margins, 5.8 GHz (full Tx power)

Conn Type	Channel Bandwidth	Antenna	P (W)	G	S (W/m ²)	d (m)	R (m)
PTP SM	20 MHz	Patch Array, 16 dBi	0.794	40	10	0.5	1.0
PTP SM	80 MHz	Patch Array, 16 dBi	0.794	40	10	0.5	1.0

Compliance with radio regulations

This section describes how the cnVision complies with the radio regulations that are enforced in various countries.



Attention Changes or modifications not expressly approved by Cambium Networks could void the user's authority to operate the system.

Type approvals

This system has achieved Type Approval in various countries around the world. This means that the system has been tested against various local technical regulations and found to comply. The frequency bands in which the system operates may be unlicensed and, in these bands, the system can be used provided it does not cause interference. The system is not guaranteed protection against interference from other products and installations.

The radio specification type approvals that have been granted for cnVision frequency variants are listed under [Table 8-1](#).

Table 8-16 cnVision Radio certifications

Frequency band	Region	Regulatory approvals
5 GHz	USA	FCC Part 15 Class B
	Canada	IC RSS-210 Issue 8, Annex 8 (or latest)
		IC RSS247 Issue 1 (May 2015)
	Europe	ETSI EN302 502 v1.2.1 ETSI EN301 893 v1.7.1

FCC and ETSI compliance testing

The system has been tested for compliance to both US (FCC) and European (ETSI) specifications. It has been shown to comply with the limits for emitted spurious radiation for a Class B digital device, pursuant to Part 15 of the FCC Rules in the USA and appropriate European ENs. These limits have been designed to provide reasonable protection against harmful interference. However the equipment can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to other radio communications. There is no guarantee that interference will not occur in a particular installation. To comply with FCC RF exposure limits for general population or uncontrolled exposure, the antenna(s) used for the cnVision transmitter must be installed to ensure a separation distance specified in Table 64 through Table 83 from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

OEM Responsibilities to comply with FCC and Industry Canada Regulations

The cnVision Module is certified for integration into products only by OEM integrators under the following conditions:

1. The antenna(s) must be installed such that a minimum separation distance specified in Table 64 through Table 83 is maintained between the radiator (antenna) and all persons at all times.
2. The transmitter module must not be co-located or operate in conjunction with any other antenna or transmitter. As long as the two conditions above are met, further transmitter testing is not required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).



Note In the event that these conditions cannot be met (for certain configurations or co-location with another transmitter), then the FCC and Industry Canada authorizations are no longer considered valid and the FCC ID cannot be used.



Note A Class B Digital Device is a device that is marketed for use in a residential environment, notwithstanding use in commercial, business and industrial environments. Notwithstanding that Cambium Networks has designed (and qualified) the cnVision products to generally meet the Class B requirement to minimize the potential for interference, the cnVision product range is not marketed for use in a residential environment.

End Product Labelling

The cnVision Module is labeled with its own FCC ID and IC Certification Number. If the FCC ID and IC Certification Number are not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. In that case, the final end product must be labeled in a visible area with the following:

Table 8-17-2 cnVision Product labeling

Device	Label
cnVision Hub Hub	“Contains Transmitter Module FCC ID: Z8H89FT0024” or “Contains FCC ID: Z8H89FT0024”
cnVision Client MINI	“Contains Transmitter Module FCC ID: Z8H89FT0016” or “Contains FCC ID: Z8H89FT0016”

Notifications

This section contains notifications of compliance with the radio regulations that are encnVisiond in various regions.

5.1 GHz regulatory compliance

The cnVision complies with the regulations that are encnVisiond in the USA, Canada and Europe. The relevant notifications are specified in this section.

5.1 GHz FCC and IC notification

U.S. Federal Communication Commission (FCC) and Industry Canada (IC) Notification.

This device complies with part 15.407 of the US FCC Rules and Regulations and with RSS-210 Issue 8 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. In Canada, users must be cautioned to take note that high power radars are allocated as primary users (meaning they have priority) of 5250 – 5350 MHz and 5470 – 5725 MHz and these radars could cause interference and/or damage to license-exempt local area networks (LELAN). To comply with FCC/IC RF exposure limits for general population or uncontrolled exposure, the antenna(s) used for the cnVision transmitter must be installed at a separation distance specified in Table 64 through Table 83.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the US FCC Rules and with RSS-210 of Industry Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with these instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to correct the interference by one or more of the following measures:

- Increase the separation between the affected equipment and the unit;
- Connect the affected equipment to a power outlet on a different circuit from that which the receiver is connected to;
- Consult the dealer and/or experienced radio/TV technician for help.

FCC IDs and Industry Canada Certification Numbers are reproduced on the product label ([Figure 8-1](#)).


End Product Labelling

The cnVision Module is labeled with its own FCC ID and IC Certification Number. If the FCC ID and IC Certification Number are not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. In that case, the final end product must be labeled in a visible area with the following:

Table 8-18 Product labeling

Device	Label
cnVision HUB FLEXr Hub	“Contains Transmitter Module FCC ID: Z8H89FT0047” or “Contains FCC ID: Z8H89FT0047”
cnVision HUB 360r	“Contains Transmitter Module FCC ID: Z8H89FT0051” or “Contains FCC ID: Z8H89FT0051”
cnVision CLIENT MAXr	“Contains Transmitter Module FCC ID: Z8H89FT0048” or “Contains FCC ID: Z8H89FT0048”
cnVision CLIENT MINI	“Contains Transmitter Module FCC ID: Z8H89FT0016” or “Contains FCC ID: Z8H89FT0016”
cnVision CLIENT MICRO	“Contains Transmitter Module FCC ID: Z8H89FT0048” or “Contains FCC ID: Z8H89FT0048”

Figure 1 FCC and IC certifications on 5 GHz product labels

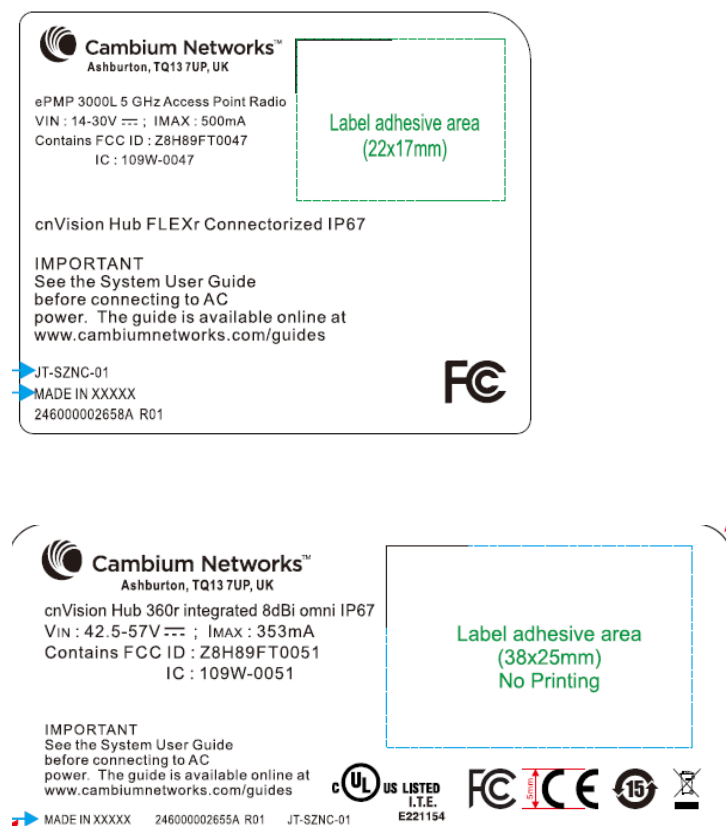

Cambium Networks™
Ashburton, TQ13 7UP, UK.

cnVision Client MAXr 19 dBi IP67
Vin: 14V-30V --- ;Imax: 500mA
Contains FCC ID: Z8H89FT0048
Contains IC: 109W-0048

15 **FCC**

IMPORTANT
See the System User Guide before connecting to AC power. The guide is available online at www.cambiumnetworks.com/guides

MODEL NO/HVIN: C058900P901A
PART NO: CV-C19RPUSA-US
MSN: E6YM00000000X
ESN: 0004564XXXXX
Wireless MAC: 0004564XXXXX

UL **US LISTED**
I.T.E.
E221154

Factory ID: cs001
MADE IN CHINA

Cambium Networks™
Ashburton, TQ13 7UP, UK

5GHz Force 300-16
VIN : 14-30V --- ; IMAX : 500mA
Contains FCC ID : Z8H89FT0016
IC : 109W-0016

Label adhesive area
(22x17mm)

cnVision Client MINI 16 dBi IP55

IMPORTANT
See the System User Guide before connecting to AC power. The guide is available online at www.cambiumnetworks.com/guides

JT-SZNC-01
MADE IN XXXXX
246000002661A R01

UL **US LISTED**
I.T.E.
E221154

FCC

Cambium Networks™
Ashburton, TQ13 7UP, UK.

cnVision Client MICRO 13 dBi IP55
Vin: 14V-30V --- ;Imax: 500mA
Contains FCC ID: Z8H89FT0048
Contains IC: 109W-0048

15 **FCC**

IMPORTANT
See the System User Guide before connecting to AC power. The guide is available online at www.cambiumnetworks.com/guides

MODEL NO/HVIN: C058900P701A
PART NO: CV-D13SPUSA-US
MSN: E6YM00000000X
ESN: 0004564XXXXX
Wireless MAC: 0004564XXXXX

UL **US LISTED**
I.T.E.
E221154

Factory ID: cs001
MADE IN CHINA

Wherever necessary, the end user is responsible for obtaining any National licenses required to operate this product and these must be obtained before using the product in any particular country. Contact the appropriate national administrations for details on the conditions of use for the bands in question and any exceptions that might apply.

5.8 GHz regulatory compliance

This system has achieved Type Approval in various countries around the world. This means that the system has been tested against various local technical regulations and found to comply. The frequency band in which the system operates is “license exempt” and the system is allowed to be used provided it does not cause interference. The licensing authority does not guarantee protection against interference from other products and installations.

U.S. Federal Communication Commission (FCC)

This device complies with part 15 of the US FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the US FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with these instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to correct the interference by one or more of the following measures:

- Increase the separation between the affected equipment and the unit;
- Connect the affected equipment to a power outlet on a different circuit from that which the receiver is connected to;
- Consult the dealer and/or experienced radio/TV technician for help.

Industry Canada (IC)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B conforme à la norme NMB-003 du Canada.

RSS-GEN issue 3 (7.1.3) Licence-Exempt Radio Apparatus:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

In Canada, high power radars are allocated as primary users (meaning they have priority) of the 5650 – 5850 MHz spectrum. These radars could cause interference or damage to license-exempt local area network (LE-LAN) devices.

Product labels

FCC IDs and Industry Canada Certification Numbers are reproduced on the product label ([Figure 41](#)).

Figure 2 FCC and IC certifications on 5.8 GHz product label

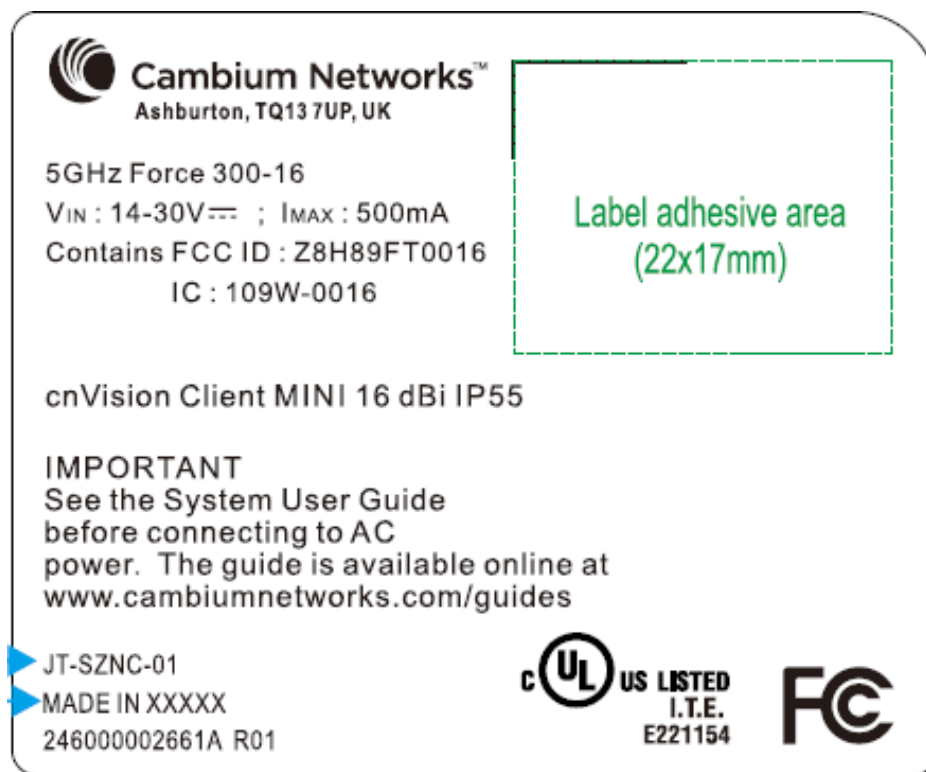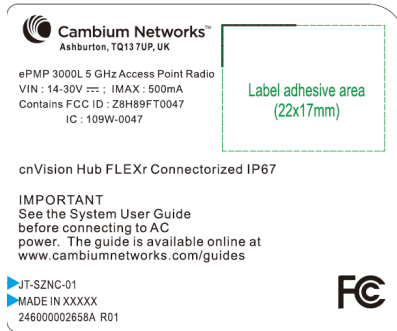

Wherever necessary, the end user is responsible for obtaining any National licenses required to operate this product and these must be obtained before using the product in any particular country. Contact the appropriate national administrations for details on the conditions of use for the bands in question and any exceptions that might apply.

Product Specifications

Product Specifications



For up-to-date performance and mechanical specifications for cnVision products, please visit:

<https://www.cambiumnetworks.com/cnVision>

Glossary

Term	Definition
AES	Advanced Encryption Standard
ANSI	American National Standards Institute
CINR	Carrier to Interference plus Noise Ratio
CMM	Cluster Management Module
DFS	Dynamic Frequency Selection
EIRP	Equivalent Isotropically Radiated Power
EMC	Electromagnetic Compatibility
EMD	Electromagnetic Discharge
ETH	Ethernet
ETSI	European Telecommunications Standards Institute
FCC	Federal Communications Commission
FEC	Forward Error Correction
GUI	Graphical User Interface
HTTP	Hypertext Transfer Protocol
IC	Industry Canada
IEEE	Institute of Electrical and Electronics Engineers
IP	Internet Protocol
LAN	Local Area Network
LED	Light Emitting Diode
LOS	Line of Sight
MIMO	Multiple In Multiple Out
MU-MIMO	Multi-User Multiple In Multiple Out
MTU	Maximum Transmission Unit
nLOS	Near Line of Sight

NTP	Network Time Protocol
OFDM	Orthogonal Frequency Division Multiplexing
PC	Personal Computer
PMP	Point to Multipoint
PTP	Point to Point
QAM	Quadrature Amplitude Modulation
QPSK	Quadrature Phase Shift Keyed
RF	Radio Frequency
RMA	Return Merchandise Authorization
RSSI	Received Signal Strength Indication
RTTT	Road Transport and Traffic Telematics
RX	Receive
SAR	Standard Absorption Rate
SNMP	Simple Network Management Protocol
SW	Software
TDD	Time Division Duplex
TDWR	Terminal Doppler Weather Radar
TX	Transmit
UNII	Unlicensed National Information Infrastructure
URL	Uniform Resource Locator